

Rif./Ref.	Codice/Code	Sigla /Features	Descrizione/Description
+ 1	SL2924		Knob
2	SL2528		Shaft
+ 3	SL2917		Tap
4	SL2526		Calotte
5	SL2591	ø25xø47x7	Oil seal
6	SL3125	6204 2RS	Bearing
7	SL0082	ø47	Seeger
8	SL2593	ø20xø47x7	Oil seal
9	SL0130		Gear
10	SA2500	Assembly	Calotte
11	SL0125		Gear
12	SL2589		Shaft
13	SA1016	400V/3Ph/50Hz	Stator
13	SA1017	230V/1Ph/50Hz	Stator
14	SL0128		Gear
15	SL0127	ø17xø40x7	Oil seal
16	SL0131	6203 2RS	Bearing
17	SL2598	400V/3Ph/50Hz	Rotor
17	SL2599	230V/1Ph/50Hz	Rotor
18	SL0121	ø5x10	Pin
19	SL0119	ø52	Seeger
20	SL0118	6205 2RS	Bearing
21	SL0117		Calotte
22	SL1841	3Ph+Gnd	Electric cable
22	SL1671	1Ph+N+Gnd	Electric cable
23	SL1668	PG11	Cable clamp
+ 24	SL0106		Grip
25	SA1113		Lever press
26	SL3140		Washer
27	SL3138		Covering
+ 28	SL0885		Microswitch
29	SL0258		Stud

+ : ricambio consigliato / spare part suggested

Rif./Ref.	Codice/Code	Sigla /Features	Descrizione/Description
30	SL0108		Nut
31	SL2833		Cover
32	SL2573		Tap
33	SA1012	Assembly	Casing
34	SA2800		Roller
35	SL0174		Container
36	SL2988		Base
+ 37	SL0134		Pusher
38	SL0136		Hopper
39	SL3986	Stainless-steel	Sleeve
39	SL2523R0	Food stuff treated cast-iron (without CE norms)	Sleeve
39	SL3987	Unger	Sleeve
40	SL0180		Container
+ 41	SA5500	Stainless-steel	Screw shaft
41	SA5400	Food stuff treated cast-iron (without CE norms)	Screw shaft
41	SA5700	Unger	Screw shaft
42	SL0823		Pivot
42	SL0824	Unger	Pivot
+ 43	//////////		Cutter
+ 44	//////////		Plate
45	SL0197	Stainless-steel	Handwheel
45	SL3328R0	Aluminium (without CE norms)	Handwheel
+ 46	SL0891	Start-stop	Push button
47	SL0177	16µF	Condenser
48	SL0176		Bracket
+ 49	SL0883		Electronic card
50	SL2651		Bottom
51	SL0235		Foot
52	SL0054		Switch
53	SA1119	Assembly - 15/05/05 f.p.(*)	Casing

vsezip.ru

+7(812)987-08-81

