


CU1526, CU2026, CU3030 Service Parts

Зип Общепит CU1526 and CU2026 Cabinet

vsezip.ru

+7(812)987-08-81

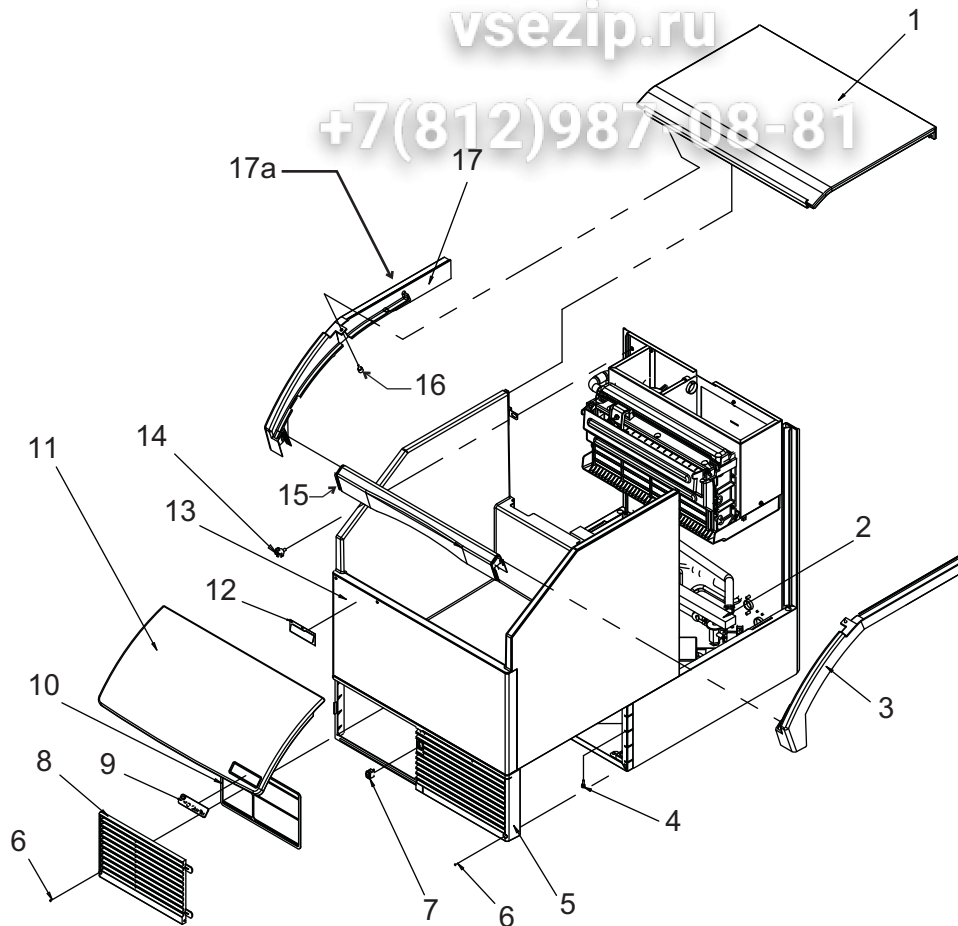

Item Number	Part Number	Description
1	A39132-001	Top panel
2	19-0655-01	Gasket
3	02-4310-04	Right rail, 26" model
4	03-0727-10	Thumb screw
5	02-4304-01	Right grill & frame, 26" model
6	03-1404-12	Screw
7	12-2991-01	On/Off switch
8	02-4304-02	Left grill, 26" model
9	15-0825-01	Emblem
10	02-4308-01	Air filter (AC only)
11	02-4306-20	Door, 26" model
12	15-0824-01	Prodigy logo
13	A39120-021	Bin assembly, includes items 3, 12, 15, 17
14	03-1675-02	3 prong head screw
15	02-4312-01	Frame front, 26" model
16	03-3892-01	Screw, bin to top
17	02-4310-03	Left rail, 26" model
17a	03-1419-17	Flat head screw for rail

Not Shown

NS1	02-3253-01	Scoop
NS1	KLP7	Legs - set of 4
NS3	16-1150-01	Fitting, water 50 Hz
NS4	03-3901-01	Washer, 50 Hz

Note: Frame rail attachment to bin wall changed late 2008 from adhesive only to screws and adhesive. Screw used is #6 x 5/8 flat head. When replacing frame rail on prior bin, use 1/8" dia drill bit to create mounting holes in top of bin wall.


CU1526, CU2026, CU3030 Service Parts

Зип Общепит

CU1526 and CU2026 Back and Base

vsezip.ru

+7(812)987-08-81

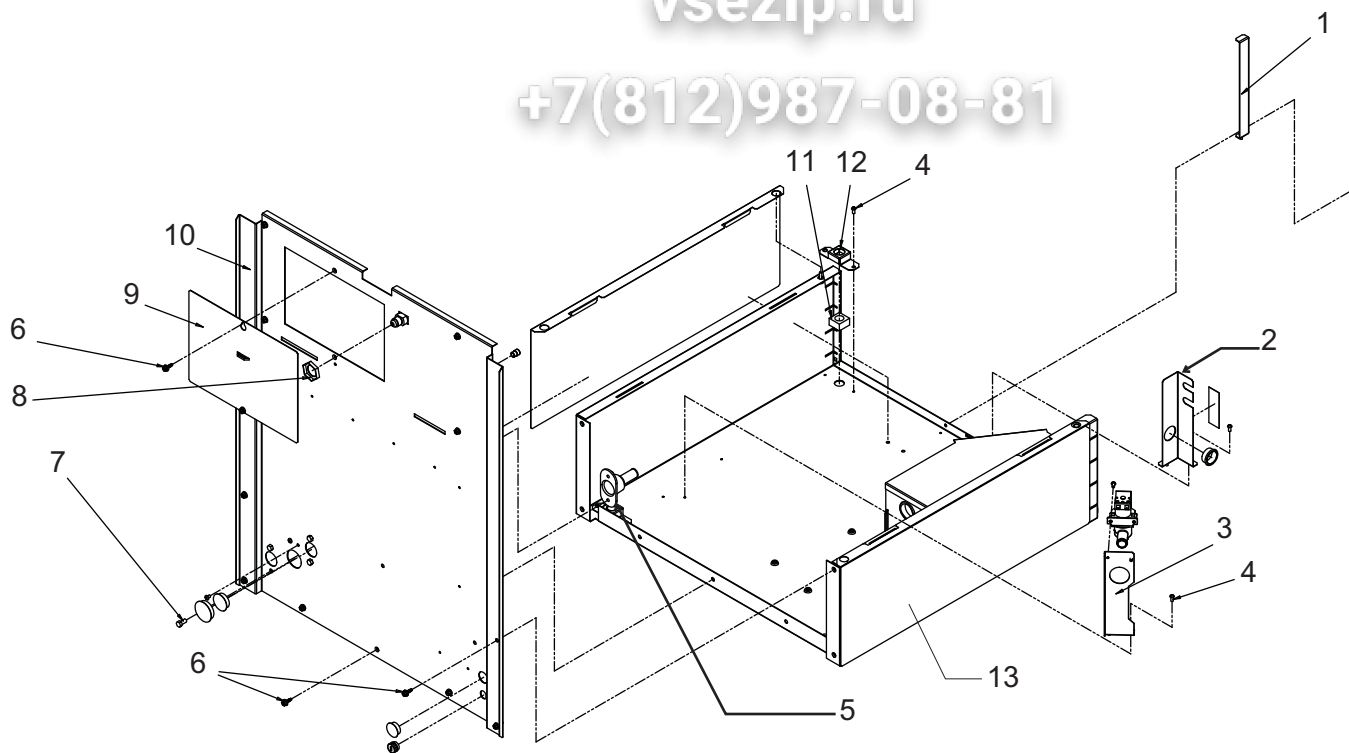


Item Number	Part Number	Description
1	A39145-001	Baffle, AC
2	A39086-001	Bracket, access valves
3	A39092-001	Bracket, purge valve
4	03-1531-01	Screw
5	02-3692-21	Drain fitting
6	03-3868-01	Screw
7	03-0571-00	Screw
8	03-1394-01	Pal nut
9	A39142-001	Service panel
10	A39080-001	Back panel
11	03-1674-01	Nut, leg mounting
12	A39083-001	Bracket, nut
13	A39089-001	Overlay panel, attach with adhesive tape, item 13a, 2 feet
13a	19-0642-02	Adhesive tape, order by foot.

CU1526, CU2026, CU3030 Service Parts

Зип Общепит

CU1526, CU2026 Pump, Float Valve, Water Sensor, Purge Valve

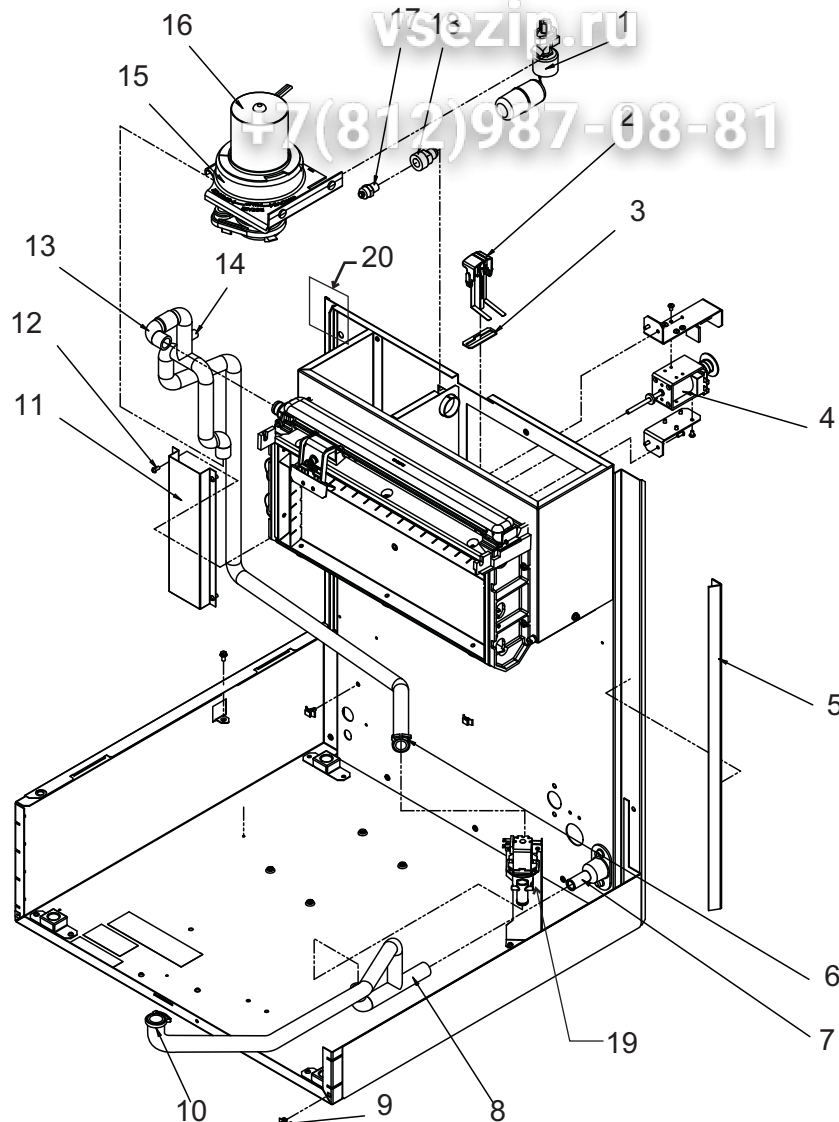


Item Number	Part Number	Description	Item Number	Part Number	Description
1	02-3612-01	Float valve	12	03-1531-01	Screw
1a	13-0895-01	Inlet tubing, order 2, cut to 15"	13	02-4299-01	Pump hose, 26" model
2	A39126-021	Water level sensor	14	11-0515-21	Temp sensor set
3	A39143-001	Spacer	15	02-4318-01	Pump bracket
4	12-3035-21	Harvest assist solenoid, 115 v	16	12-2919-21	Water pump, 115 volt models
	12-3035-22	Harvest assist solenoid, 230 v		12-2919-22	Water pump, 230 volt models
		Includes mounting brackets	17	16-1039-01	Male connector
5	02-4491-01	Gasket, corner	18	16-0835-01	Water inlet fitting, 3/8 flare
6	02-2814-09	Hose clamp	19	11-0564-01	Purge valve, 115 volt models
7	02-3692-21	Drain fitting		11-0564-02	Purge valve, 230 volt models
8	A39144-001	Drain hose, 26" model	20	13-0954-01	Foam pad, 2" x 2"
9	03-3804-01	Screw receptacle			
10	02-2814-10	Hose clamp			
11	A39151-001	Chase cover			


CU1526, CU2026, CU3030 Service Parts
Зип Общепит
CU1526 and CU2026 Air Cooled Refrigeration

vsezip.ru

+7(812)987-08-81

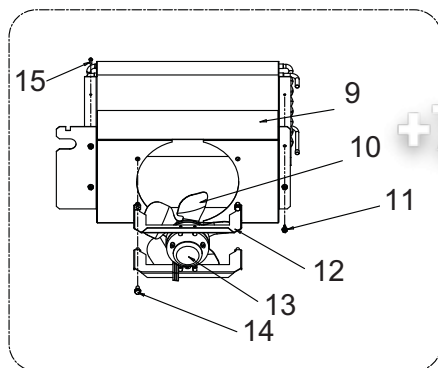

Condenser Fan

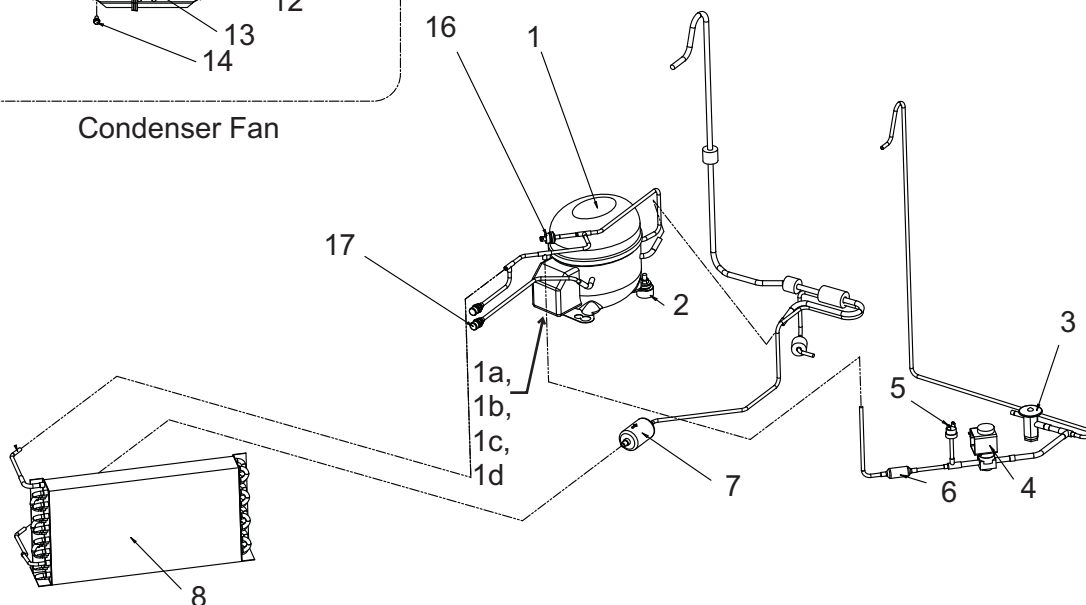


Item Number	Part Number	Description	
1		Compressors*	12-2719-22 Coil only, 230 volt
	18-8932-21	CU1526 115/60	12-2733-30 HGV rebuild kit
1a	18-8932-31	Overload for above	5 11-0566-21 Fan control pressure switch
	18-8932-26	CU1526 230/50	6 16-1063-02 Strainer
1b	18-8932-32	Overload for above	7 02-3319-01 Dryer
	18-8933-21	CU2026 115/60	8 18-8942-01 Condenser
1c	18-8933-31	Overload for above	9 A39084-001 Shroud
	18-8933-22	CU2026, 208-230/60	10 18-8773-01 Fan blade
	18-8933-26	CU2026, 208-230/50	11 03-3868-01 Screw
1d	18-8933-32	Overload for above	12 A39113-001 Bracket, motor
2		Compressor mounting hardware	13 Fan motors
	03-1406-10	Hex nut	12-2989-01 CU1526, 115/60
	03-3900-01	Screw (up thru base)	12-2989-02 CU1526, 230/50
	18-0108-41	Sleeve	12-1681-23 CU2026, 115/60
	18-4700-28	Grommet	12-1681-04 CU2026, 208-230/60-50
	03-1407-07	Washer	14 03-1645-01 Screw
3	16-1117-24	CU1526 thermo exp valve	15 03-1531-01 Screw
	16-1117-25	CU2026 thermo exp valve	16 11-0501-05 Hi pressure cut out
	02-4406-01	Insulation for TXV	17 16-1140-01 Port cap
4	11-0493-04	Hot gas valve, 115/60	16-1139-01 Core
	12-2719-21	Coil only, 115 volt	16-1138-01 Seat
	11-0493-05	Hot gas valve, 230/60-50	

* Compressors include overload, run capacitor, PTCR and dryer.

CU1526, CU2026, CU3030 Service Parts
Зип Общепит
CU1526 and CU2026 Water Cooled Refrigeration

vsezip.ru

+7(812)987-08-81

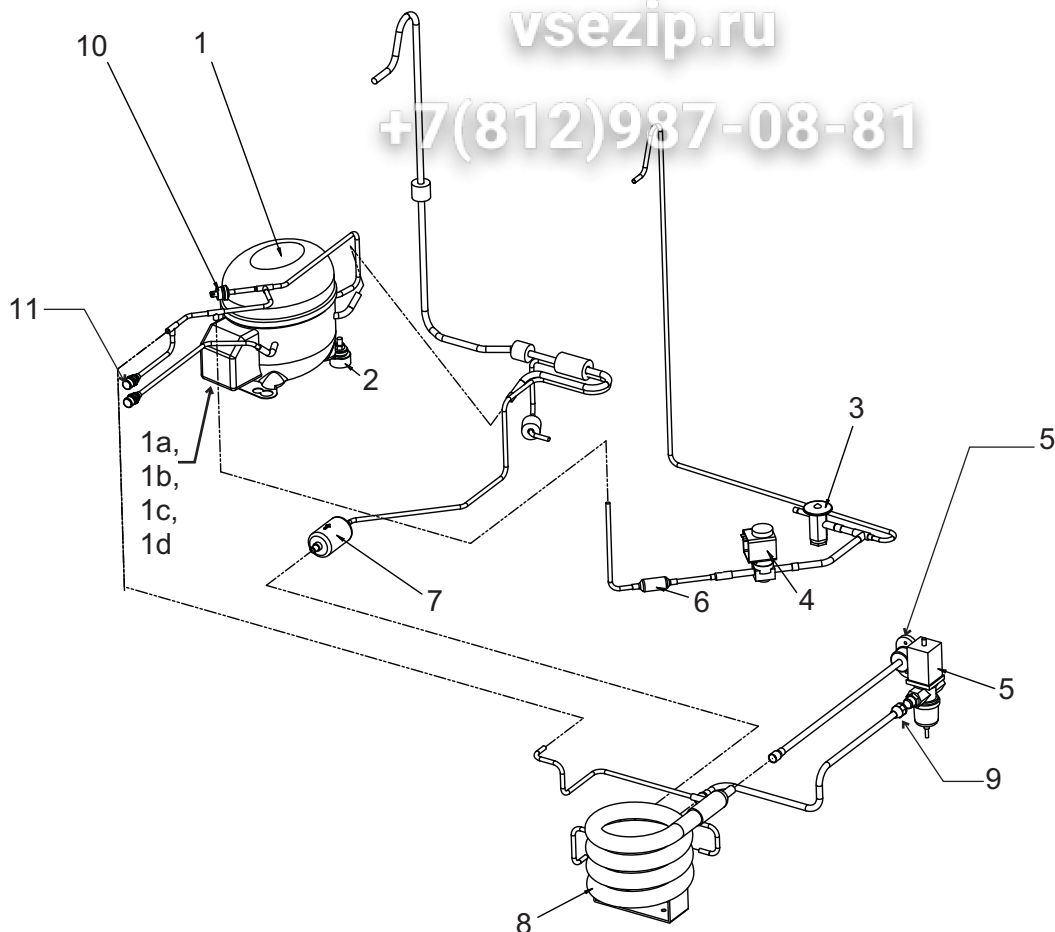

Item Number	Part Number	Description	
1	18-8932-21	CU1526 115/60	Compressors*
1a	18-8932-31	Overload for above	
	18-8932-26	CU1526 230/50	
1b	18-8932-32	Overload for above	
	18-8933-21	CU2026 115/60	
1c	18-8933-31	Overload for above	
	18-8933-22	CU2026, 208-230/60	
	18-8933-26	CU2026, 208-230/50	
1d	18-8933-32	Overload for above	
2	03-1406-10	Hex nut	Compressor mounting hardware
	03-3900-01	Screw (up thru base)	
	18-0108-41	Sleeve	
	18-4700-28	Grommet	
	03-1407-07	Washer	
3	16-1117-24	CU1526 thermo exp valve	
	16-1117-25	CU2026 thermo exp valve	
	02-4406-01	Insulation for TXV	
4	11-0493-04	Hot gas valve, 115/60	
	12-2719-01	Coil only, 115 volt	
	11-0493-05	Hot gas valve, 230/60-50	
	12-2719-02	Coil only, 230 volt	
	12-2733-30	HGV rebuild kit	
5	11-0478-01	Water regulating valve	
6	16-1063-02	Strainer	
7	02-3319-01	Dryer	
8	18-8869-01	Condenser	
9	16-0355-00	Coupling half	
10	11-0501-01	Hi pressure cut out - WC	
11	16-1140-01	Port cap	
	16-1139-01	Core	
	16-1138-01	Seat	

* Compressors include overload, run capacitor, PTCR and dryer.


CU1526, CU2026, CU3030 Service Parts

Зип Общепит

CU1526 and CU2026 Ice Making Area

vsezip.ru

+7(812)987-08-81

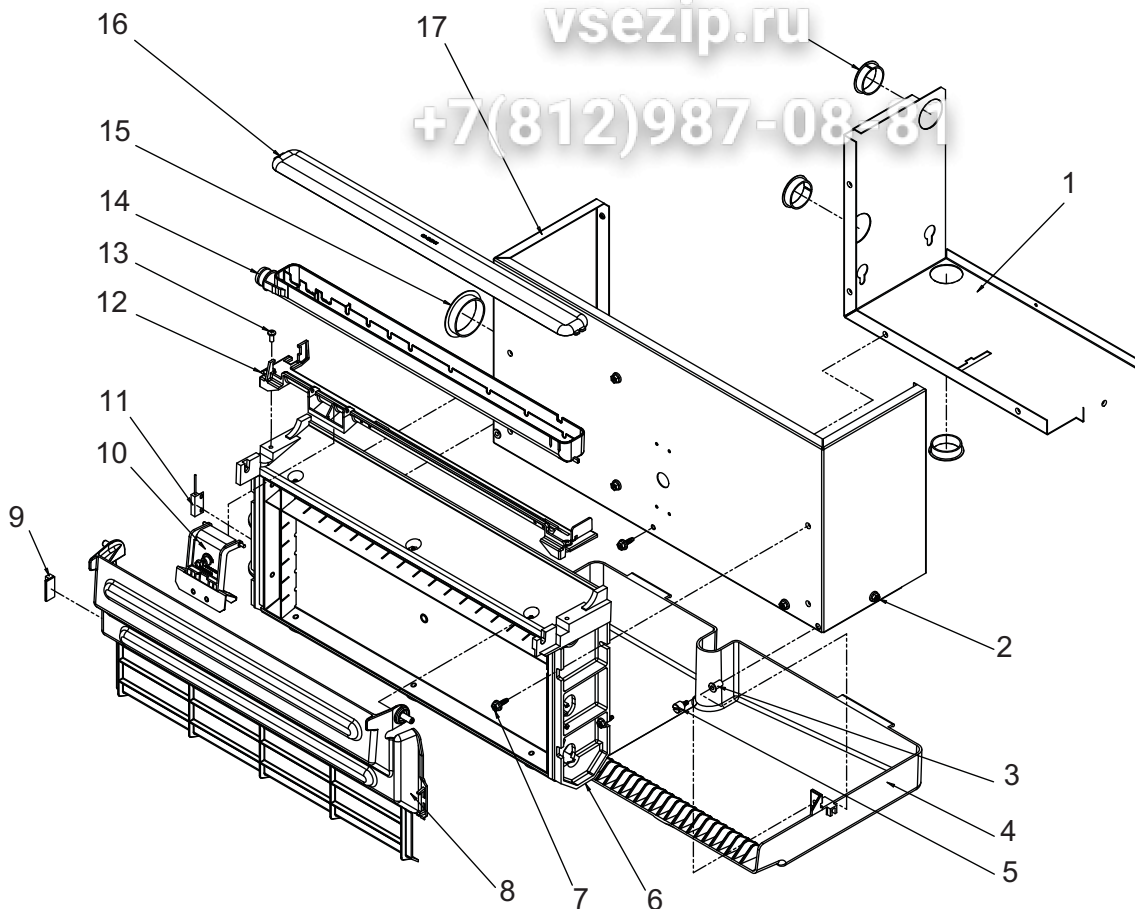

Item Number	Part Number	Description
1	A39090-001	Support
2	03-3868-01	Screw
3	03-1692-01	Insert
4	02-4315-01	Reservoir
5	03-3909-01	Shoulder screw
6	A38626-021	Evaporator, small cube
	A38626-022	Evaporator, med cube
7	03-3868-01	Screw
8	02-4307-01	Curtain - no mag
9	11-0563-05	Magnet
10	A39031-021	Ice thickness sensor
11	11-0563-04	Curtain switch
12	02-4205-01	Mounting bracket
13	03-1403-15	Screw
14	02-4064-01	Water distributor
15	12-1213-15	Snap bushing
16	02-4065-01	Water distributor cover
17	A39091-001	Evaporator mounting bracket


CU1526, CU2026, CU3030 Service Parts

Зип Общепит

CU1526 and CU2026 Electrical

vsezip.ru

+7(812)987-08-81

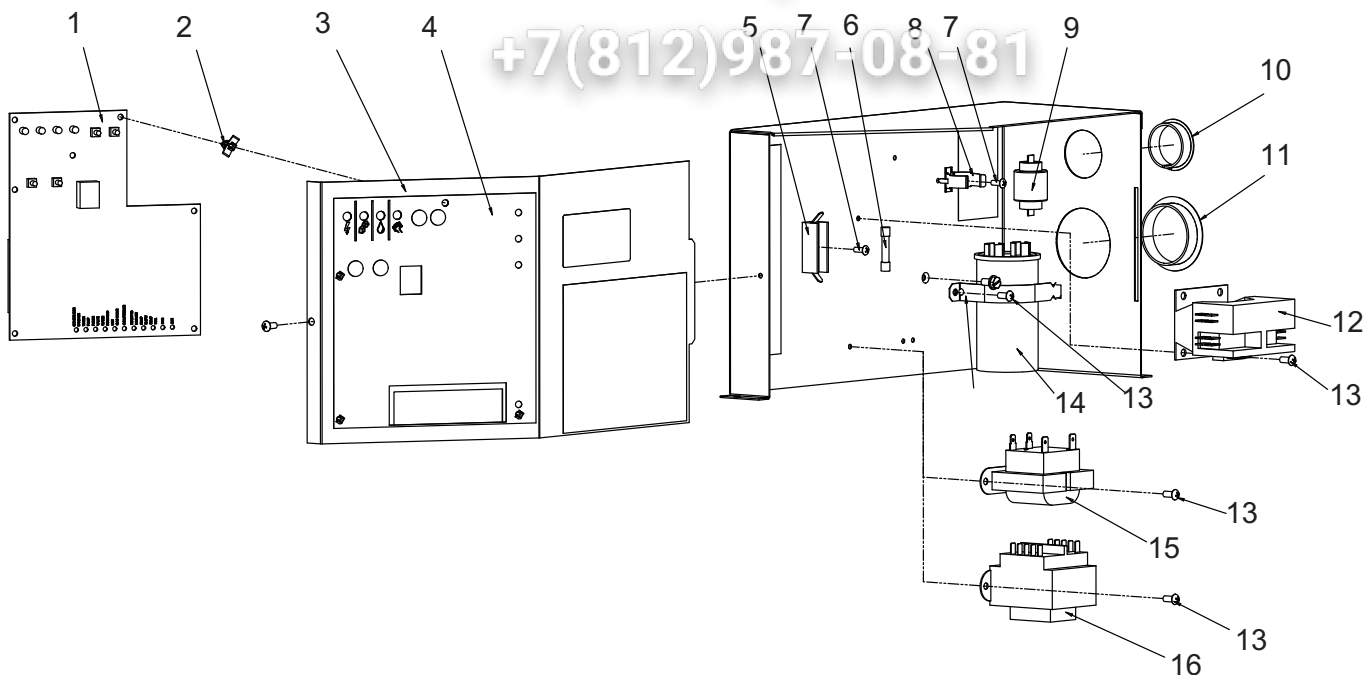

Item Number	Part Number	Description
1	11-0550-27	Controller
2	03-1727-02	Stand off
3	A39081-001	Control box cover
4	02-4302-01	Overlay
5	12-2687-01	Fuse block, 50 Hz only
6	12-2686-01	Fuse, 50 Hz only
7	03-1638-06	Screw
8	18-8835-02	Bracket, PTCR
9	18-8835-01	PTCR
10	12-1213-13	Snap bushing
11	12-1213-15	Snap bushing
12	12-2469-03	Contactor, 115/60
	12-2469-02	Contactor, 230/60-50
13	03-1531-01	Screw
14	18-1902-52	Run capacitor, for all but CU2026-6
	18-8878-01	Run capacitor, CU2026 50 Hz
15	12-2924-01	Transformer, 115 to 12
	12-2924-02	Transformer, 60 Hz, 230 to 12
16	12-2639-01	Transformer, 50 Hz, 230 to 12

Not Shown

NS1	12-2959-01	High voltage harness - 60 Hz
NS2	12-2988-01	High voltage harness - 50 Hz
NS3	12-2931-01	Control power harness - 60 Hz
NS4	12-2944-01	Control power harness - 50 Hz
NS5	12-1638-14	Power cord, 115/60
NS6	12-1638-18	Power cord, 208-230/60
NS7	12-1638-22	Power cord, 230/50
NS8	12-3020-01	Harness, On/Off switch to connector*
NS8A	12-3020-02	Harness, item NS8 to transformer*
NS9	12-2936-01	Fan motor harness

* Early harness was one piece, changed Sept 08 to include a connector. Order both NS8 and NS8A to replace early harness.