


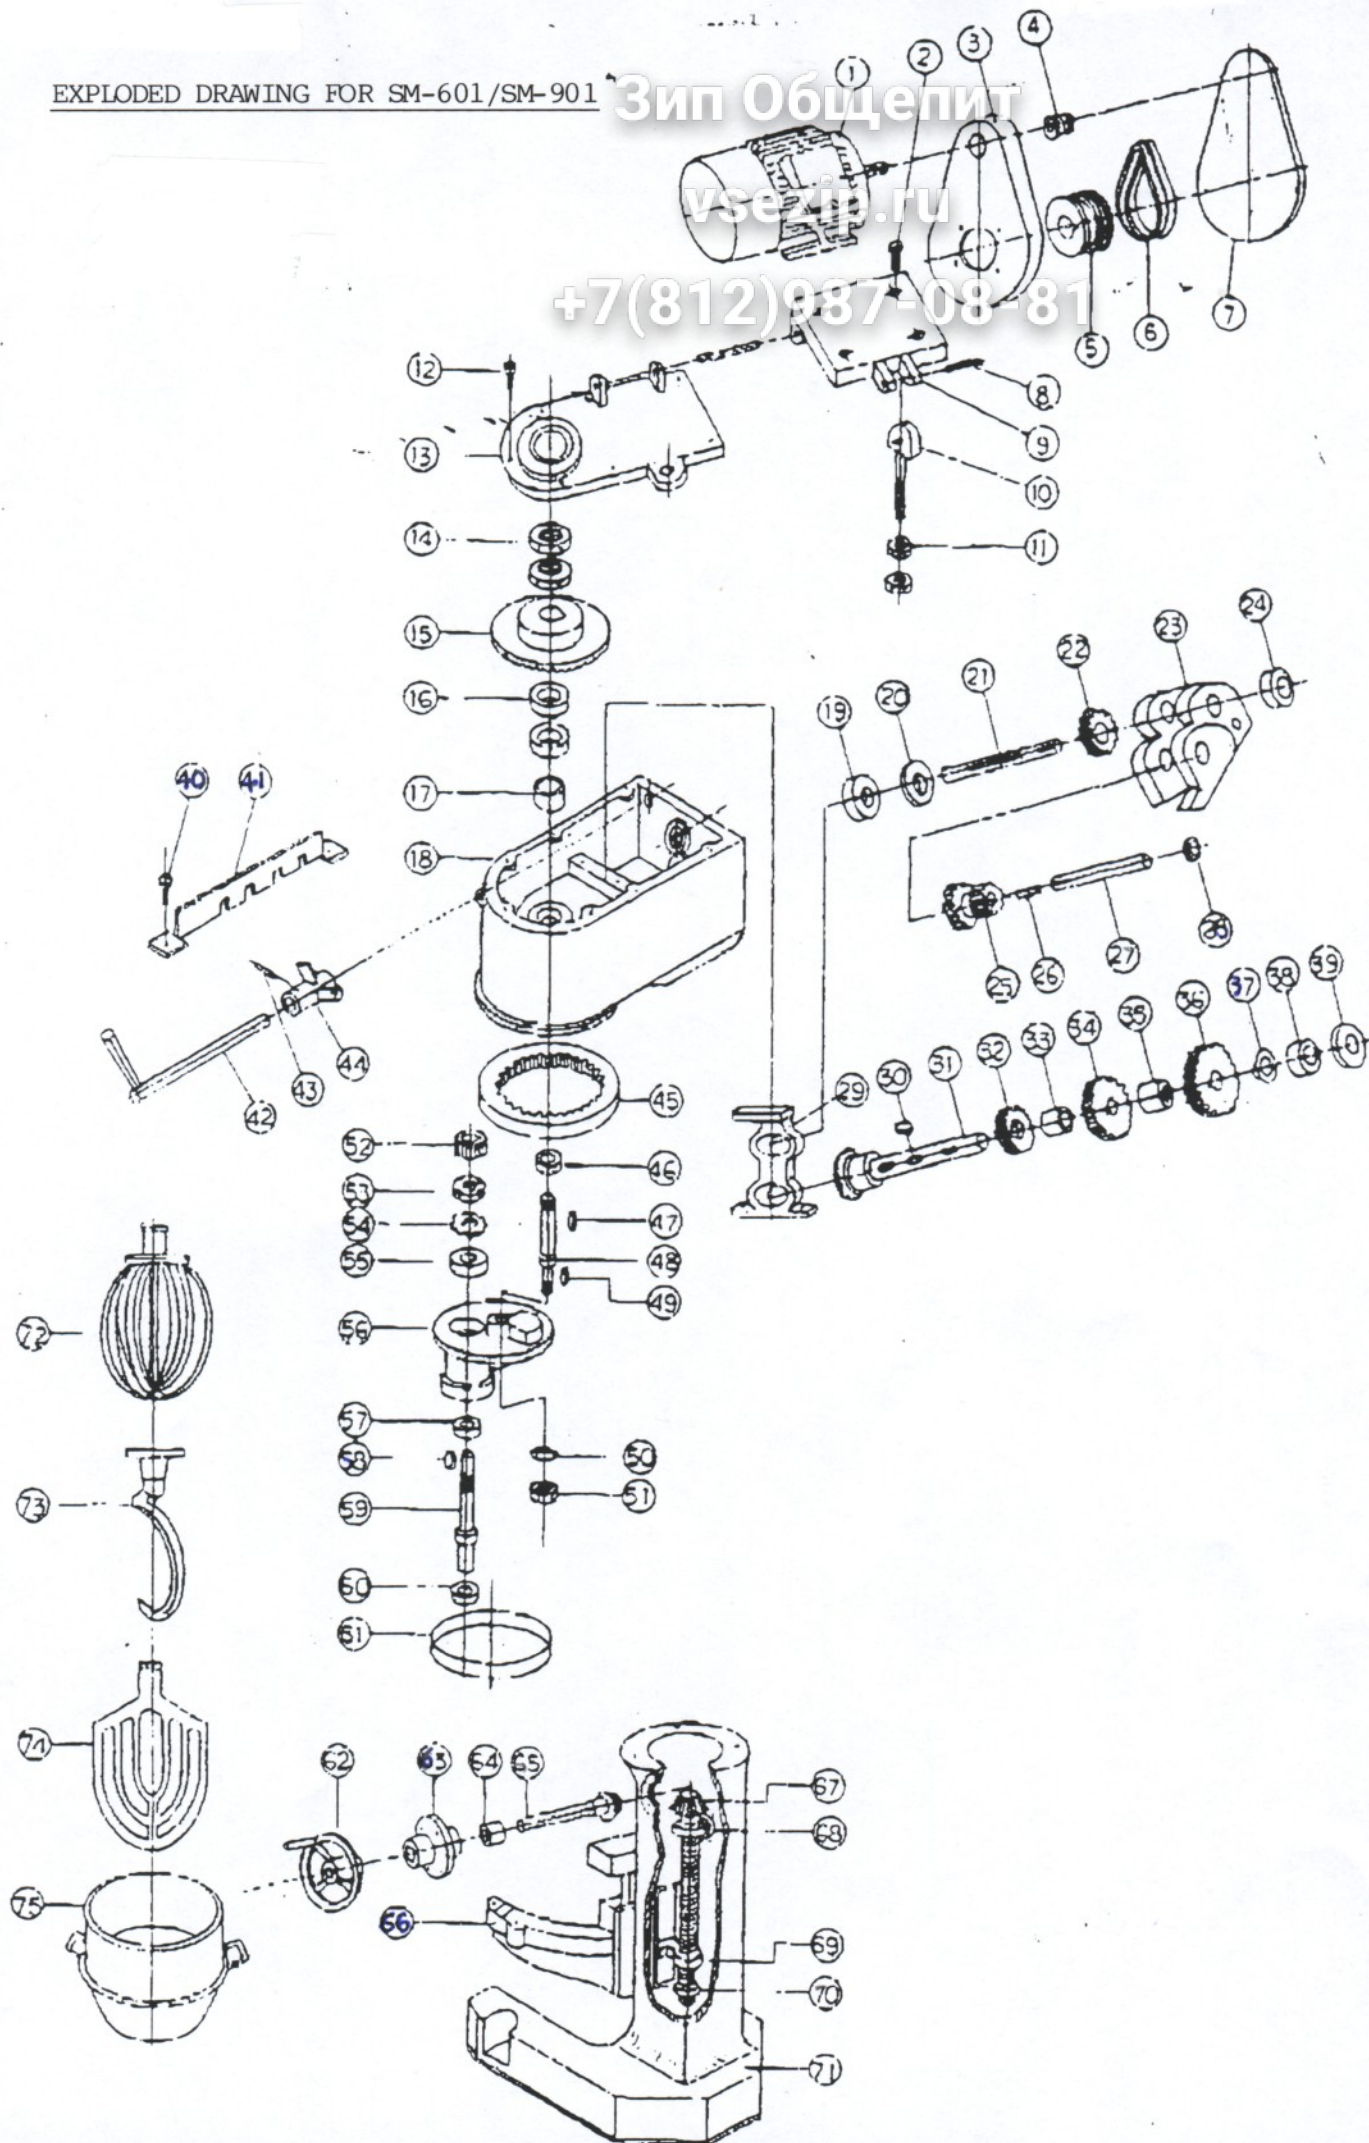

PARTS LIST FOR SM-601/SM-901

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
1	MOTOR	39	NUT
2	SCREW	40	SCREW
3	CASE-TRANSMISSION	41	FIXING BRACKET
4	BELT PULLEY	42	HANDLE-SHIFTER
5	BELT PULLEY	43	PIN
6	BELT	44	CAM-GEAR SHIFTER
7	BACK COVER	45	INTERNAL GEAR
8	PIN	46	BEARING
9	MOTOR FIXING BRACKET	47	KEY
10	SCREW	48	SHAFT
11	NUT	49	KEY
12	SCREW	50	NUT
13	TOP COVER	51	NUT
14	NUT	52	GEAR
15	TRANSMISSION SHAFT SUPPORT	53	NUT
16	BEARING	54	WASHER
17	WASHER	55	BEARING
18	HEAD	56	PLANETARY
19	RING	57	BEARING
20	BEARING	58	KEY
21	SHAFT	59	SHAFT
22	GEAR	60	OIL-SEAL
23	GEAR HOLDER	61	CUP-DRIP
24	BEARING	62	LIFT-HANDLE SUB-ASSY.
25	TWO-LEVEL GEAR	63	GEAR
26	KEY	64	SLEEVE
27	SHAFT	65	SHAFT
28	RING	66	BOWL SUPPORT SUB-ASSY.
29	BEARING HOUSING	67	GEAR
30	KEY	68	STOPPER
31	SHAFT	69	NUT
32	GEAR	70	STOP NUT
33	SLEEVE	71	BASE
34	GEAR	72	WIRE WHIP
35	SLEEVE	73	HOOK
36	GEAR	74	BEATER
37	RING	75	BOWL
38	BEARING		