

Зип Общепит

vsezip.ru

+7(812)987-08-81



**L40**

**Edition 20070523-**



| Pos | Code    | Description           | Info        |
|-----|---------|-----------------------|-------------|
| 001 | 3150790 | THERMOSTAT PROTECT.   | 01/04/1997- |
| 002 | 32W0970 | SWITCH                | 01/04/1997- |
| 003 | 32Z2020 | PROGRAMMER            | 01/04/1997- |
| 004 | 32Z4741 | PRESSURE-SWITCH 30/70 | 01/04/1997- |
| 005 | 32D0440 | CABLE CLAMP           | 01/04/1997- |
| 006 | 32X0130 | GROMMET Ø29-Ø37       | 01/04/1997- |
| 007 | 32D0171 | TERMINAL BOARD        | 01/04/1997- |
| 008 | 32W0980 | SWITCH                | 01/04/1997- |
| 009 | 36M1511 | HANDLE                | 01/04/1997- |
| 010 | 32W0870 | MAGNET                | 01/04/1997- |
| 011 | 3106730 | ORANGE LIGHT 230V     | 23/05/2007- |
| 012 | 3106710 | GREEN LIGHT 230V      | 23/05/2007- |
| 013 | 32W3240 | MICROSWITCH           | 01/04/1997- |
| 014 | 35S2071 | ELECTRIC BOX          | 01/04/1997- |
| 015 | 35G3200 | COVER                 | 01/04/1997- |
| 016 | 35Q2620 | GUARD                 | 01/04/1997- |
| 017 | 35Q2610 | GUARD                 | 01/04/1997- |
| 018 | 36M0030 | LATCH                 | 01/04/1997- |
| 019 | 36M0020 | LOCK                  | 01/04/1997- |
| 020 | 3117580 | LOCK NUT              | 01/04/1997- |
| 021 | 3150410 | "O" RING Ø 18.72      | 01/04/1997- |
| 022 | 131AA08 | HOSE                  | 01/04/1997- |
| 023 | 33D0360 | PRESSURE SWITCH       | 01/04/1997- |
| 024 | 35S1870 | LH GUIDE              | 01/04/1997- |
| 025 | 30Q0210 | FILTER                | 01/04/1997- |
| 026 | 35S1970 | RH/GUIDE              | 01/04/1997- |
| 027 | 3190130 | PIN                   | 01/04/1997- |
| 028 | 35S1980 | DOOR HINGE            | 01/04/1997- |
| 029 | 30W0290 | TANK ASS.             | 01/04/1997- |
| 030 | 32Z2000 | RELAY                 | 01/04/1997- |
| 033 | 30G0780 | DOOR ASS. Y           | 01/04/1997- |
| 034 | 3150430 | "O" RING Ø 56.52      | 01/04/1997- |
| 035 | 32G0390 | HEATING EL.           | 01/04/1997- |
| 036 | 3150321 | HEAT.ELEM.PROTECTION  | 01/04/1997- |
| 037 | 33D0341 | OVERFLOW 43X185       | 01/04/1997- |
| 038 | 3150260 | "O" RING              | 01/04/1997- |
| 039 | 33Q3050 | OVER FLOW DRAIN.      | 01/04/1997- |
| 040 | 3150240 | "OR"GASKET            | 01/04/1997- |
| 041 | 33Q0240 | NUT 1 1/2"            | 01/04/1997- |
| 042 | 37Q1510 | GASKET                | 01/04/1997- |
| 043 | 33Q2110 | ELBOW JOINT           | 01/04/1997- |
| 044 | 36M2121 | HANDLE                | 01/04/1997- |
| 045 | 3AG0100 | COVER                 | 01/04/1997- |
| 046 | 33D1350 | RINSE AID TANK        | 01/04/1997- |
| 047 | 36Q0180 | PLUG                  | 01/04/1997- |
| 048 | 33T1121 | NOZZLE                | 05/04/1997- |
| 049 | 3031670 | RINSE ARM + INJECTOR  | 01/04/2004- |
| 051 | 36D0740 | BUSHING               | 01/04/1997- |
| 052 | 36D0720 | RINSE HUB             | 01/04/1997- |
| 053 | 30Z7330 | RINSING ARM           | 01/04/1997- |
| 054 | 33Q3380 | RINSE ARM. MUB        | 01/04/1997- |

| Pos | Code    | Description                | Info        |
|-----|---------|----------------------------|-------------|
| 055 | 33Q0420 | RINSE JOINT PIPE           | 01/04/1997- |
| 056 | 3AZ0010 | RINSE ASS.Y                | 01/04/1997- |
| 057 | 36D4050 | WASHING SUPPORT            | 01/04/1997- |
| 058 | 33Q5070 | RING NUT                   | 01/04/1997- |
| 059 | 30Z7250 | WASHING PIPE ASS.Y         | 01/04/1997- |
| 060 | 3150140 | "O" RING                   | 01/04/1997- |
| 061 | 3150010 | "O" RING                   | 01/04/1997- |
| 062 | 3140330 | PIPE CLAMP                 | 01/04/1997- |
| 063 | 33Q0150 | "HOSE SUPPORT 1/2""        | 01/04/1997- |
| 064 | 33M0350 | F" PIPE                    | 01/04/1997- |
| 065 | 36D9540 | BOTTOM WASH SUPPORT        | 01/04/1997- |
| 066 | 33D1371 | INLET WATER SOLENOID VALVE | 01/04/1997- |
| 067 | 131AA16 | PIPE Ø20-Ø13               | 01/04/1997- |
| 068 | 111AA09 | PROTECTION PIPE            | 01/04/1997- |
| 069 | 33D0061 | DISPENSER                  | 01/04/1997- |
| 070 | 111AA15 | PIPE Ø13-Ø8                | 01/04/1997- |
| 071 | 35S2090 | SUPPORT                    | 01/04/1997- |
| 072 | 36M0700 | HANDLE                     | 01/04/1997- |
| 073 | 32Z2430 | THERMOSTAT                 | 01/04/1997- |
| 074 | 32Z0160 | THERMOSTAT 30-90°C         | 01/04/1997- |
| 076 | 34A1590 | BOILER 7 LTRS.             | 01/04/1997- |
| 077 | 31A9121 | SCREW                      | 01/04/1997- |
| 078 | 35B3571 | LOWER FRONT PANEL          | 01/04/1997- |
| 079 | 30M2081 | FRAME ASS.Y                | 01/04/1997- |
| 080 | 35B2600 | RH/SIDE PANEL              | 01/04/1997- |
| 081 | 32M2140 | MOTOR PUMP                 | 01/04/1997- |
| 081 | 32M2330 | MOTOR PUMP                 | 01/04/1997- |
| 081 | 32M2340 | MOTOR PUMP                 | 01/04/1997- |
| 082 | 35Z2810 | PIPE                       | 01/04/1997- |
| 083 | 35Z2620 | PIPE                       | 01/04/1997- |
| 084 | 33Q0740 | "FITTING F 1/2""           | 01/04/1997- |
| 085 | 6000340 | DRAIN COUPLING             | 01/04/1997- |
| 086 | 35B8741 | CONTROL BOARD              | 01/04/1997- |
| 087 | 3150690 | "O" RING                   | 01/04/1997- |
| 088 | 33Q5190 | M.F. REDUCTION             | 01/04/1997- |
| 089 | 33Q5100 | PIPE FITTING               | 01/04/1997- |
| 090 | 33Q2320 | RING NUT                   | 01/04/1997- |
| 091 | 33T3720 | NOZZLE                     | 01/04/1997- |
| 092 | 3140230 | 12/20 PIPE CLAMP           | 01/04/1997- |
| 093 | 32Z1310 | CONDENSER WITH CAP         | 01/04/1997- |
| 094 | 32D0020 | CABLE CLAMP Ø 4 - 12       | 01/04/1997- |
| 095 | 37M1150 | CONTROL PANEL              | 01/04/1997- |
| 096 | 32X0140 | GROMMET Ø13,5-Ø25          | 01/04/1997- |
| 097 | 6001920 | RINSING ARM ASS.Y          | 01/04/1997- |
| 099 | 32Q0560 | CABLE ASS.Y                | 01/04/1997- |
| 100 | 3100110 | RING NUT                   | 01/04/1997- |
| 101 | 32Z2011 | SAFETY THERMOSTAT          | 01/04/1997- |