

Зип Общепит

vsezip.ru

+7(812)987-08-81




**LT25F**

**Edition 20070901-**

Зип Общепит

22  
vsezip.ru

+7(812)987-08-81

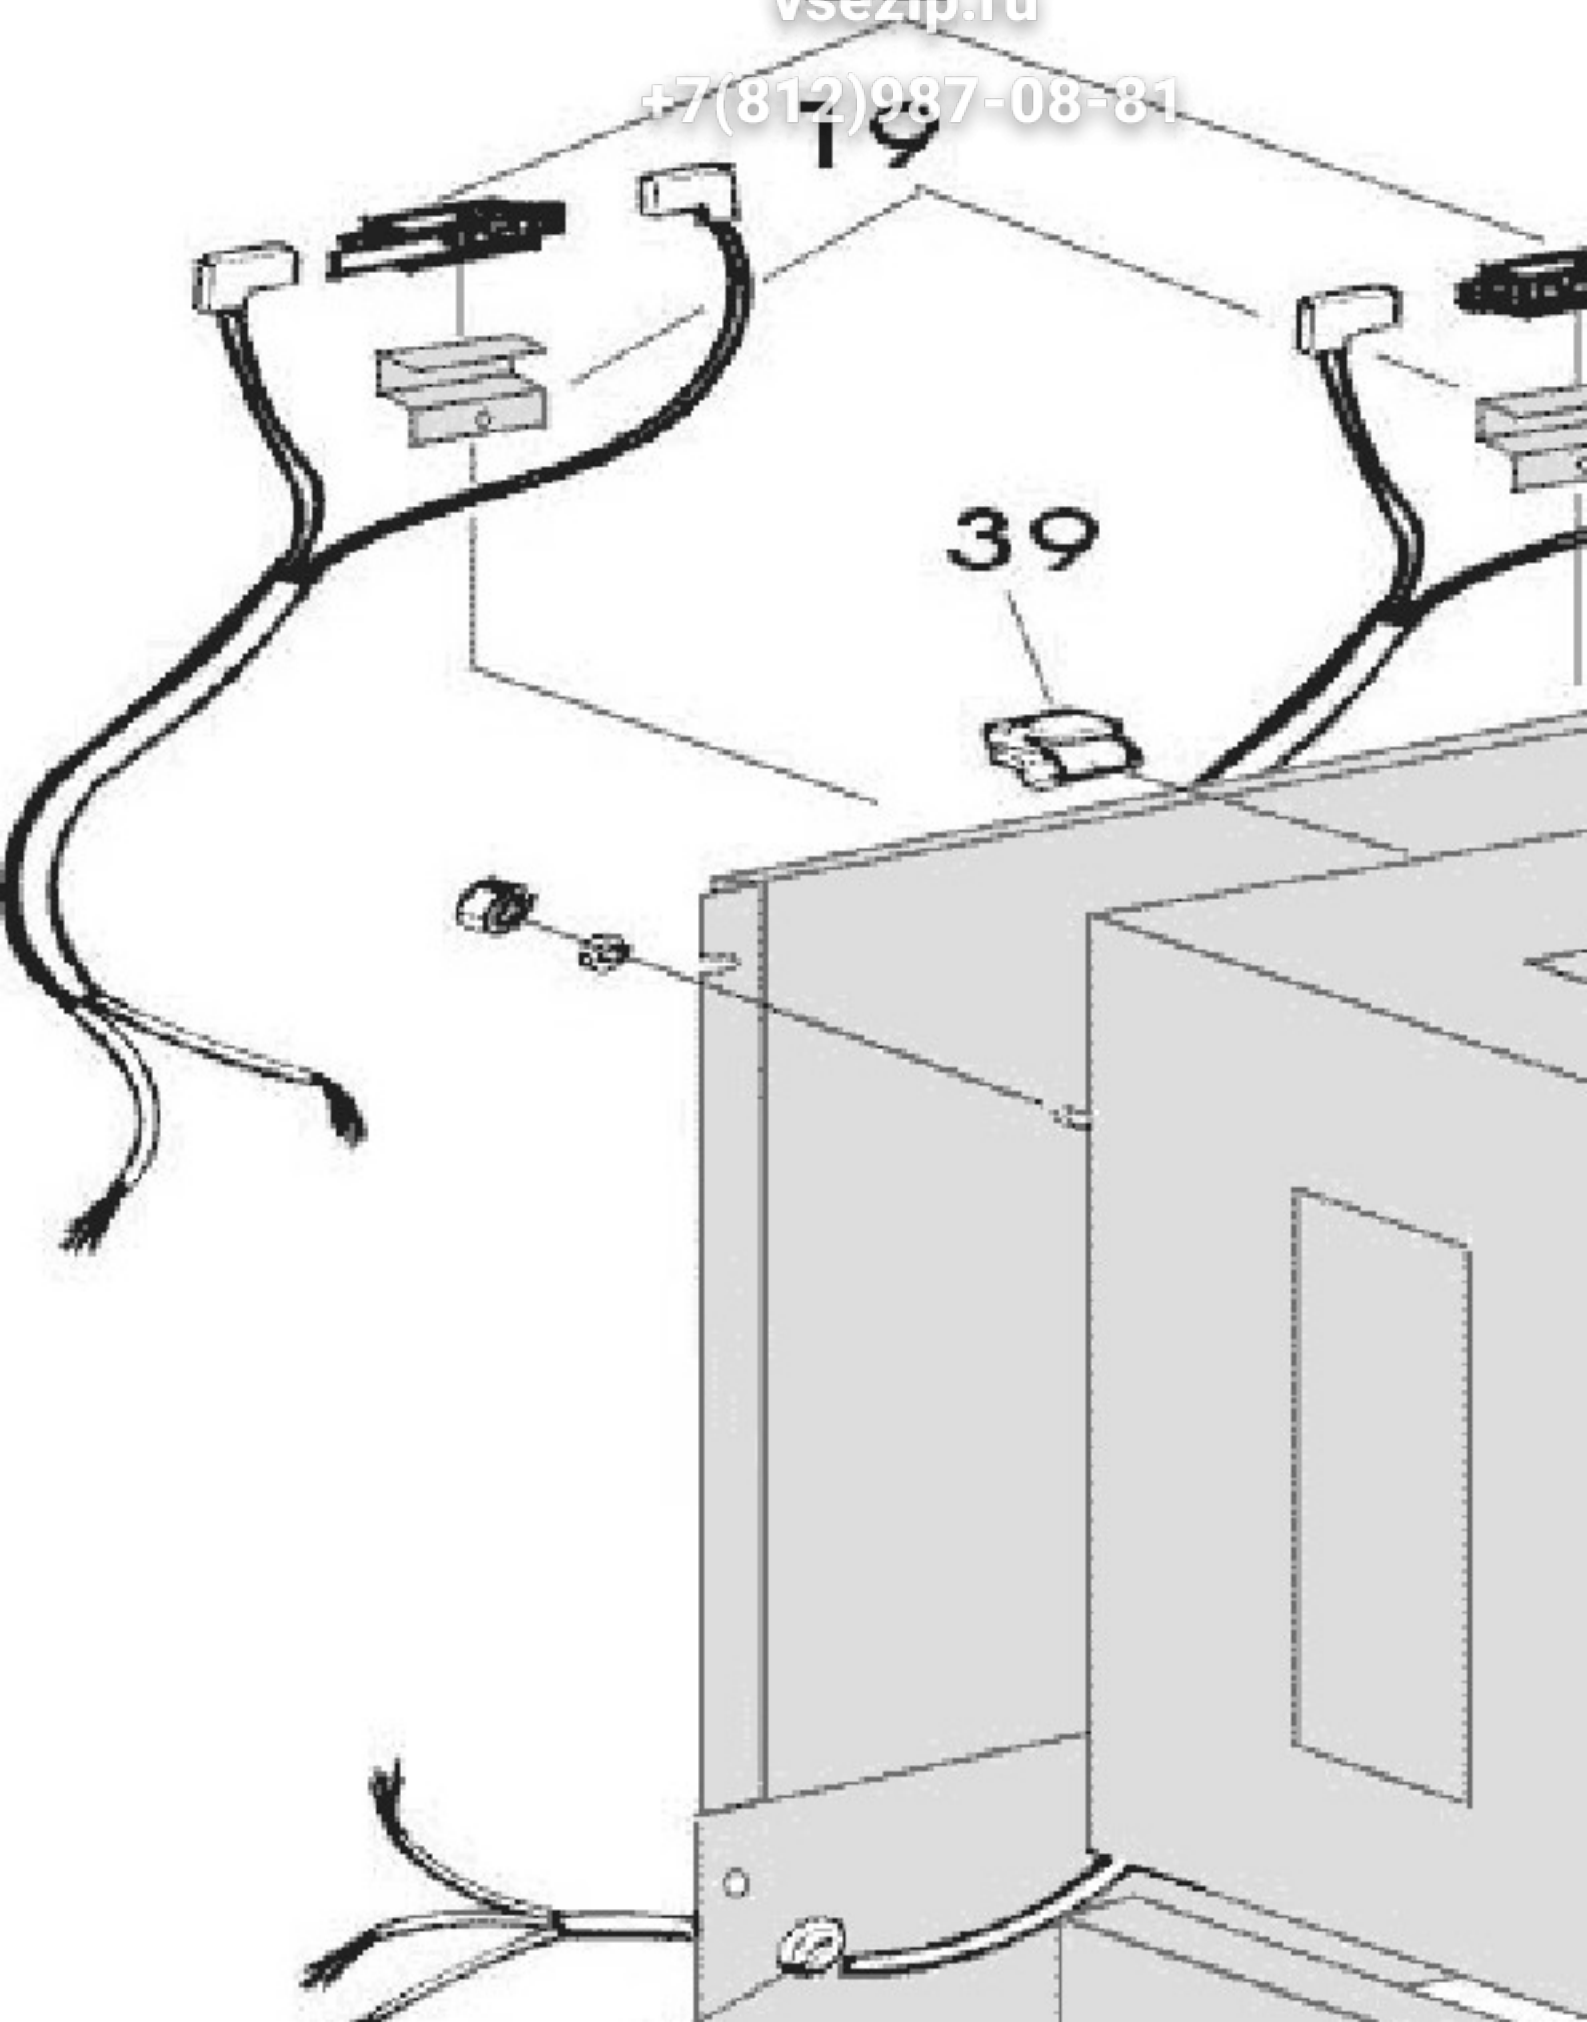

Зип Общепит

vsezip.ru

+7(812)987-08-81

**14**




**25**

**1**

**2**

**26**

**50**

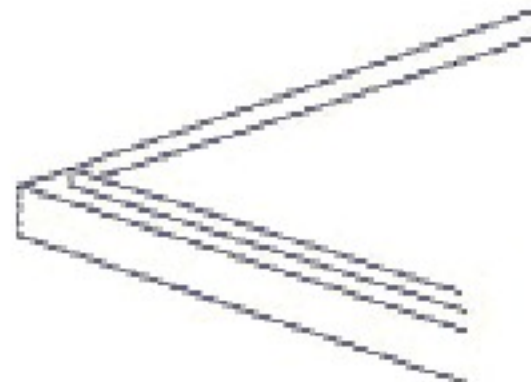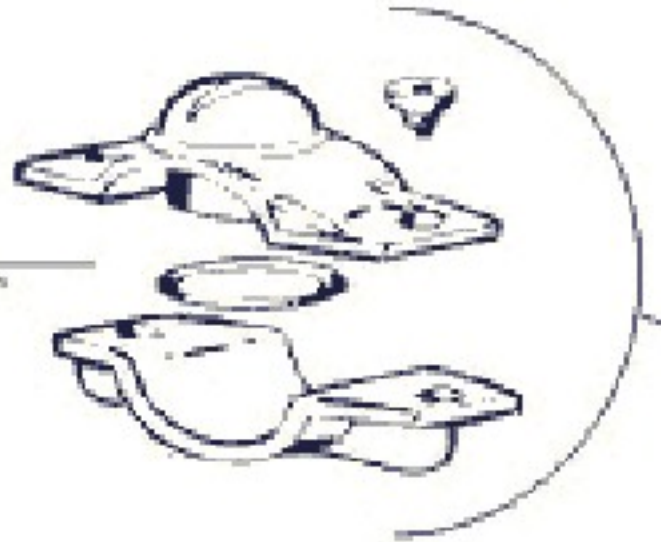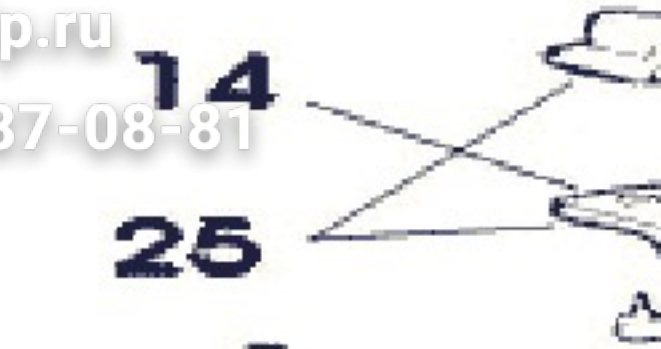

Зип Общепит

[vsezip.ru](http://vsezip.ru)

+7(812)987-08-81

6

5

Page	Pos	Code	Description	Info
002	001	32Z7190	PRESSURE-SWITCH	12/01/2000-
002	002	LT25F-Pos.002	GROMMET	12/01/2000-
002	003	32Z7930	RELAY	12/01/2000-
002	004	32Z8840	THERMOSTAT 30-90C	12/01/2000-
002	005	36M1600	FOOT H. 20 DIAM. 30X101M4	12/01/2000-
002	006	32W1230	GREEN LIGHT	12/01/2000-
002	007	32W1250	BLUE LIGHT	12/01/2000-
002	008	36M1580	HANDLE	12/01/2000-
002	009	36M1590	KNOB	12/01/2000-
002	010	3150550	O.R. GASKET 6.07X1.78	12/01/2000-
002	011	36G8360	RIGHT TWISTING SPRING D. 3mm	12/01/2000-
002	012	36G7400	SPRING STRETCHER DIAM. 18	12/01/2000-
002	013	36G8350	TWISTING SPRING	12/01/2000-
002	014	37Q1590	BASE-PANEL SEALING AL 30/40/31/41	12/01/2000-
002	015	36G1740	SPRING OF LEVEL CONTROL HOSE	12/01/2000-
002	016	36G8370	Lockpin	12/01/2000-
002	017	32Z5720	PROGRAMMER	12/01/2000-
002	018	7523/AP	PANEL	12/01/2000-
002	019	LT25F-Pos.019	DOOR SWITCH BRACKET	12/01/2000-
002	020	7571	NEUTRAL HANDLE	12/01/2000-
002	021	32W1200	SWITCH	12/01/2000-
002	022	32W1180	PROTECTED	12/01/2000-
002	023	32G0480	MICROSWITCH HEATING ELEMENT	12/01/2000-
002	023	32Z7200	THERMOSTAT 90°	12/01/2000-
002	025	32W1300	SWITCH	01/09/2004-
002	026	32W1630	WHITE/YELLOW BUTTON	12/01/2000-
002	027	32W1220	WHITE LIGHT	12/01/2000-
002	028	37Q3910	DOOR GASKET	12/01/2000-
002	029	32W1300	SWITCH	01/09/2004-
002	030	36G8380	SPRING	12/01/2000-
002	031	32W1300	SWITCH	12/01/2000-
002	032	36H0980	DOOR SWITCH TUBE	12/01/2000-
002	033	32V0080	MAGNET	12/01/2000-
002	034	35X3120	PRESSURE ACCUMULATOR TUBE	12/01/2000-
002	035	3601340	RUBBER BUMPER	12/01/2000-
002	036	33D0410	PRESSURE SWITCH	12/01/2000-
002	037	32W1210	MICROSWITCH	12/01/2000-
002	038	3150630	NYLON O.R. GASKET 4X8	12/01/2000-
002	039	LT25F-Pos.039	BACK GROMMET	12/01/2000-
002	040	33Q3440	MICROSWITCH ROD	12/01/2000-
003	001	3FL0175	NOZZLE	12/01/2000-
003	002	33T1160	NOZZLE	12/01/2000-
003	003	33Q3200	WING NUT	12/01/2000-
003	004	35Q9940	PUMP INTAKE FILTER	12/01/2000-
003	005	3152470	"OR" GASKET 20.22X3.53	12/01/2000-
003	006	33Q4450	T-JUNCTION (BOILER)	12/01/2000-
003	007	33D0290	SOLENOID VALVE	12/01/2000-
003	008	3152480	FILLING-HOSE GASKET 12X24X2.5	12/01/2000-
003	009	33M0350	PIPE	12/01/2000-
003	010	33D2100	SAFETY VALVE	01/09/2007-
003	011	32Z8270	CONTACT THERMOSTAT	12/01/2000-

Page	Pos	Code	Description	Info
003	012	33M0740	HOSE FROM SALT TANK TO SOFTENER	12/01/2000-
003	013	33Q3660	PLUG	12/01/2000-
003	014	3150450	O RING	12/01/2000-
003	015	33M0670	SLEEVE	12/01/2000-
003	016	33M0660	SLEEVE	12/01/2000-
003	017	33Q4580	HOSE FROM T- JUNCTION TO BOILER	12/01/2000-
003	018	33Q4400	JOINT FOR RINSING ROD	12/01/2000-
003	019	36G8070	COLUMN	12/01/2000-
003	020	33Q2120	RING NUT	12/01/2000-
003	021	3070150	GASKET 18,5X14,2X2	01/12/2005-
003	022	36G7410	PIN ASSEMBLY	12/01/2000-
003	023	35D8780	PIN	12/01/2000-
003	024	36G1430	ROTARY HEAD	12/01/2000-
003	025	33T1170	NOZZLE HOLDER	12/01/2000-
003	026	33T1130	NOZZLE	12/01/2000-
003	027	33T1140	NOZZLE HOLDER	12/01/2000-
003	028	3240500	NOZZLE ASSEMBLY	12/01/2000-
003	029	33Q1310	RING NUT	12/01/2000-
003	030	3152100	GASKET	12/01/2000-
003	031	3191080	WASHER	12/01/2000-
003	032	3120210	RING	12/01/2000-
003	033	33Q3610	RING NUT	12/01/2000-
003	034	3152110	O RING	12/01/2000-
003	035	3191090	WASHER	12/01/2000-
003	036	3120220	RING 18X3	12/01/2000-
003	037	33Q3620	RING NUT	12/01/2000-
003	038	3152090	COLUMN GASKET AL	12/01/2000-
003	039	33Q4410	RING NUT 1/2" GAS	12/01/2000-
003	040	33D0390	OVERFLOW PIPE	12/01/2000-
003	041	33Q1420	DRAIN	12/01/2000-
003	042	37Q1070	GASKET	12/01/2000-
003	043	33Q1430	RING NUT	12/01/2000-
003	044	33D2440	DRAIN ELBOW HOSE 1" X 25	12/01/2000-
003	045	35Z0240	DRAIN PIPE	12/01/2000-
003	046	33Q1300	INTAKE HOSE D. 45	12/01/2000-
003	047	32G0540	BOILER HEATING ELEMENT +"OR"	12/01/2000-
003	048	35Z1100	HOSE FROM DISPENSER TO RINSE- AID TANK	12/01/2000-
003	049	LT25F-Pos.049	HOSE FROM T- JUNCTION TO	12/01/2000-
003	050	3150380	DISPENSER O RING	12/01/2000-
003	051	33Q3100	RING NUT 3/4"	12/01/2000-
003	052	LT25F-Pos.052	RINSING TUBE AL 25	12/01/2000-
003	053	32M2940	PUMP	12/01/2000-
003	054	34A0700	BOILER	12/01/2000-
003	055	30Z2430	RIGHT RINSING ARM	12/01/2000-
003	056	30Z2420	LEFT RINSING ARM	12/01/2000-
003	057	30Z2190	RIGHT LOWER WASHING ARM	12/01/2000-
003	058	30Z2510	LEFT LOWER WASHING ARM	12/01/2000-
003	059	33M0790	DELIVERY HOSE FROM PUMP	12/01/2000-
003	060	33D0380	RINSE AID DISPENSER	12/01/2000-
003	061	35Z1090	"REDUCED ""T""- JUNCTION"	12/01/2000-
003	062	33M0750	T-JOINT/BOILER TUBE	12/01/2000-

Page	Pos	Code	Description	Info
003	063	3187530	O RING	12/01/2000-
004	001	36G8840	BALL-BEARING 6201 FOR SELF-COOLING	12/01/2000-
004	002	32M2940	PUMP HP 0.15/HP 0.5 PUMP	12/01/2000-
004	003	LT25F-Pos.003	MOTOR OF OPEN PUMP HP. 0.4	12/01/2000-
004	004	36G8090	FLANGE OF OPEN PUMP HP. 0.4	12/01/2000-
004	005	3152070	O.R. GASKET OF OPEN PUMP HP. 0.4	12/01/2000-
004	006	3152080	SEAL	12/01/2000-
004	007	36G1460	IMPELLER	12/01/2000-
004	008	36G8080	SCROLL OF OPEN PUMP HP. 0.4	12/01/2000-