

Rif./Ref.	Codice/Code	Sigla /Features	Descrizione/Description
1	CO0478	(MSD400)	Housing
1	CO0479	(MSD500)	Housing
2	CO0480	(MSD400)	Covering
2	CO0481	(MSD500)	Covering
3	CO1372	(MSD400)	Covering
3	CO1373	(MSD500)	Covering
4	CO4956		Electronic card
5	CO4952		Controls
6	CO4944		Label
7	CO0461	230/V/1Ph/50Hz (MSD400)	Electro-pump
7	CO1452	01/05/08 f.p.(*)(MSD400)	Electro-pump
7	CO1450	230/V/1Ph/50Hz (MSD500)	Electro-pump
+	8	CO1386	Microswitch
+	9	CO1148 (MSD400)	Gasket
+	9	CO1149 (MSD500)	Gasket
	10	CO0351 (MSD400)	Bend
	10	CO0462 (MSD500)	Bend
	11	CO1157 (MSD400)	Spring
	11	CO0463 (MSD500)	Spring
	12	CO1155 (MSD400)	Rubber
	12	CO1156 (MSD500)	Rubber
	13	CO1375	Lever
+	14	CO1388 (MSD400)	Resistance
+	14	CO1390 (MSD500)	Resistance
	15	CO4190 (MSD400)	Protection
	15	CO4191 (MSD500)	Protection
	16	CO1374	Lever
	17	CO1164	Foot
	18	CO1158 (MSD400)	Spring
	18	CO0464 (MSD500)	Spring
	19	CO1977 (MSD400)	Silencer
	20	CO1378 (MSD400)	Transformer

+ : ricambio consigliato / spare part suggested

Rif./Ref.	Codice/Code	Sigla /Features	Descrizione/Description
20	CO1170	(MSD500)	Transformer
21	CO1165	(MSD400)	Switch
22	CO1382		Filter
23	CO1162		Handle
24	CO0474	(MSD400)	Chamber
24	CO0475	(MSD500)	Chamber
25	CO0476	(MSD400)	Chamber
25	CO0477	(MSD500)	Chamber
26	CO1167	(MSD400)	Vacuum gauge

