

Зип Общепит  
vsezip.ru  
+7(812)987-08-81




**LF50EMPS**

**Edition 20110101-**

Зип Общепит

vsezip.ru


+7(812)987-08-81

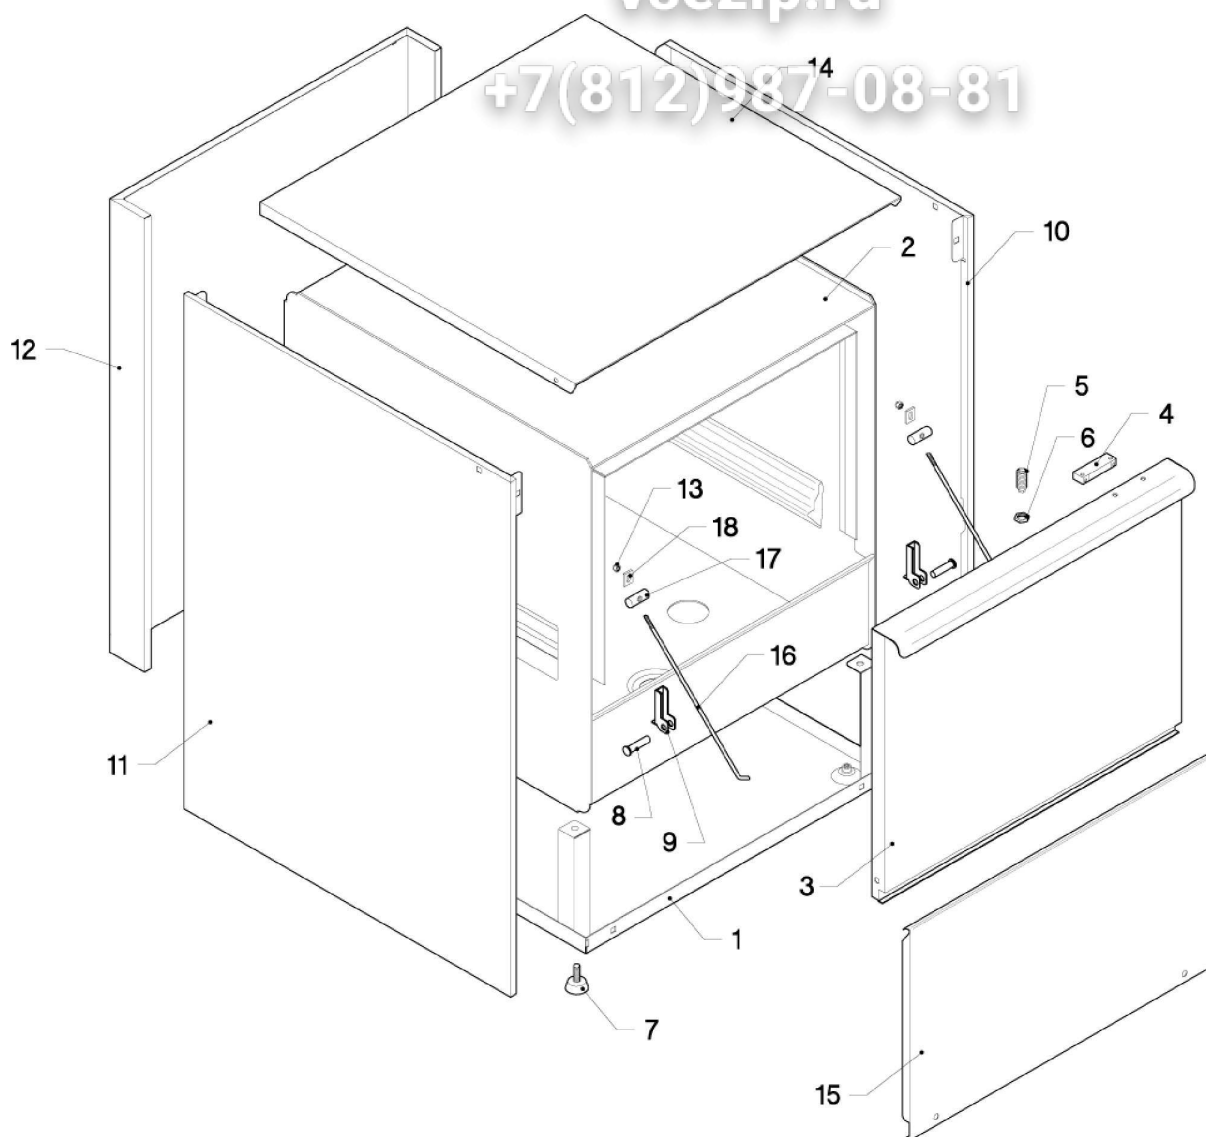

Зип Общепит

vsezip.ru


+7(812)987-08-81

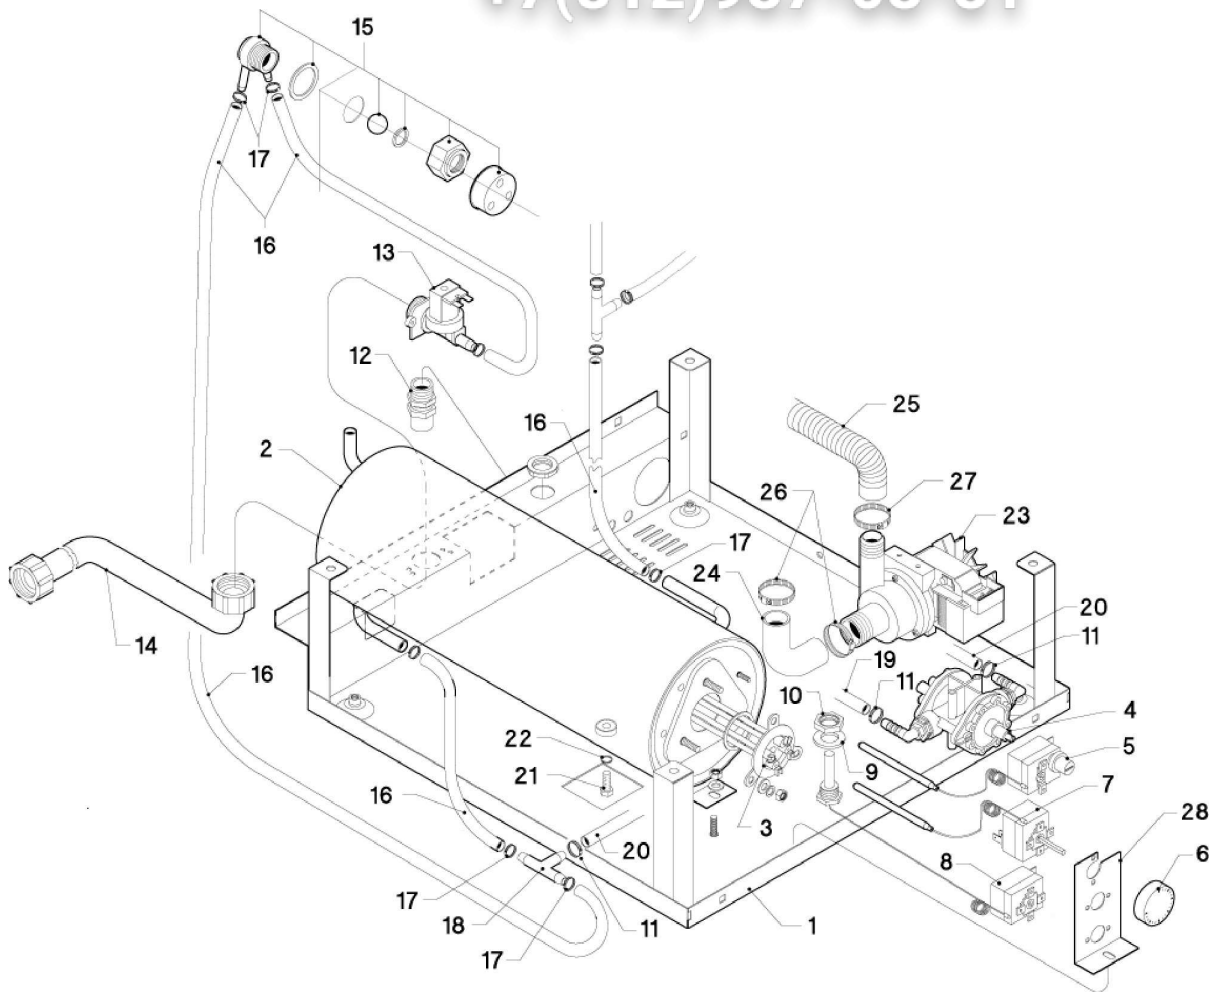

Зип Общепит

vsezip.ru


+7(812)987-08-81

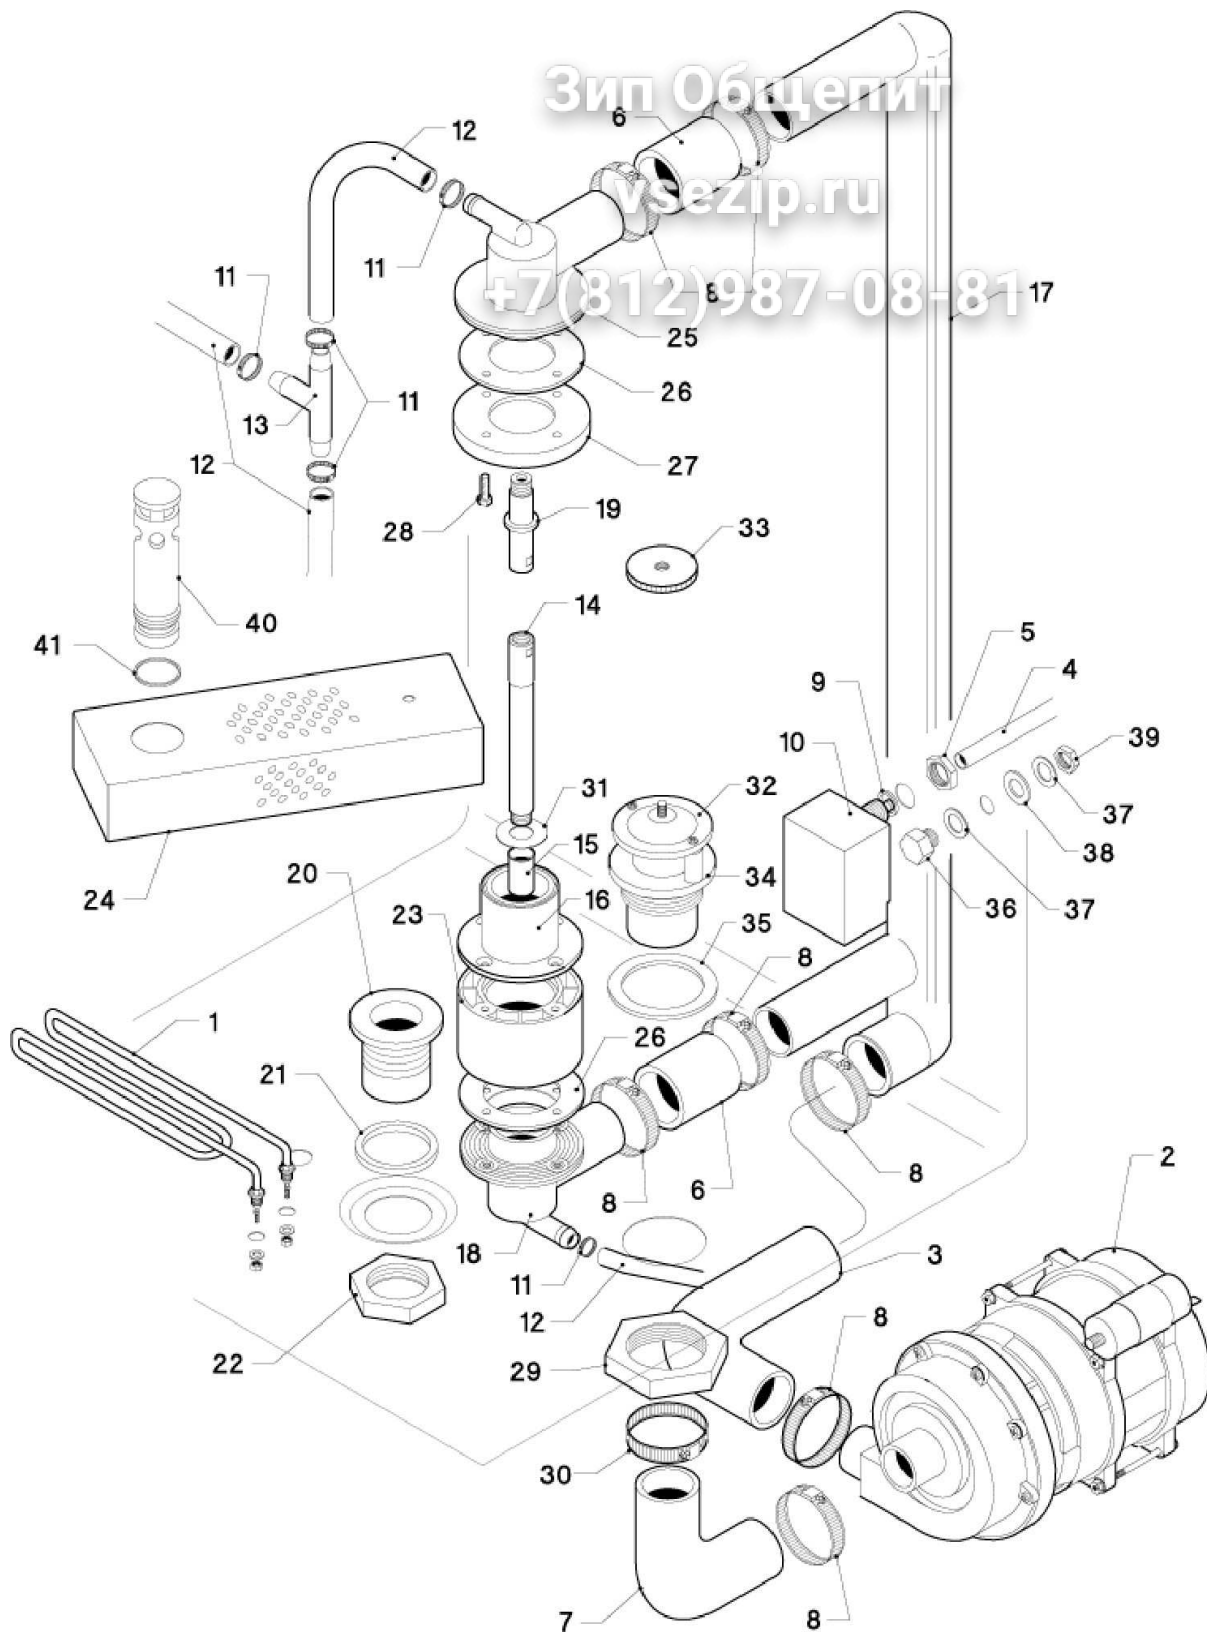

Зип Общепит

vsezip.ru


+7(812)987-08481

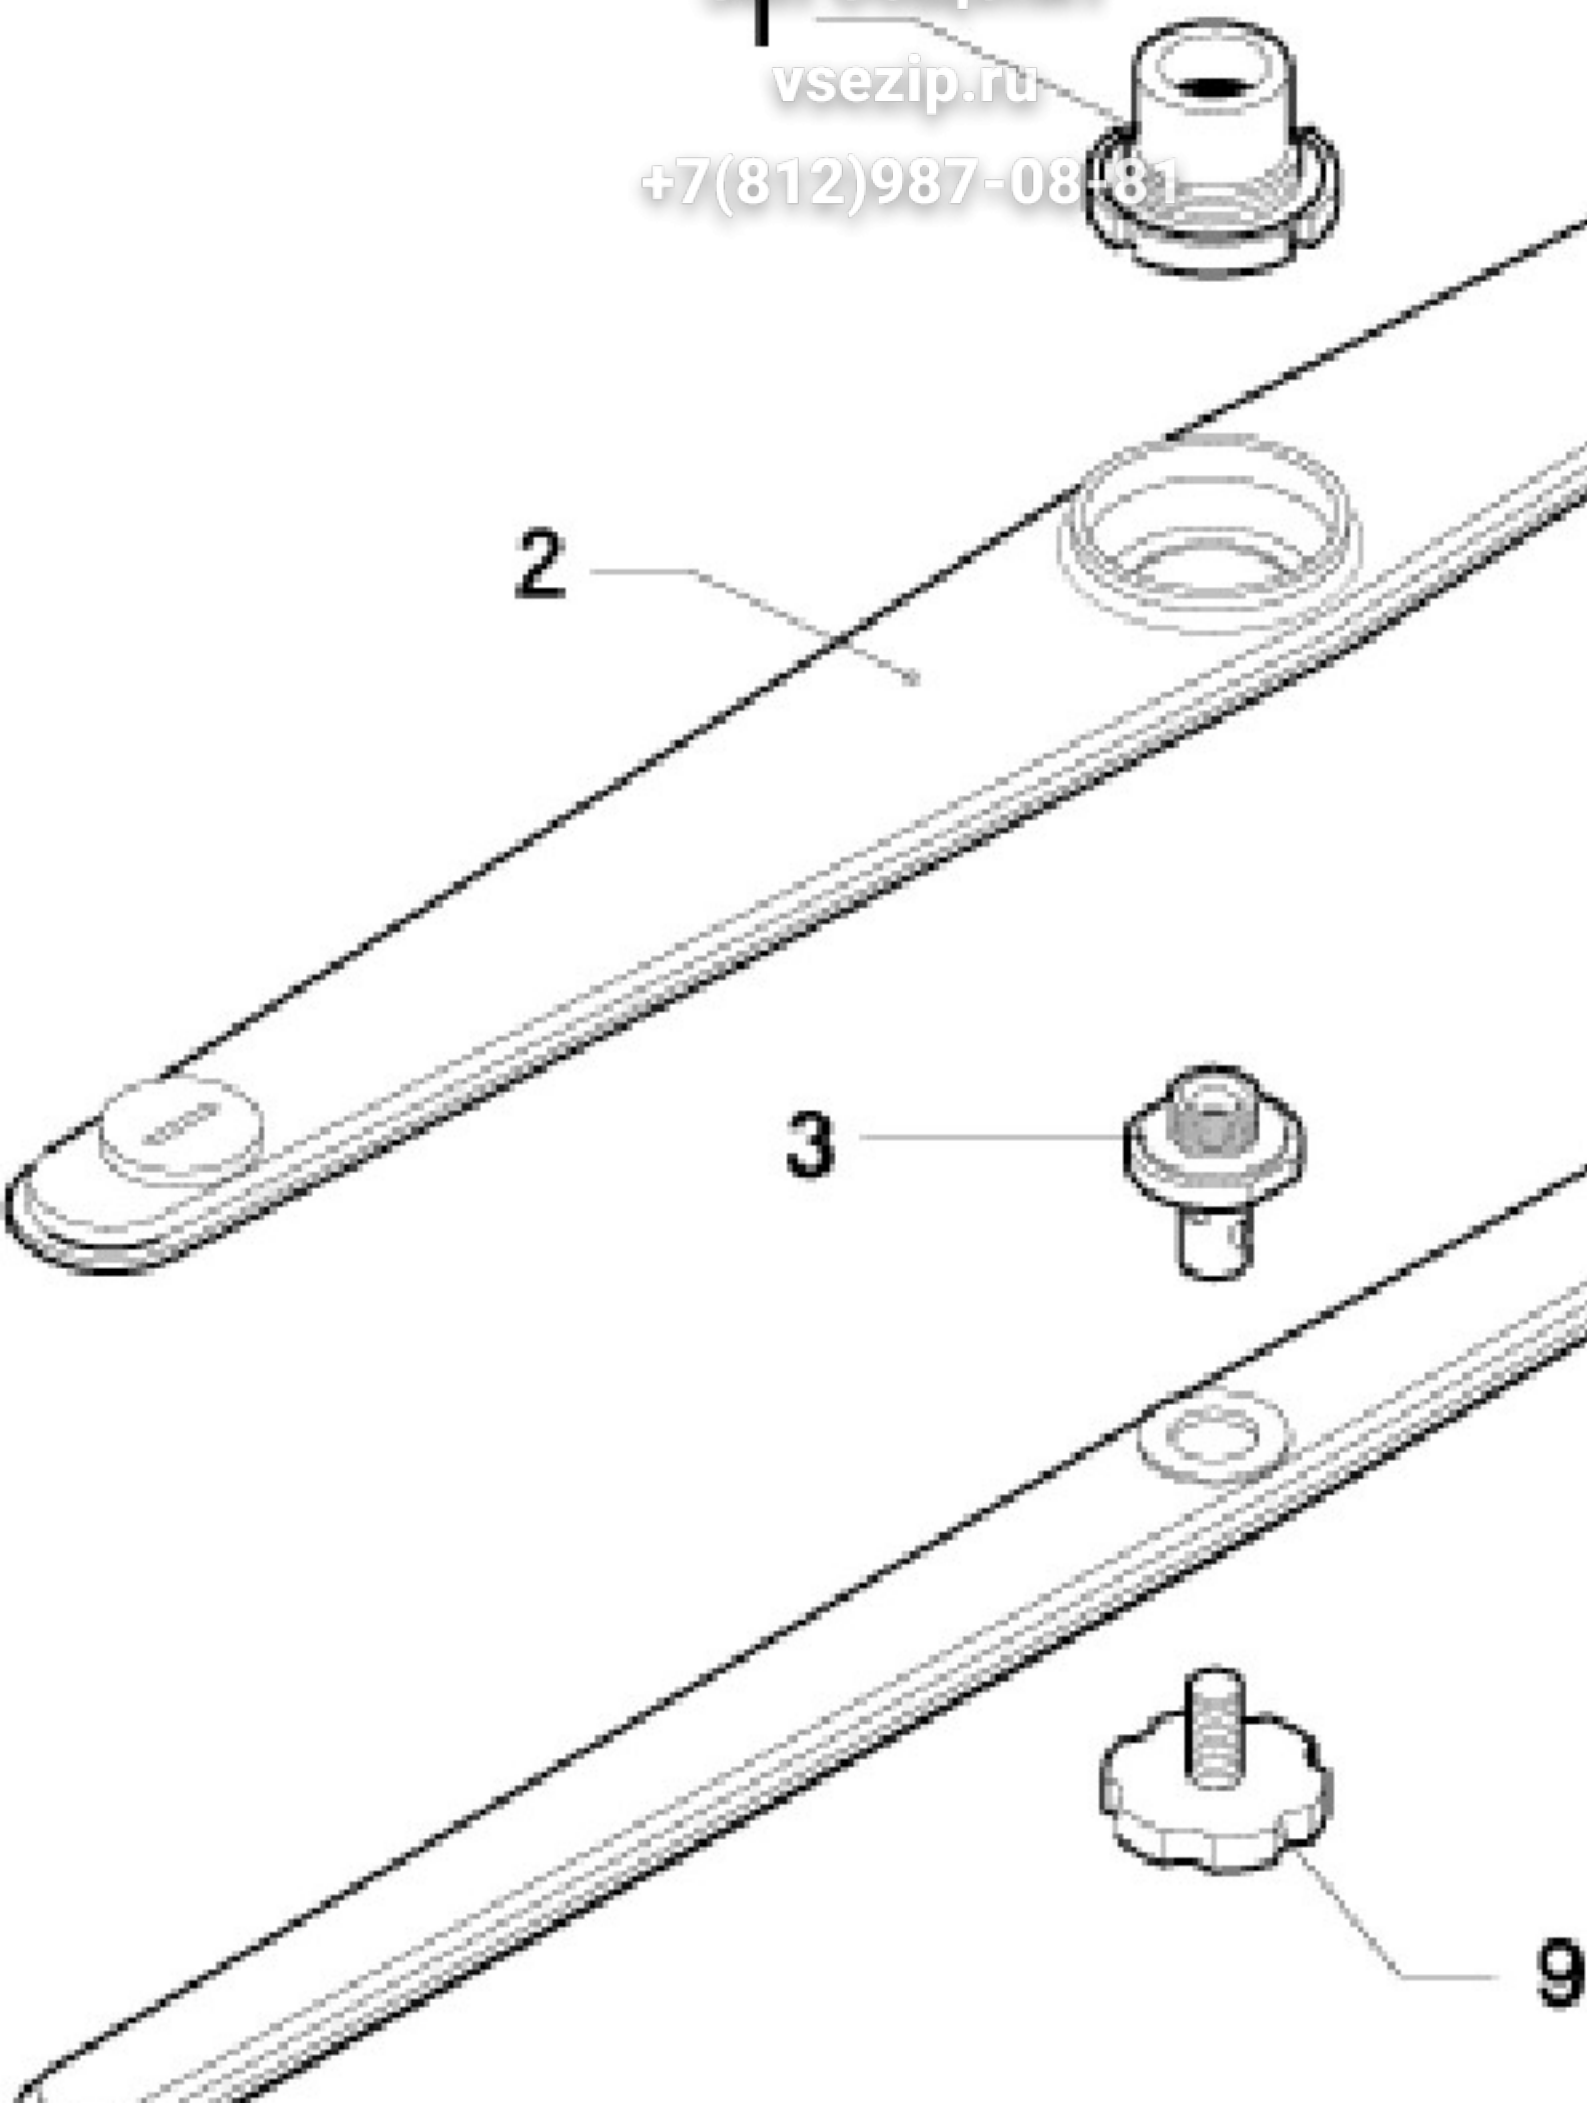

Зип Общепит

vsezip.ru

+7(812)987-08-81

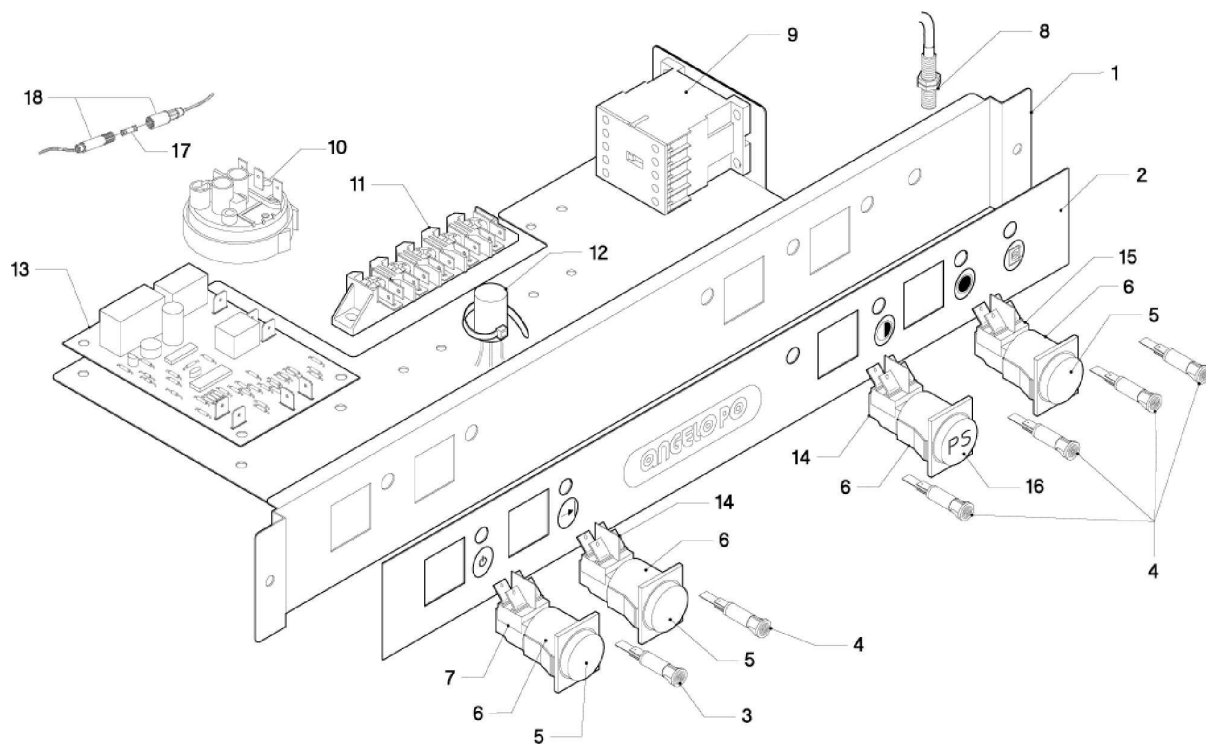

| Page | Pos | Code             | Description                    | Info        |
|------|-----|------------------|--------------------------------|-------------|
| 002  | 001 | LF50EMPS-Pos.001 | BASE                           | 01/01/2007- |
| 002  | 002 | 3191250          | TANK                           | 01/01/2007- |
| 002  | 003 | 3025220          | DOOR ASS. Y                    | 01/01/2007- |
| 002  | 004 | 3023650          | PROTECTION MAGNETO             | 01/01/2007- |
| 002  | 005 | 31W0061          | SPRING                         | 01/01/2007- |
| 002  | 006 | 3110250          | NUT CATCH                      | 01/01/2007- |
| 002  | 007 | 3028470          | PLASTIC FOOT                   | 01/09/2009- |
| 002  | 008 | 36G9150          | DOOR PIN                       | 01/01/2007- |
| 002  | 009 | 36M6230          | DOOR HINGE                     | 01/01/2007- |
| 002  | 010 | 3178320          | RIGHT PANEL                    | 15/03/2010- |
| 002  | 011 | 3182150          | LEFT PANEL                     | 15/03/2010- |
| 002  | 012 | 3182160          | BACK PANEL                     | 15/03/2010- |
| 002  | 013 | 3113200          | NUT                            | 01/01/2007- |
| 002  | 014 | 3027830          | UPPER SIDE PANEL               | 01/01/2007- |
| 002  | 015 | 3025230          | LOWER PANEL                    | 01/01/2007- |
| 002  | 016 | 36H0670          | DOOR SCREW STAY                | 01/01/2007- |
| 002  | 017 | 35Z5530          | PLATE                          | 01/01/2007- |
| 002  | 018 | LF50EMPS-Pos.018 | DOOR SUPPORT                   | 01/01/2007- |
| 003  | 001 | LF50EMPS-Pos.001 | BASE                           | 01/01/2007- |
| 003  | 002 | LF50EMPS-Pos.002 | BOILER                         | 01/01/2007- |
| 003  | 003 | 32G2140          | HEATING EL.                    | 01/01/2007- |
| 003  | 004 | 33D2300          | LANG DISPENSER                 | 01/01/2007- |
| 003  | 005 | 32Z8830          | SAFETY THERMOSTAT              | 01/01/2007- |
| 003  | 006 | 36M2830          | HANDLE                         | 01/01/2007- |
| 003  | 007 | 32Z8840          | THERMOSTAT 30-90C              | 01/01/2007- |
| 003  | 008 | 32V2630          | TANK THERMOSTAT                | 01/01/2007- |
| 003  | 009 | 3037870          | GASKET                         | 01/01/2007- |
| 003  | 010 | 33Q2190          | RING NUT                       | 01/01/2007- |
| 003  | 011 | LF50EMPS-Pos.011 | CLAMP                          | 01/01/2007- |
| 003  | 012 | LF50EMPS-Pos.012 | FIXING CABLE                   | 01/01/2007- |
| 003  | 013 | 33D2310          | SOLENOID VALVE                 | 01/01/2007- |
| 003  | 014 | 33M0350          | PIPE                           | 01/01/2007- |
| 003  | 015 | 33D2100          | SAFETY VALVE                   | 01/09/2007- |
| 003  | 016 | 131AA14          | RUBBER HOSE Ø20x13             | 01/01/2007- |
| 003  | 017 | 3140230          | 12/20 PIPE CLAMP               | 01/01/2007- |
| 003  | 018 | 3175720          | THREADED JOINT                 | 01/01/2007- |
| 003  | 019 | 3203310          | PIPE                           | 01/01/2007- |
| 003  | 020 | 3190430          | PRESSURE SWITCH PIPE           | 01/01/2007- |
| 003  | 021 | LF50EMPS-Pos.021 | SCREW                          | 01/01/2007- |
| 003  | 022 | 3152420          | O-RING                         | 01/01/2007- |
| 003  | 023 | 3228810          | DRAIN PUMP                     | 01/01/2010- |
| 003  | 024 | LF50EMPS-Pos.024 | INLET ELBOW                    | 01/01/2007- |
| 003  | 025 | 3033430          | PIPE FOR OUTLET Ø19 L=2000 FOR | 01/01/2007- |
| 003  | 026 | LF50EMPS-Pos.026 | CLAMP                          | 01/01/2007- |
| 003  | 027 | LF50EMPS-Pos.027 | CLAMP                          | 01/01/2007- |
| 003  | 028 | 3221670          | THERMOSTAT SUPPORT             | 01/01/2007- |
| 004  | 001 | 32G2070          | HEATING ELEMENT 2000W          | 01/06/2010- |
| 004  | 002 | 32M5770          | PUMP                           | 01/01/2007- |
| 004  | 003 | 3027800          | OUTLET ELBOW                   | 01/01/2007- |
| 004  | 004 | 3190430          | PRESSURE SWITCH                | 01/01/2007- |
| 004  | 005 | 33Q2190          | PIPE RING NUT                  | 01/01/2007- |

| Page | Pos | Code             | Description                 | Info        |
|------|-----|------------------|-----------------------------|-------------|
| 004  | 006 | 3065600          | PIPE                        | 01/01/2007- |
| 004  | 007 | 3027810          | INLET ELBOW                 | 01/01/2007- |
| 004  | 008 | LF50EMPS-Pos.008 | CLAMP                       | 01/01/2007- |
| 004  | 009 | 3151890          | GASKET                      | 01/01/2007- |
| 004  | 010 | 33M0510          | AIR TRAP                    | 01/01/2007- |
| 004  | 011 | 3140230          | 12/20 PIPE CLAMP            | 01/01/2007- |
| 004  | 012 | 131AA14          | RUBBER HOSE Ø20x13          | 01/01/2007- |
| 004  | 013 | 33M0580          | RINSE COUPLING              | 01/01/2007- |
| 004  | 014 | 3092670          | INFERIOR RINSE PIN          | 01/01/2007- |
| 004  | 015 | 3070120          | REDUCTION BUSH              | 01/01/2007- |
| 004  | 016 | 3070540          | WASHING INFER. PIPE FITTING | 01/01/2007- |
| 004  | 017 | 3065610          | UPPER OUTLET PIPE           | 01/01/2007- |
| 004  | 018 | 3056450          | WASHING/RINSE HUB           | 01/01/2007- |
| 004  | 019 | 33Q1090          | PIN                         | 01/01/2007- |
| 004  | 020 | 6300893          | EXHAUST RAMMER + OVER FLOW  | 01/01/2009- |
| 004  | 021 | 3151930          | O-RING                      | 01/01/2007- |
| 004  | 022 | 33Q2160          | RING NUT                    | 01/01/2007- |
| 004  | 023 | 3025010          | SPACER                      | 01/01/2007- |
| 004  | 024 | 3023640          | TANK FILTER                 | 01/01/2007- |
| 004  | 025 | 33M0130          | WASHING/RINSE HUB           | 01/01/2007- |
| 004  | 026 | 3150230          | GASKET                      | 01/01/2007- |
| 004  | 027 | 33M0360          | FLANGE                      | 01/01/2007- |
| 004  | 028 | LF50EMPS-Pos.028 | SCREW                       | 01/01/2007- |
| 004  | 029 | 33Q4190          | LOCK NUT                    | 01/01/2007- |
| 004  | 030 | LF50EMPS-Pos.030 | CLAMP Ø 44÷56               | 01/01/2007- |
| 004  | 031 | 3092680          | WASHER                      | 01/01/2007- |
| 004  | 032 | 3095440          | INTAKE PIPE FITTING COVER   | 01/01/2007- |
| 004  | 033 | 3100110          | RING NUT                    | 01/01/2007- |
| 004  | 034 | 33Q4180          | INTAKE PIPE FITTING ASS.Y   | 01/01/2007- |
| 004  | 035 | 37Q4190          | GASKET                      | 01/01/2007- |
| 004  | 036 | LF50EMPS-Pos.036 | SCREW M10X16                | 01/01/2007- |
| 004  | 037 | LF50EMPS-Pos.037 | WASHER                      | 01/01/2007- |
| 004  | 038 | LF50EMPS-Pos.038 | GASKET                      | 01/01/2007- |
| 004  | 039 | LF50EMPS-Pos.039 | NUT M10                     | 01/01/2007- |
| 004  | 040 | 3023290          | Overflow pipe               | 01/01/2007- |
| 004  | 041 | 3152690          | O RING                      | 01/01/2007- |
| 005  | 001 | 33M0500          | HUB+NUT                     | 01/01/2007- |
| 005  | 002 | 36G8540          | WASH BLADES 495X58X16       | 01/01/2007- |
| 005  | 003 | 3116590          | RINSE PIN                   | 01/07/2007- |
| 005  | 009 | 33Q3710          | RING NUT                    | 01/01/2007- |
| 005  | 013 | 3022680          | WASHING ARM                 | 01/01/2007- |
| 005  | 014 | 3116580          | RINSE ARM                   | 01/07/2007- |
| 005  | 015 | 3011210          | PLUG                        | 01/01/2007- |
| 005  | 016 | LF50EMPS-Pos.016 | O-RING                      | 01/01/2007- |
| 006  | 001 | 3112320          | ELECTRIC PANEL              | 01/01/2007- |
| 006  | 002 | 3112330          | PLATE                       | 01/01/2007- |
| 006  | 003 | 32W2140          | LAMP                        | 01/01/2007- |
| 006  | 004 | 32W2130          | LAMP                        | 01/01/2007- |
| 006  | 005 | LF50EMPS-Pos.005 | KEY                         | 01/01/2007- |
| 006  | 006 | 3028840          | SUPPORT KEY                 | 01/01/2007- |
| 006  | 007 | 3191300          | ON/OFF SWITCH               | 01/01/2007- |



| Page | Pos | Code    | Description           | Info        |
|------|-----|---------|-----------------------|-------------|
| 006  | 008 | 32Z8650 | MAGNETIC REED         | 01/01/2007- |
| 006  | 009 | 32V0560 | CONTACTOR             | 01/01/2007- |
| 006  | 010 | 32V3970 | PRESSURE SWITCH 30/40 | 01/01/2007- |
| 006  | 011 | 32D1700 | TERMINAL BOARD        | 01/01/2007- |
| 006  | 012 | 32V5640 | FILTER                | 01/01/2007- |
| 006  | 013 | 3207870 | ELECTRONIC TIMER      | 01/01/2011- |
| 006  | 014 | 3028850 | CYCLE PUSH-BUTTON     | 01/01/2007- |
| 006  | 015 | 3191310 | TIME SELECTOR SWITCH  | 01/01/2007- |
| 006  | 016 | 3028860 | KEY                   | 01/01/2007- |
| 006  | 017 | 3023850 | FUSE                  | 21/03/2008- |
| 006  | 018 | 3023860 | FUSE HOLDER           | 21/03/2008- |