

Зип Общепит
vsezip.ru
+7(812)987-08-81




MCF40E

Edition 20081001-


Зип Общепит

vsezip.ru

+7(812)987-08-81

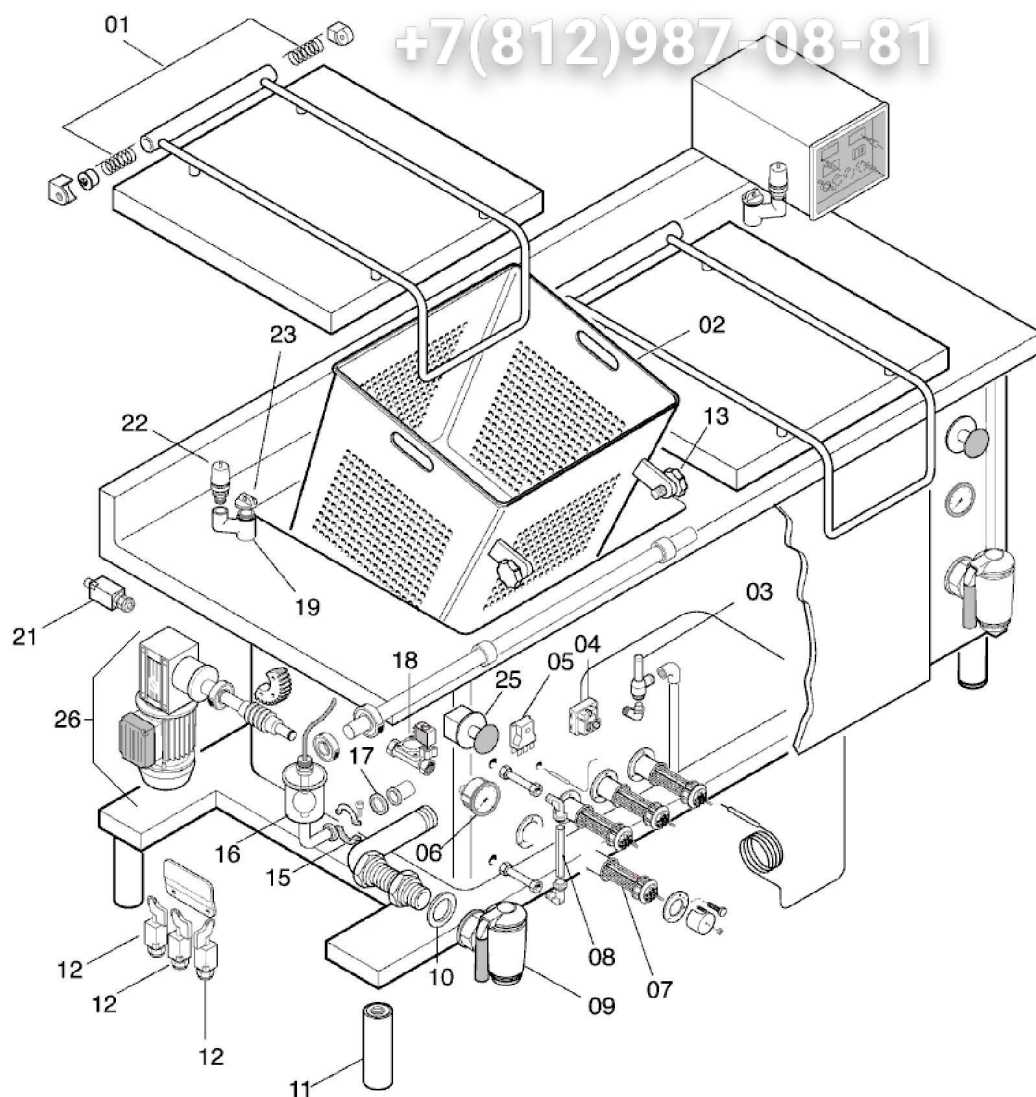

Зип Общепит
vsezip.ru
+7(812)987-08-81

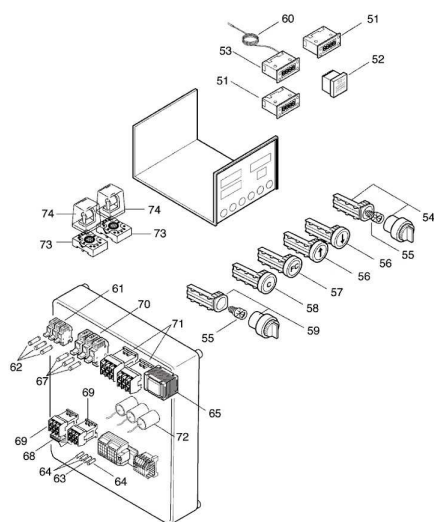

Page	Pos	Code	Description	Info
002	001	36H0950	COUPLE HINGE SPRINGS	01/01/2006-
002	002	36A2940	BASKET 20 Kg	01/01/2006-
002	003	3114210	PRESS. RELEASE VALVE 3/4"	01/01/2006-
002	004	32V0320	SAFETY THERMOSTAT	01/01/2006-
002	005	32V1790	PRESSURE-SWITCH	01/01/2006-
002	006	3176170	PRESSURE GAUGE 0-1 BAR	01/01/2006-
002	007	32G0310	HEATING ELEMENT 6KW - 230V	01/01/2006-
002	007	32G2750	HEATING ELEMENT 8KW	01/01/2006-
002	008	37N1430	PIPE	01/01/2006-
002	009	33D2291	"DRAIN COCK 2""	01/10/2008-
002	010	MCF40E-Pos.010	WASHER	01/01/2006-
002	011	MCF40E-Pos.011	FOOT 1-1/2"	01/01/2006-
002	012	3024740	MICROSWITCH	01/01/2006-
002	013	36M7310	HANDLE	01/01/2006-
002	015	MCF40E-Pos.015	COUPLE JAWS	01/01/2006-
002	016	3111810	WATER LEVEL SENSOR	01/01/2006-
002	017	MCF40E-Pos.017	GASKET	01/01/2006-
002	018	3114530	ELECTRIC VALVE 3/4"- 24V	01/01/2006-
002	019	MCF40E-Pos.019	EXPANSION BOX 3/8"	01/01/2006-
002	021	32W1770	MICROSWITCH	01/01/2006-
002	022	MCF40E-Pos.022	VACUUM VALVE 1/2"	01/01/2006-
002	023	36C4410	Plug	01/01/2006-
002	025	3030920	STOP PUSH BUTTON	01/01/2006-
002	026	3025430	SPEED REDUCER	01/06/2006-
003	051	32Z8130	TIMER	01/01/2006-
003	052	32Z4870	BUZZER	01/01/2006-
003	053	32Z8120	THERMOREGULATOR	01/01/2006-
003	054	32W1780	SWITCH 1-0-2	01/01/2006-
003	055	32W1830	WARNING LAMP	01/01/2006-
003	056	32W1820	PUSH BUTTON	01/01/2006-
003	057	32W1800	PUSH BUTTON	01/01/2006-
003	058	32W1790	PUSH BUTTON	01/01/2006-
003	059	32W1810	SWITCH ON-OFF	01/01/2006-
003	060	32Z8140	PROBE	01/01/2006-
003	061	MCF40E-Pos.061	FUSE HOLDER	01/01/2006-
003	062	3114620	FUSE 2A 10x38	01/01/2006-
003	063	MCF40E-Pos.063	FUSE 4A T 5x20	01/01/2006-
003	064	MCF40E-Pos.064	FUSE 500mA T 5x20	01/01/2006-
003	065	MCF40E-Pos.065	TRANSFORMER 230- 400/12-0-12V 50VA	01/01/2006-
003	067	MCF40E-Pos.067	FUSE 40A GL 14x51	01/01/2006-
003	068	3114610	THERMIC RELAY	01/01/2006-
003	069	3114550	RELAY	01/01/2006-
003	070	MCF40E-Pos.070	FUSE HOLDER	01/01/2006-
003	071	MCF40E-Pos.071	RELAY	01/01/2006-
003	072	3114540	THREE CAPACITOR	01/01/2006-
003	073	3012810	RELAY HOLDER	01/01/2006-
003	074	3012800	RELAY	01/01/2006-