

Exploded diagram and spare parts list

T316

Вип Общепит

vsezip.ru

+7(812)987-08-81

Exploded diagram and spare parts list:


For machines of PO151218 and onwards:

[Click here](#)

For Machines Previous to PO151218:

[Click here](#)

**Previous to
PO151218**

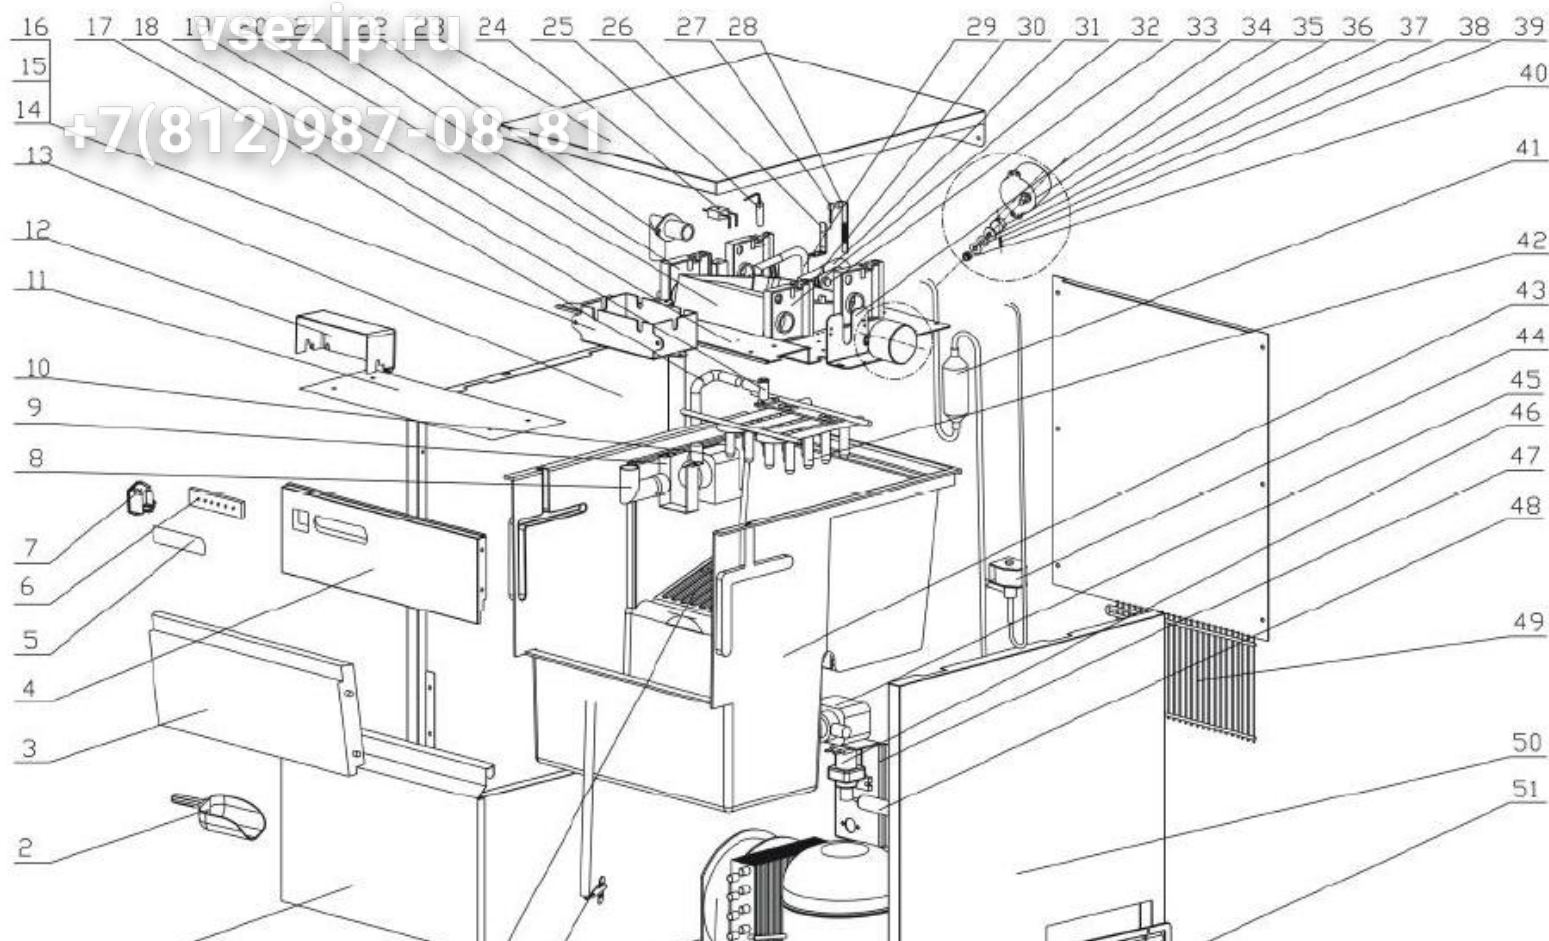

Exploded diagram and spare parts list

T316 **Вип Общепит**

For Machines Previous to PO151218

vsezip.ru

+7(812)987-08-81

Machine	Explode	Code	Description
T316 Polar Mains-Fill Ice Cube Maker - 20kg	1	AA220	Bottom Panel
T316 Polar Mains-Fill Ice Cube Maker - 20kg	2	AA221	Ice Scoop
T316 Polar Mains-Fill Ice Cube Maker - 20kg	3	AA222	Switch Panel
T316 Polar Mains-Fill Ice Cube Maker - 20kg	4	AA223	Upper Panel
T316 Polar Mains-Fill Ice Cube Maker - 20kg	5	AA224	PVC Cover
T316 Polar Mains-Fill Ice Cube Maker - 20kg	6	AA225	Indicator Panel
T316 Polar Mains-Fill Ice Cube Maker - 20kg	7	AA226	Power Switch
T316 Polar Mains-Fill Ice Cube Maker - 20kg	8	AA227	Silicon Rubber Tube
T316 Polar Mains-Fill Ice Cube Maker - 20kg	9	AA228	Fixer for Pump
T316 Polar Mains-Fill Ice Cube Maker - 20kg	10	AA229	Overflow Pump
T316 Polar Mains-Fill Ice Cube Maker - 20kg	11	AA230	Mounting Plate for Operational Cover
T316 Polar Mains-Fill Ice Cube Maker - 20kg	12	AA231	Operation Panel Cover
T316 Polar Mains-Fill Ice Cube Maker - 20kg	13	AA232	Right Panel
T316 Polar Mains-Fill Ice Cube Maker - 20kg	14	AA233	Control Box
T316 Polar Mains-Fill Ice Cube Maker - 20kg	15	AA234	Control Board (V4 version)
T316 Polar Mains-Fill Ice Cube Maker - 20kg	16	AA235	Control Box Cover
T316 Polar Mains-Fill Ice Cube Maker - 20kg	17	AA236	Inlet Tube for Water Rinsing
T316 Polar Mains-Fill Ice Cube Maker - 20kg	18	AA237	Water Pipe
T316 Polar Mains-Fill Ice Cube Maker - 20kg	19	AA238	Upper Fixing Plate
T316 Polar Mains-Fill Ice Cube Maker - 20kg	20	AA239	Water Box

Exploded diagram and spare parts list

T316

Зип Общепит

T316 Polar Mains-Fill Ice Cube Maker - 20kg	43	AA262	Cabinet Liner
T316 Polar Mains-Fill Ice Cube Maker - 20kg	44	AA263	Magnetic Valve
T316 Polar Mains-Fill Ice Cube Maker - 20kg	45	AA264	Water Pump (model:AP1200)
T316 Polar Mains-Fill Ice Cube Maker - 20kg	46	AA265	Water Inlet Valve
T316 Polar Mains-Fill Ice Cube Maker - 20kg	47	AA266	Water Valve Fixer
T316 Polar Mains-Fill Ice Cube Maker - 20kg	48	AA267	Filter
T316 Polar Mains-Fill Ice Cube Maker - 20kg	49	AA268	Steel Grill
T316 Polar Mains-Fill Ice Cube Maker - 20kg	50	AA269	Left Panel
T316 Polar Mains-Fill Ice Cube Maker - 20kg	51	AA270	Grill
T316 Polar Mains-Fill Ice Cube Maker - 20kg	52	AA271	Compressor
T316 Polar Mains-Fill Ice Cube Maker - 20kg	53	AA272	Condenser
T316 Polar Mains-Fill Ice Cube Maker - 20kg	54	AA273	Fan
T316 Polar Mains-Fill Ice Cube Maker - 20kg	55	AA274	Fan Supporter
T316 Polar Mains-Fill Ice Cube Maker - 20kg	56	AA275	Compressor Fixing Board
T316 Polar Mains-Fill Ice Cube Maker - 20kg	57	AA276	Feet
T316 Polar Mains-Fill Ice Cube Maker - 20kg	58	AA277	Ice Level Sensor
T316 Polar Mains-Fill Ice Cube Maker - 20kg	59	AA278	Ice Level Sensor Fixer
T316 Polar Mains-Fill Ice Cube Maker - 20kg	60	AA279	Sloped Surface