

Зип Общепит  
vsezip.ru  
+7(812)987-08-81




**070FTE04**

**Edition 20080131-**

Зип Ощепит

vsezip.ru

+7(812)987-08-81

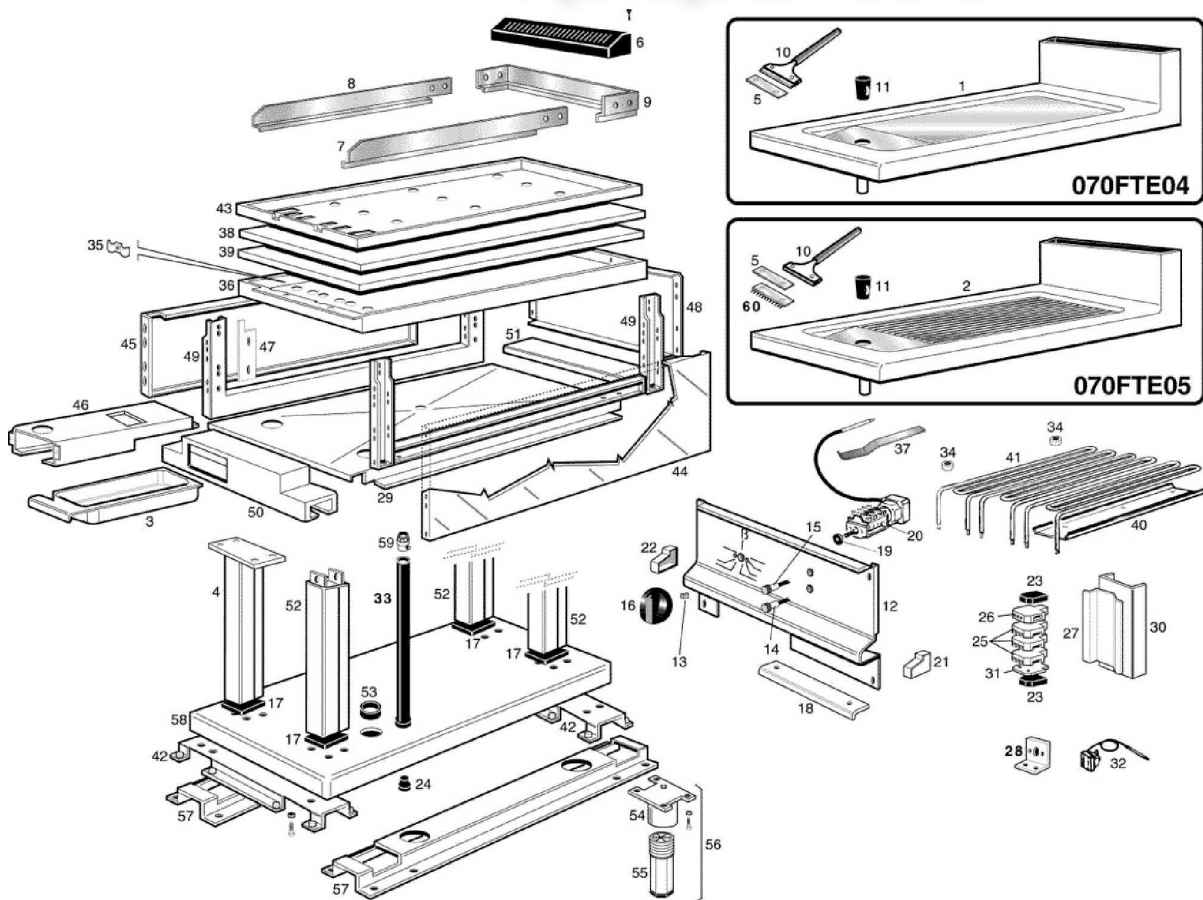

| Pos | Code    | Description             | Info        |
|-----|---------|-------------------------|-------------|
| 001 | 30M1990 | SMOOTH PLATE ASS. Y     | 01/09/1996- |
| 003 | 35W0330 | TRAY                    | 01/09/1996- |
| 004 | 30A3300 | RISER                   | 01/09/1996- |
| 005 | 36X0010 | BLADE                   | 01/09/1996- |
| 006 | 35Q5680 | FLUE GUARD              | 01/09/1996- |
| 007 | 30A2980 | SPLASH GUARD            | 01/09/1996- |
| 008 | 30A2990 | SPLASH GUARD            | 01/09/1996- |
| 009 | 35C2550 | SPLASH GUARD            | 01/09/1996- |
| 010 | 36X0020 | SCRAPER                 | 01/09/1996- |
| 011 | 3115040 | PLUG                    | 31/01/2008- |
| 012 | 35C2730 | UPPER CONTROL           | 01/09/1996- |
| 013 | 3170290 | BOARD KNOB SPRING       | 01/09/1996- |
| 014 | 6300651 | ORANGE LIGHT 400V ASS.Y | 23/05/2007- |
| 015 | 6300652 | GREEN LIGHT 400V ASS.Y  | 23/05/2007- |
| 016 | 36M2400 | ELECTRIC CONTROL KNOB   | 01/09/1996- |
| 017 | 36D3911 | UPRIGHT OUTSOLE         | 01/09/1996- |
| 018 | 35V7580 | BRACKET                 | 01/09/1996- |
| 019 | 3150790 | THERMOSTAT PROTECT.     | 01/09/1996- |
| 020 | 32Z7400 | THERMOSTAT 100- 260° C  | 01/09/1996- |
| 021 | 36D3420 | RH END SIDE             | 01/09/1996- |
| 022 | 36D3430 | LH END SIDE             | 01/09/1996- |
| 023 | 32D0870 | TERMINAL CLAMP          | 01/09/1996- |
| 024 | 32D0820 | BUSHING                 | 01/09/1996- |
| 025 | 32D0840 | LIVE TERMINAL           | 01/09/1996- |
| 026 | 32D0860 | GROUND TERMINAL         | 01/09/1996- |
| 027 | 32D0540 | "OMEGA" BRACKET         | 01/09/1996- |
| 028 | 35S6361 | L" SHAPED BAR           | 01/09/1996- |
| 029 | 35Q8580 | LOWER GUARD             | 01/09/1996- |
| 030 | 35V8090 | TERM. BOARD SUPPORT     | 01/09/1996- |
| 031 | 32D0850 | TERMINAL                | 01/09/1996- |
| 032 | 32Z9202 | SAFETY THERMOSTAT       | 10/11/2004- |
| 033 | 35X3720 | CABLE INLET PIPE        | 01/09/1996- |
| 034 | 36C1320 | SPACER                  | 01/09/1996- |
| 035 | 35T3540 | BULB HOLDER             | 01/09/1996- |
| 036 | 35D1560 | INSULATION PANEL COVER  | 01/09/1996- |
| 037 | 35V8630 | SPRING                  | 01/09/1996- |
| 038 | 37Q1060 | INSULATING PANEL        | 01/09/1996- |
| 039 | 37Q1050 | INSULATING PANEL        | 01/09/1996- |
| 040 | 35V1630 | "U" BRACKET             | 01/09/1996- |
| 041 | 32G1870 | HEATING ELEMENT         | 01/09/1996- |
| 042 | 35V2770 | LOWER CROSS MEMBER      | 01/09/1996- |
| 043 | 35V1640 | HEATING EL. SUPPORT     | 01/09/1996- |
| 044 | 35A8210 | RH PANEL                | 01/09/1996- |
| 045 | 35A8220 | LH PANEL                | 01/09/1996- |
| 046 | 35V8010 | TRAY GUIDE              | 01/09/1996- |
| 047 | 35Q4630 | CONT. BOARD PROTECT.    | 01/09/1996- |
| 048 | 35A8340 | REAR PANEL              | 01/09/1996- |
| 049 | 30T1780 | SIDE FRAME ASS. Y       | 01/09/1996- |
| 050 | 35V8020 | FRONT CROSS MEMBER      | 01/09/1996- |
| 051 | 35U3560 | FRAME FRONT CROSS SECT. | 01/09/1996- |
| 052 | 30A1691 | RISER                   | 01/09/1996- |

| Pos | Code    | Description                | Info        |
|-----|---------|----------------------------|-------------|
| 053 | 32X0130 | GROMMET Ø29-Ø37            | 01/09/1996- |
| 054 | 36D9360 | FOOT HOUSING ASS. Y        | 01/09/1996- |
| 055 | 36D9350 | STAINLESS STEEL FOOT       | 01/09/1996- |
| 056 | 36D9340 | STAINLESS STEEL            | 01/09/1996- |
| 057 | 35U7371 | FOOT ASS.Y "OMEGA" BRACKET | 01/09/1996- |
| 058 | 35M3120 | UNDER SHELF                | 01/09/1996- |
| 059 | 32D0810 | JOINT 3/4"                 | 01/09/1996- |
| 061 | 32Q0690 | CABLES ASS.Y               | 01/09/1996- |