

Ryhmä: 341

LM-130 MEAT MINCER

Зип-Общепит

vsezip.ru

+7(812)987-08-81

Code	Item name
LM130003	LM-130 ENTRY NUT
LM130007	LM-130 GRINDING HOUSE CAST IRON
LM130007,1	LM-130 GRINDING HOUSE STAINLESS
LM130008	LM-130 PRECUTTER
LM130009	LM-130 KNIFE
LM130010	LM-130 HOLEPLATE
LM130012	LM-130 HOLEPLATE
LM130013/1	LM-130 DISTANCE RING 13mm
LM130013/2	LM-130 DISTANCE RING 30mm
LM130014	LM-130 STUD
LM130015	LM-130 BEARING TRESTLE
LM130016	LM-130 PROTECTIVE PLATE
LM130017	LM-130 LOCK NUT KM 10
LM130019	LM-130 BEARING 3210
LM130024	LM-130 DRIVE SHAFT
LM130026	LM-130 BEARING 6210 2RS
LM130027	LM-130 BUSHING
LM130030	LM-130 MOTOR 7,5 kW
LM130048	LM-130 FRONT PLATE
LM130103	LM-130 PULLEY
LM130104	LM-130 BELT XPZ-1060
LM130105	LM-130 GEARBOX
LM130107	LM-130 TURNBUCKLE
LM130108	LM-130 PULLEY
LM130137	LM-130 KEY
LM130138	LM-130 GASKET AS 45x62x10
LM130139	LM-130 KEY
LM130140	LM-130 KEY
LM130141	LM-130 KEY
LM130143	LM-130 WHEEL WITH BRAKE
LM130144	LM-130 WHEEL
LM130150	LM-130 COVER
LM130151	LM-130 EMERGENCY STOP BUTTON
LM130152	LM-130 PROTECTIVE RUBBER
LM130153	LM-130 START BUTTON
LM130154	LM-130 STOP BUTTON
LM130159	LM-130 CONTACTOR DILM 17-10 24V
LM130160	LM-130 THERMAL OVERLOAD RELAY ZB 32-24
LM130161	LM-130 FEED SCREW (INCL.PART 14)
LM130163	LM-130 CABLE GLAND
LM130164	LM-130 CABLE
LM130165	LM-130 PLUG
LM130171	LM-130 ENTRY NUT KEY
LM130172	LM-130 KEY FOR FEEDSCREW
LM130173	LM-130 TRANSFORMER
LM130180	LM-130 CONNECTION BOX
LM130181	LM-130 BACK COVER
LM130182	LM-130 CASING
LM130183	LM-130 MEAT TRAY
LM130184	LM-130 FEEDING HAMMER
LM130185	LM-130 CLEANING BRUSH
LM130200	LM-130 BEARING TRESTLE, COMPLETE INCL.PARTS 15-17,19,24,26,140)

vsezip.ru

This exploded view diagram illustrates the assembly of a mechanical unit. The components are numbered as follows:

- 01, 01.1:** Main housing or frame.
- 02, 03, 03.1, 03.2:** Flange or mounting plate components.
- 04, 05, 06:** Small fasteners or pins.
- 07, 08, 09, 10, 12, 13/1, 13/2:** Various seals, gaskets, and small components.
- 14, 16, 17, 19, 24, 26, 27:** Bolts, nuts, and small hardware.
- 15, 161, 162, 171, 172:** Long shafts or rods.
- 18, 20, 21, 22, 23, 25, 28, 29:** Various small components and fasteners.
- 30:** A large cylindrical component, possibly a motor or pump.
- LM-130, LM-42, LM-43:** Specific assembly points or sub-assemblies.

The diagram shows the spatial relationship between these parts, indicating how they fit together to form the complete unit.

Зип Общепит

vsezip.ru

+7(812)987-08-81

