

CME1056 Service Parts


This is the parts list for the CME1056 ice machine. The CME1056 was manufactured in A, D, E and F series, as well as single phase 60 Hz, single phase 50 Hz, and three phase.

The E series change was to side panels for water cooled models. The F series change was to the water cooled condenser.

In order to obtain the correct part, always confirm the model number and voltage of the machine the part is being ordered for and compare that information to the description of the part.

Table of Contents

Cabinet	2
Freezing Chamber Components	3
Interior Components	4
Air Cooled Refrigeration	5
Air Cooled Condenser & Fan Motor	6
Water Cooled Refrigeration	7
Water Pump and Valves	8
Water System	9
Electrical	10
Ice Storage Bin, HTB555	11
Single Phase Wiring Diagram, D - F Series	12
Single Phase Schematic Diagram, D - F Series	13
Three Phase Wiring Diagram, D - F Series	14
Single Phase Wiring Diagram, A Series	15
Single Phase Schematic Diagram, A Series	16
Three Phase Wiring Diagram, A Series	17
Three Phase Schematic Diagram	18

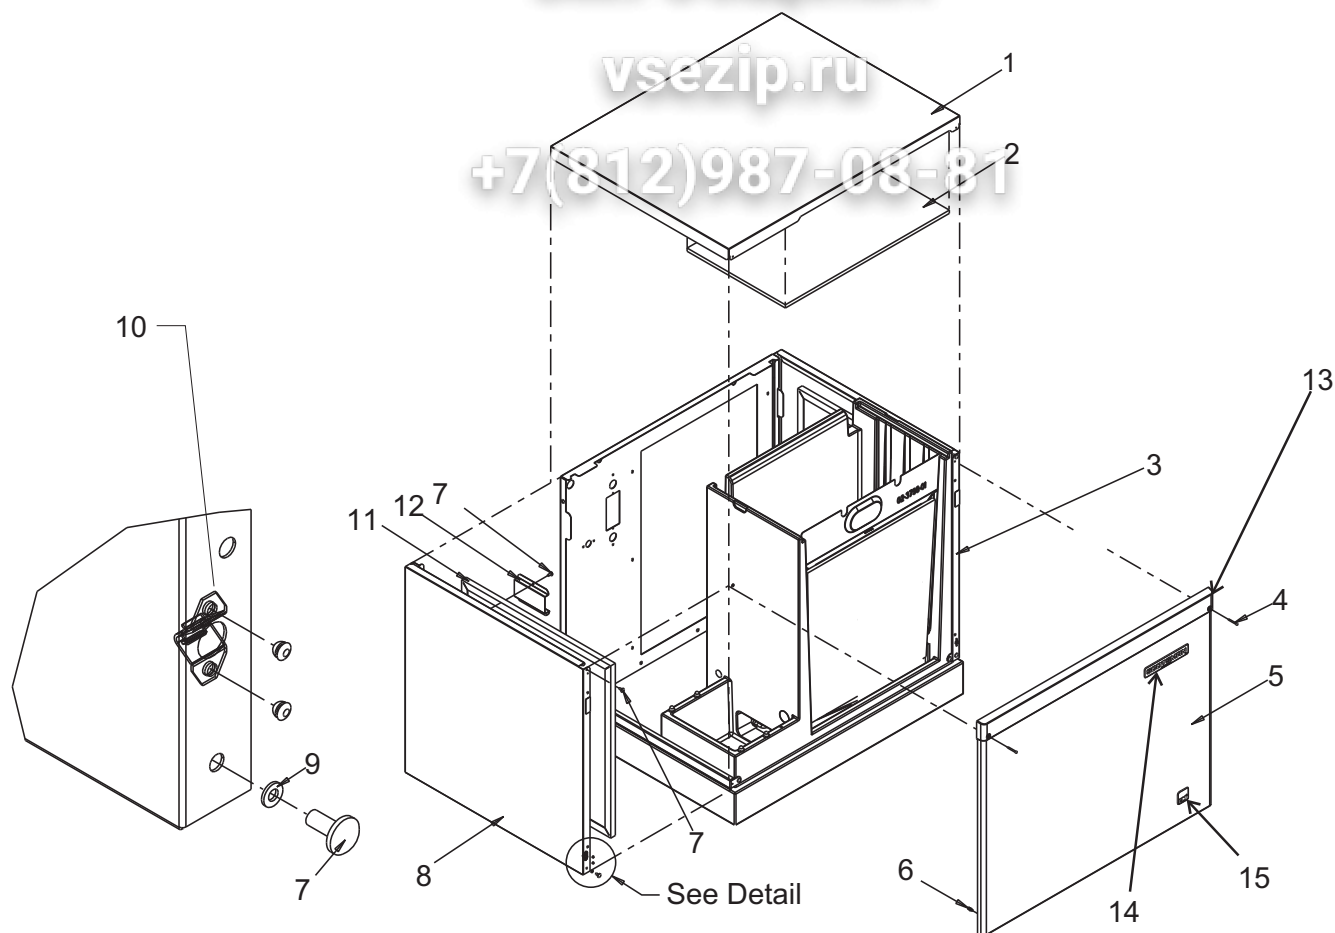


Item Number	Page Number	Description
1	A35965-001	Top panel, painted
	A35965-002	Top panel, stainless steel
	02-3822-22	Top panel, plastic (D series and up) - 03-1423-06 is the speed nut for this panel.
2	02-3783-01	Insulation
3	A35963-021	Air cooled right side panel, painted
	A35963-022	Air cooled right side panel, stainless steel
	A37071-021	Water cooled right side panel, painted
	A37071-022	A - D series water cooled right side panel, stainless steel
	A38126-021	E and higher series water cooled right side panel, stainless steel
4	03-1735-01	Front panel screw
5	02-3797-21	Plastic front panel, includes 13, 14, and 15
	A37488-021	Stainless steel front panel, includes 13, 14 and 15
6	03-1733-01	Ball stud (strike)
7	03-1531-01	Screw
8	A35962-021	Air cooled left side panel, painted
	A37070-021	Water cooled left side panel, painted
	A35962-022	Air cooled left side panel, stainless steel
	A37070-022	A - D series water cooled left side panel, stainless steel
	A38127-021	E and higher series water cooled left side panel, stainless steel
9	03-1417-27	Lockwasher
10	03-1733-02	Catch
11	02-3485-01	Air filter
12	A37326-001	Bracket
13	02-3794-01	Trim strip. 03-1731-02 Retainers for trim strip
14	15-0808-03	Scotsman emblem
15	15-0792-02	CM³ emblem

CME1056 Service Parts

Freezing Chamber Components

Item Number	Part Number	Description
1	A37370-021	Evaporator set (3)
2	02-3765-01	Cascading shield
3	11-0540-21	Ice sensor set
4	A37759-002	Water compartment
5	02-3798-01	Evaporator cover
6	02-3810-01	Insulation for evap cover
7	02-3337-02	Ice deflector
8	03-1691-01	Nylon screw
9	02-3782-01	Bin stat plug
10	02-3779-02	Evap seal
11	02-3779-03	Evap seal
12	02-3778-01	Trough, back evap only

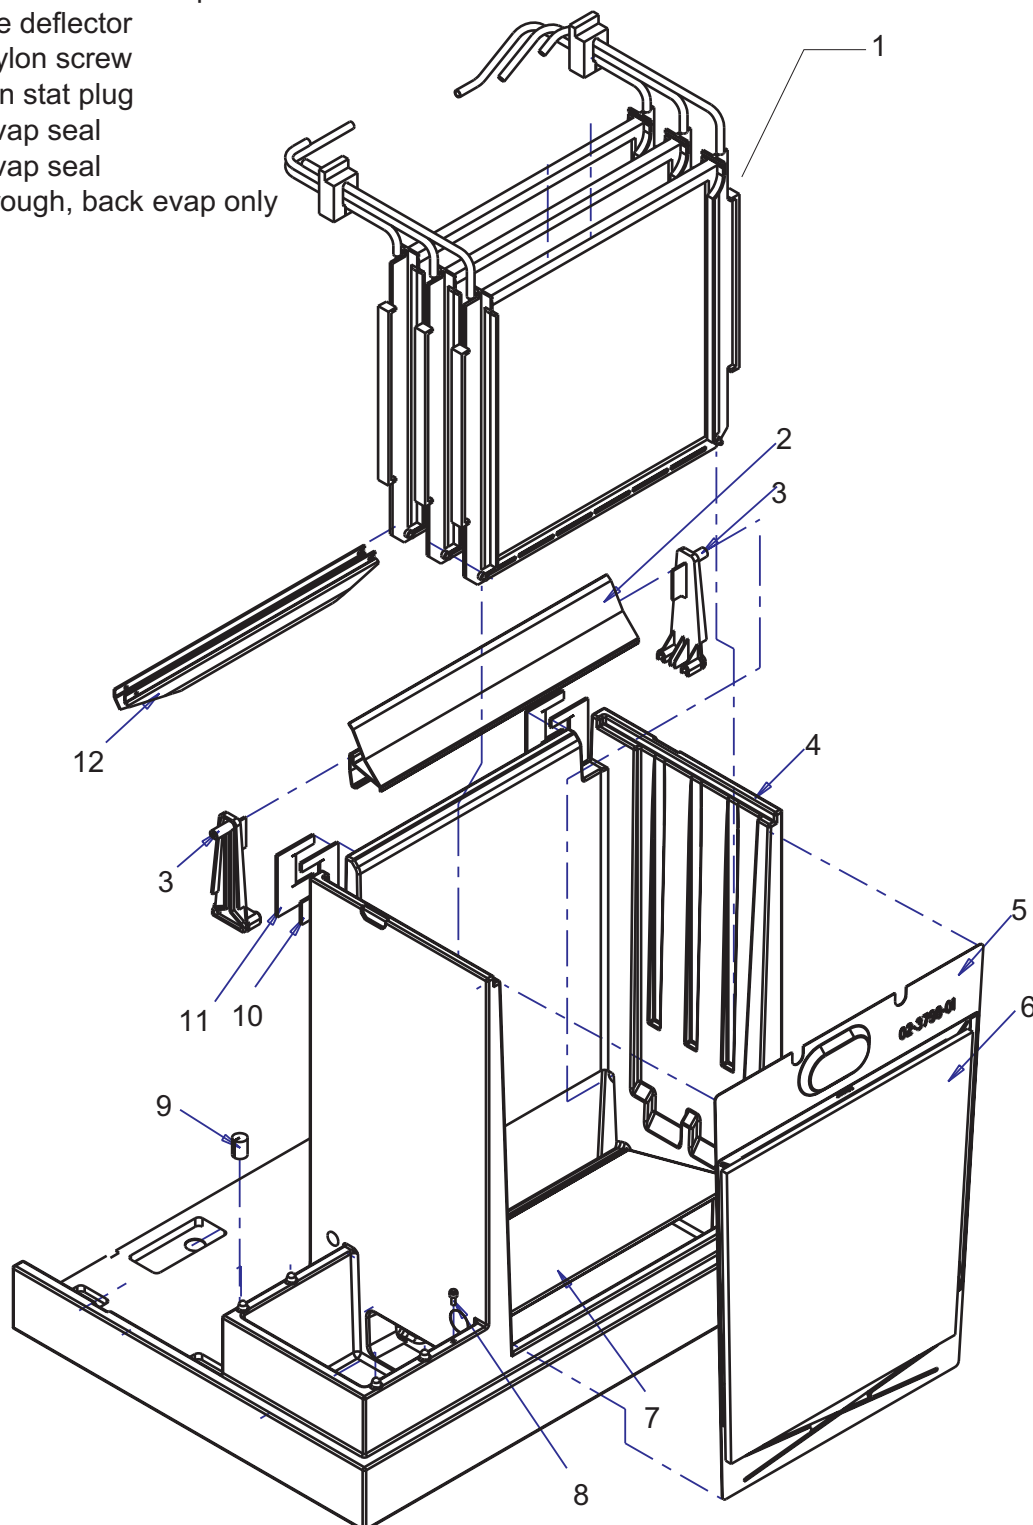


CME1056 Service Parts

Interior Components

3ит.Общепит

vsezip.ru

+7(812)987-08-81

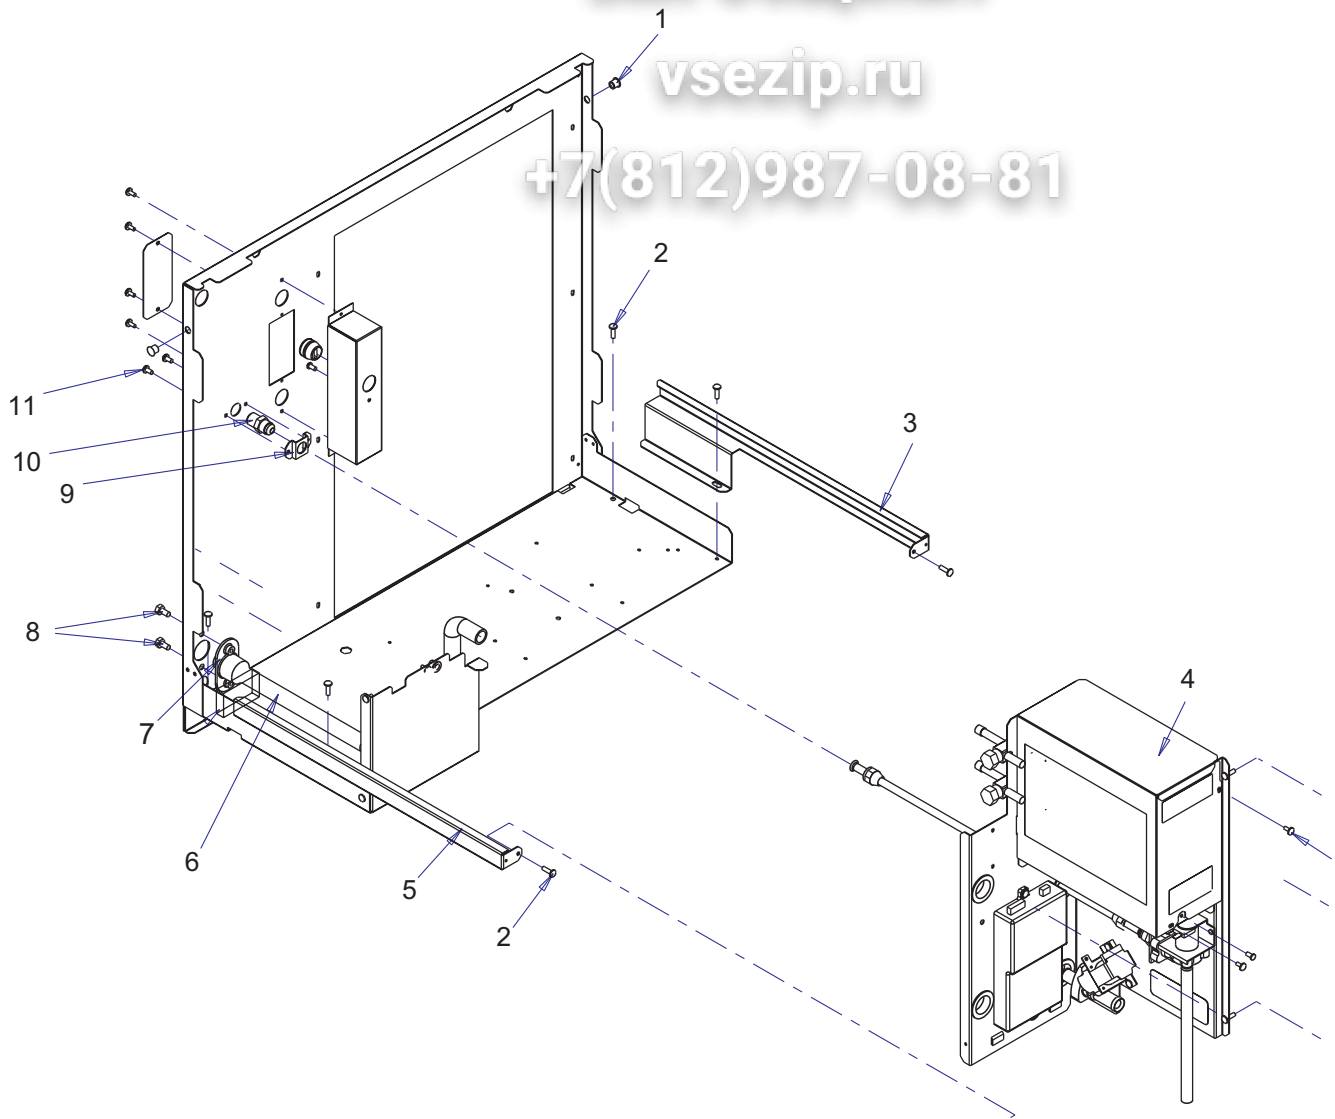

Item Number	Part Number	Description
1	02-1875-03	Hole plug
2	03-1404-18	Screw
3	A37400-001	Right channel
4	A37468-001	Control box cover
5	A37399-001	Left channel
6	02-3763-01	Drain hose
7	02-3692-21	Drain fitting w/screws
8	03-0571-00	Screw
9	A37232-001	Fitting bracket
10	16-1036-01	Inlet fitting
11	03-1531-01	Screw

vsezip.ru


+7(812)987-08-81

All compressors include a drier. Single phase also include starting components. All overloads are internal.

November 2007
Page 5

CME1056 Service Parts


Air Cooled Condenser Fan Motor

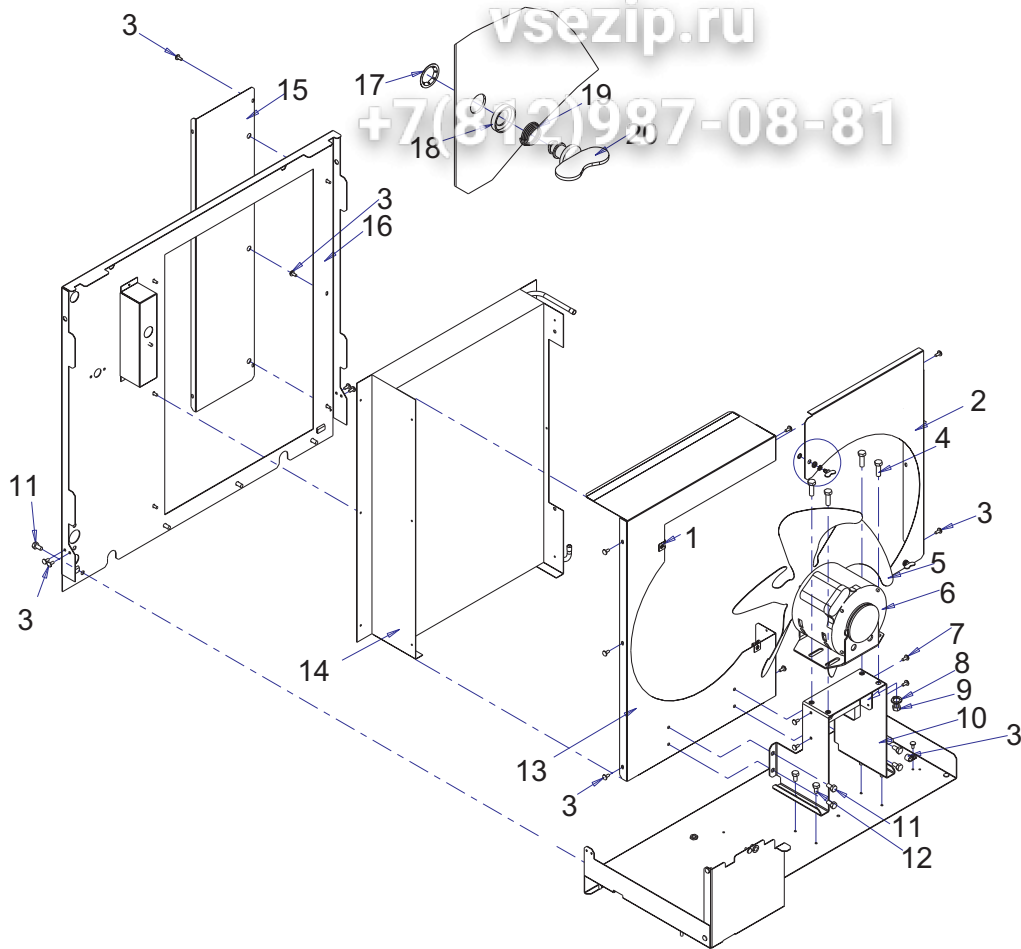

Item Number	Part Number	Description
1	03-1731-05	Clip
2	A37376-001	Shroud top
3	03-1531-01	Screw
4	03-1251-01	Hex bolt
5	18-8765-03	Fan blade
6	18-8830-21	Fan motor, 1100 RPM
7	03-1638-03	Screw
8	03-1410-04	Lockwasher
9	03-1406-10	Hex nut
10	A37382-001	Fan bracket
11	03-1645-01	Screw
12	03-1732-01	Screw
13	A37381-001	Shroud
14	18-8824-21	Air cooled condenser
15	A37417-001	Baffle
16	A37372-001	Back panel
17	03-1731-02	Push on retainer
18	03-1731-04	Washer
19	03-1731-03	Spring
20	03-1731-01	Wing screw

CME1056 Service Parts

Water Cooled Refrigeration

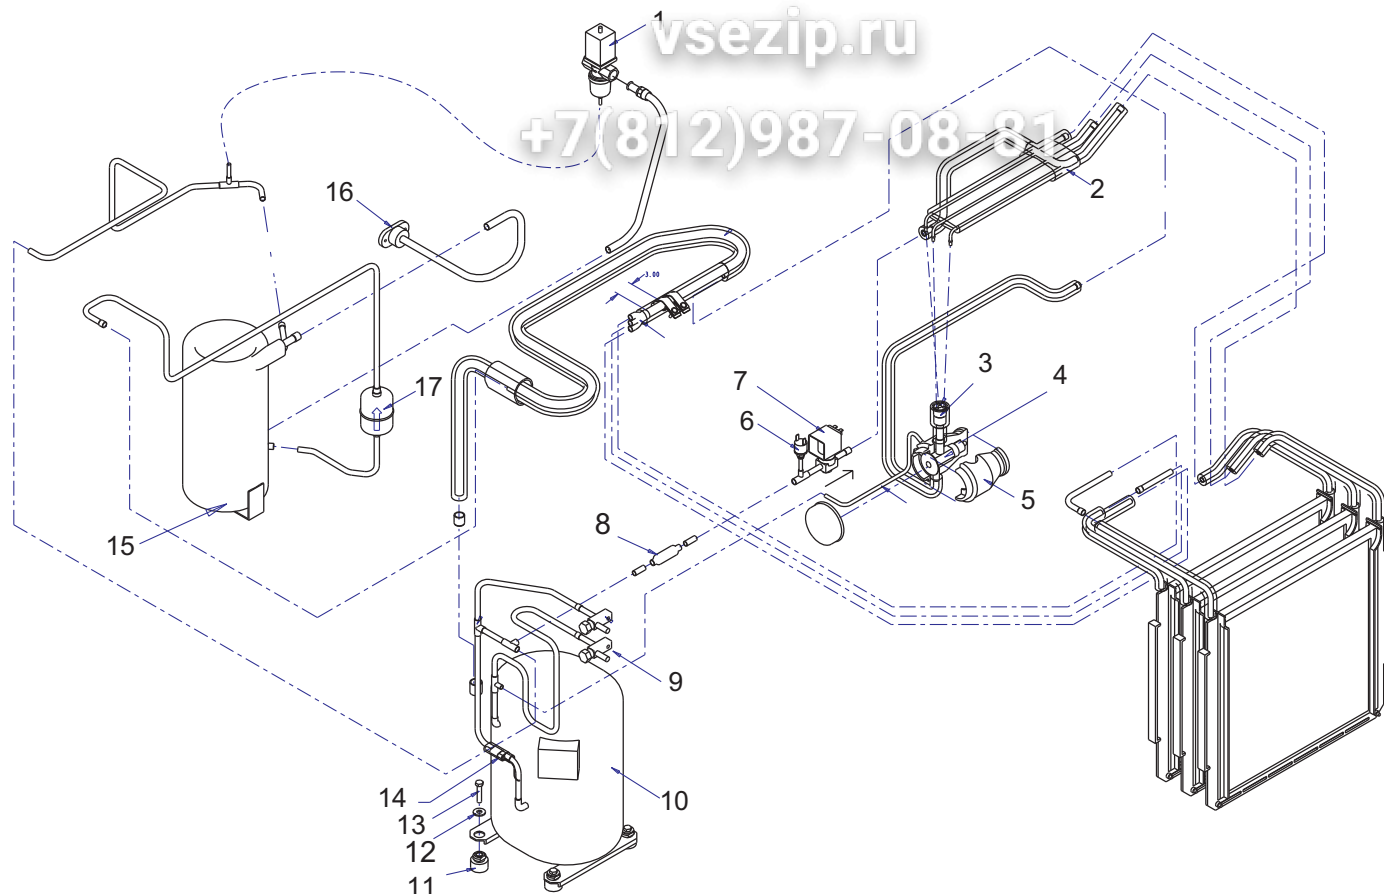


Item Number	Part Number	Description	Item Number	Part Number	Description
1	11-0478-01	Water reg. valve	11	18-2300-27	Mounting grommet
2	16-1051-01	Hot gas header		18-2200-27	Mounting sleeve
3	16-1058-01	Distributor	12	03-1407-07	Washer
4	16-1076-21	TXV	13	03-1405-20	Cap screw
5	02-4406-01	TXV insulation	14	02-3410-21	Discharge temp sensor
6	11-0501-21	Hi pressure cut out	15	18-6900-25	A thru E series water cooled condenser
7	12-2471-24	Hot gas valve - 4T3		18-8874-21	F & up series water cooled condenser
	12-2719-23	Hot gas valve coil only	16	A31828-003	Drain casting
	12-2733-30	Hot gas valve repair kit, no coil, no body	Not Shown:		
8	16-1063-01	Hot gas valve strainer	17	A37373-001	Back panel for water cooled
9	16-0832-21	Access valve			
	16-0832-03	Port cap			
	16-0832-02	Stem cap			
10	18-8749-22	Compressor. 208-230/60/1			
	CS14K6E-PFV-276				
	18-8749-24	Compressor. 208-230/60/3			
	CS14K6E-TF5-276				
	18-8749-27	Compressor. 220-240/50/1			
	CS14K6E-PFJ-276				

All compressors include a drier. Single phase also include starting components. All overloads are internal.

CME1056 Service Parts

Water Pump and Valves

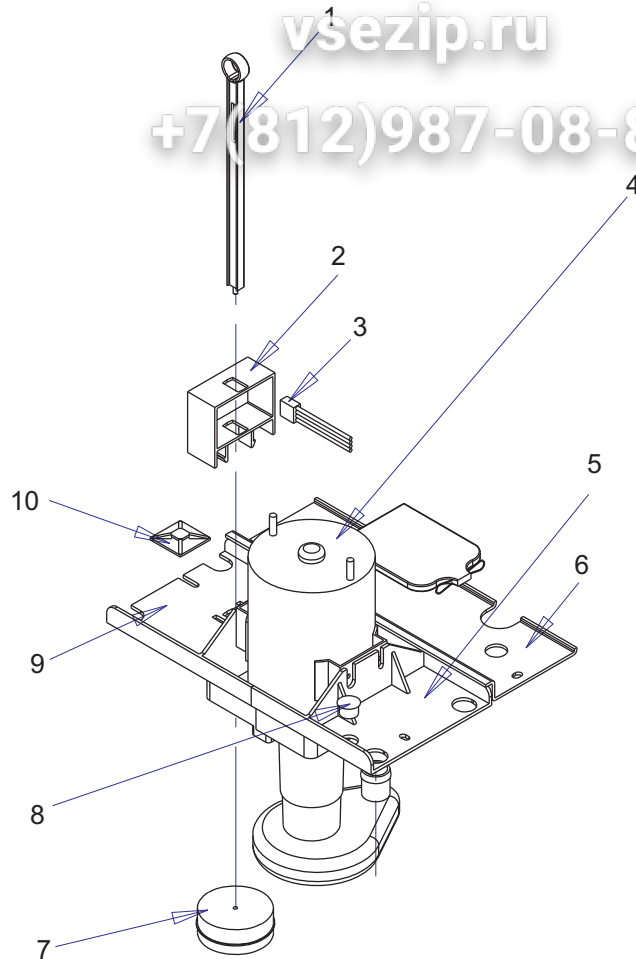


Item Number	Part Number	Description
1	02-3777-01	Float stick
2	11-0539-51	Water level sensor
3	12-2506-01	Harness
4	12-2714-21	Water pump - 208-230
5	02-3388-06	Pump bracket
6	02-3764-01	Sump cover
7	02-3341-01	Float
8	02-1875-05	Hole plug
9	02-3388-04	Pump bracket
10	03-1736-01	Mount for cable tie

CME1056 Service Parts

Всё что нужно для ремонта

vsezip.ru

+7(812)987-08-81

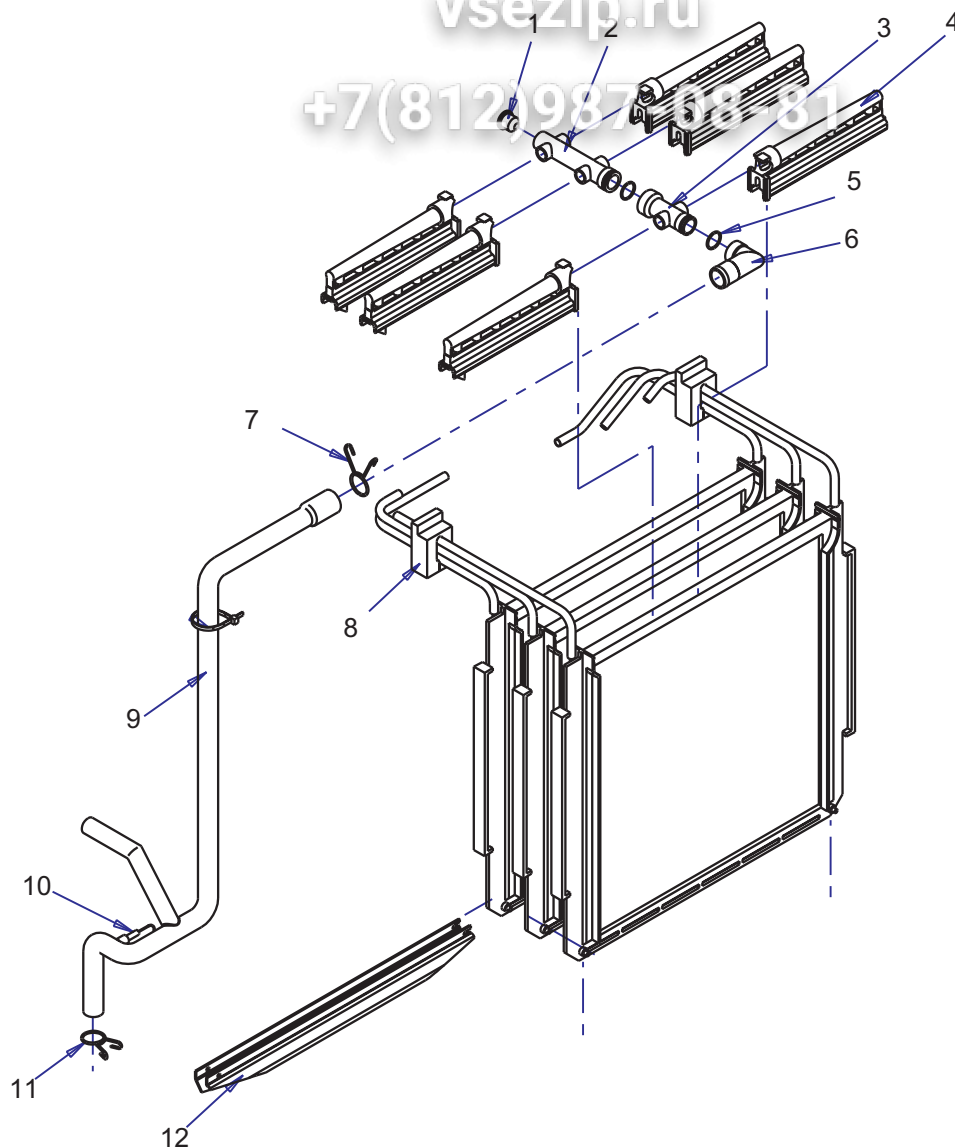


Item Number	Part Number	Description
1	13-0840-01	Plug
2	02-3518-01	Manifold
3	02-3519-01	Manifold
4	02-2527-01	Water distributor
5	13-0617-48	O ring
6	02-3613-01	Elbow
7	02-3791-01	Hose clamp
8	02-3779-01	Grommet
9	02-3762-01	Pump hose
10	02-3410-21	Water temp sensor (with discharge temp sensor)
11	02-3725-01	Hose clamp
12	02-3778-01	Trough, for back plate only

CME1056 Service Parts

Электрика

vsezip.ru

+7(812)987-08-81

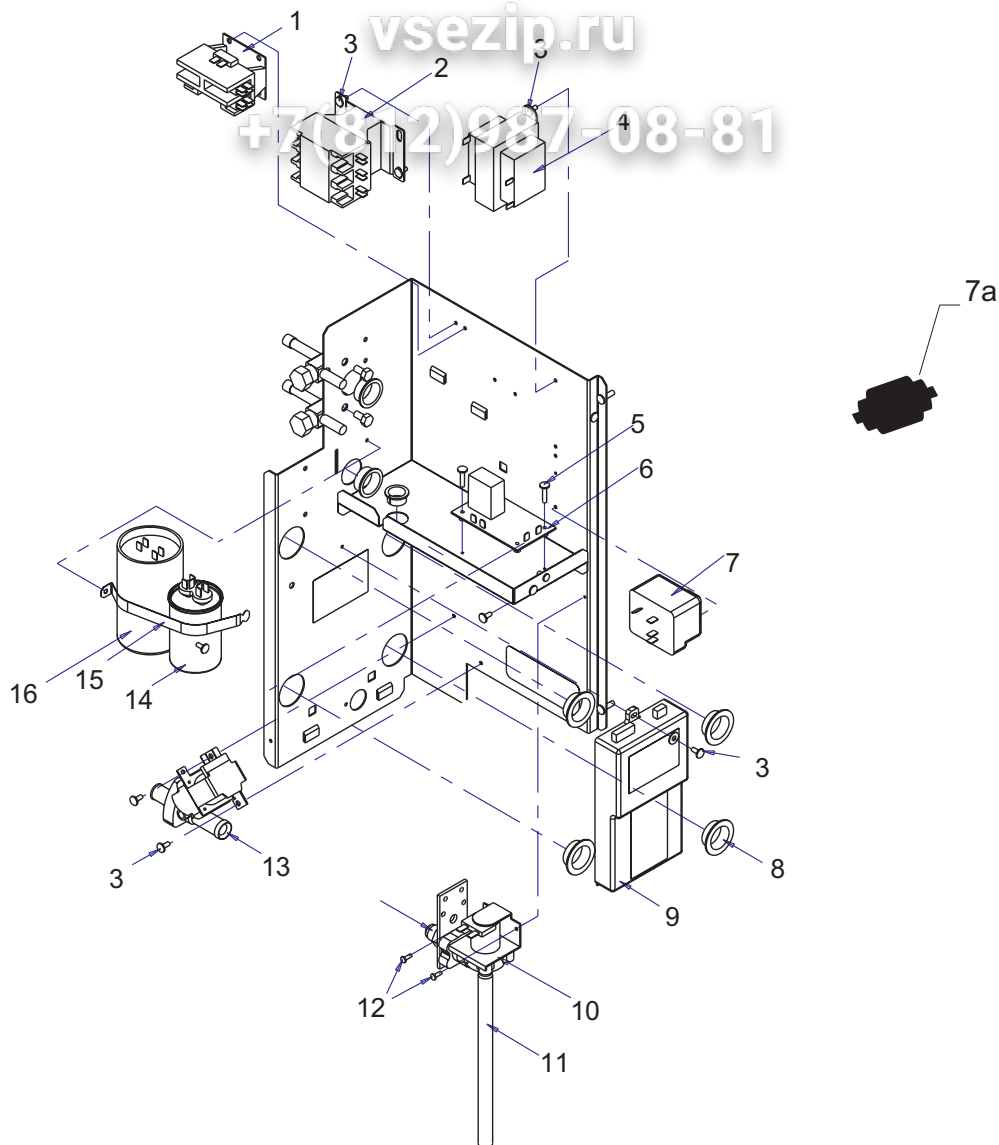

Item Number	Part Number	Description
1	12-2469-01	Single phase contactor
2	12-2533-01	Three phase contactor
3	03-1531-01	Screw
4	A37217-001	Transformer
5	03-1638-01	Screw
6	11-0531-21	Purge valve timer
7	18-1903-46	60 Hz compressor relay
	18-1903-33	50 Hz compressor relay
7a	18-8835-01	PTCR D series
8	12-1213-12	Snap bushing
9	12-2838-23	Controller
10	12-2666-01	Inlet water valve
11	13-0674-02	Tube, order 1 unit. Cut to 8 in.


Item Number	Part Number	Description
12	03-1404-05	Screw
13	11-0514-01	Purge valve
14	18-1902-55	Run capacitor
15	A37366-001	Strap
16	18-1901-48	Start capacitor
Not Shown		
17	12-2713-01	Lo volt harness, A series
	12-2818-01	Lo volt harness, D+ series
18	12-2476-01	Hi volt harness, A series
	12-2784-01	Hi volt harness, D+ series
Bin Thermostat System Components		
19	11-0521-21	Bin thermostat
20	02-3740-01	Bracket
21	03-1675-03	Knob
22	12-2701-01	Bin thermo harness
23	12-2699-01	Stacking kit harness

CME1056 Service Parts

Ice Storage Bin, HI 3055

vsezip.ru

+7(812)987-08-81

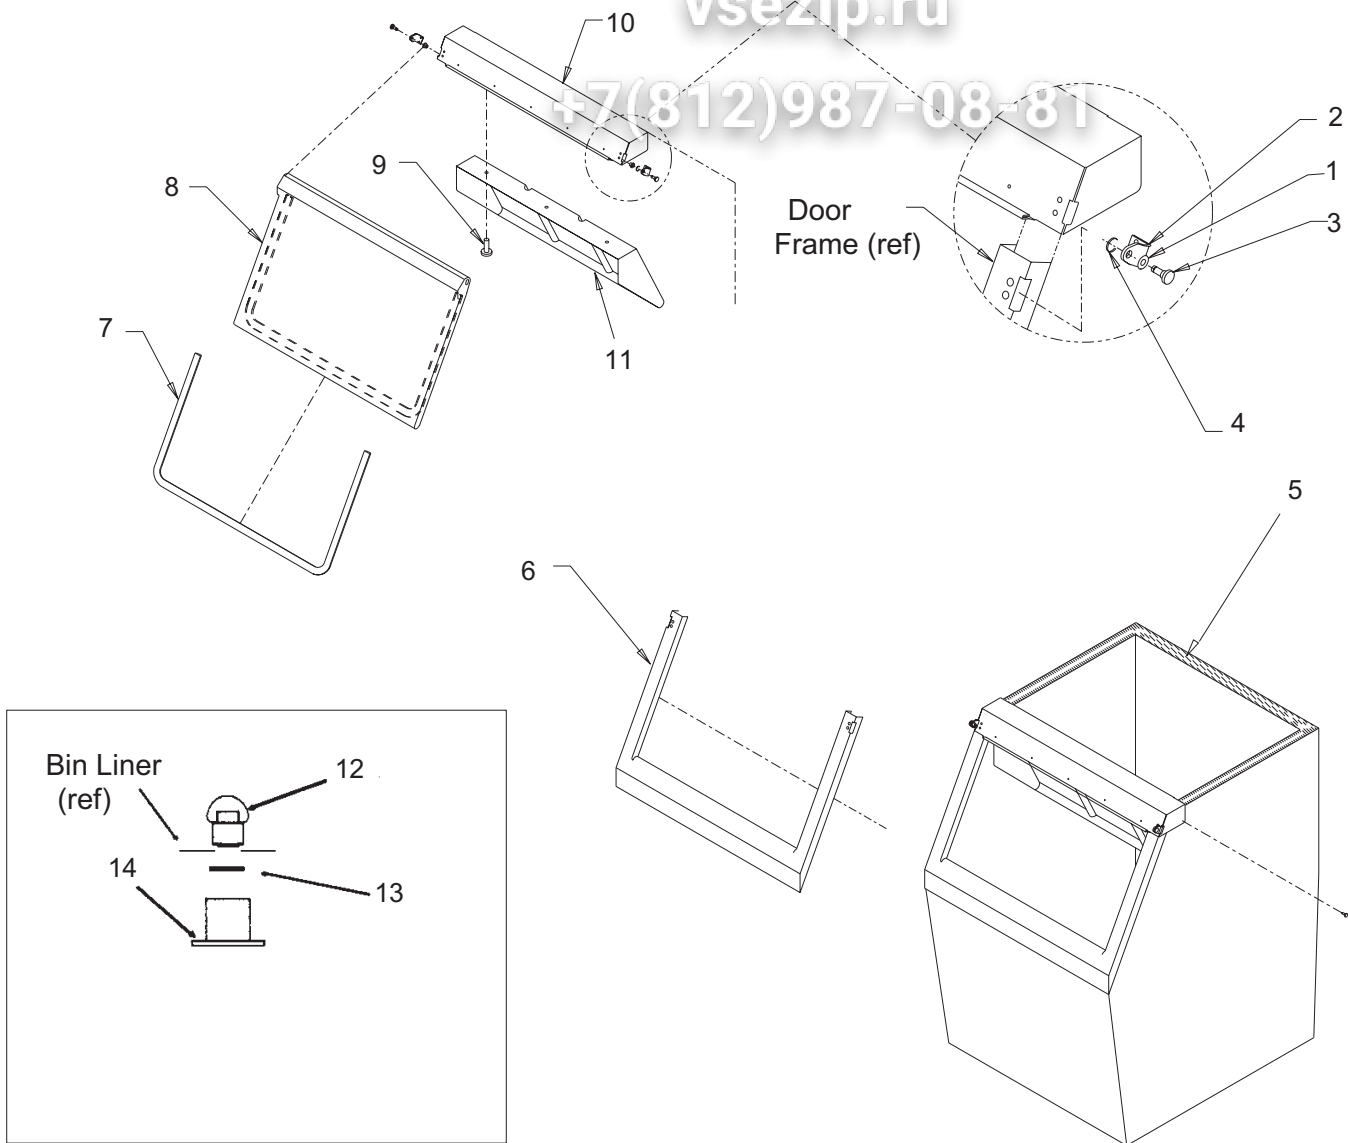

Item Number	Part Number	Description
1	02-2380-02	Spacer
2	02-3196-01	Hinge
3	02-2806-01	Shoulder screw
4	03-1539-09	E-ring
5	19-0503-04	Gasket 9 ft. *
6	02-3274-02	Door frame (grey)
7	13-0909-01	Door gasket - 58" *
8	A36481-022	Door, grey, includes #7.
9	03-0727-11	Thumb screw
10	A35637-001	Canopy
11	A37310-001	Baffle
12	02-2809-02	Drain top
13	13-0617-09	O-ring
14	02-3108-01	Drain bottom

Not shown

03-1404-07	Screw for drain bottom
05-0586-01	Drain elbow
02-0540-00	Scoop
KLP2E	Enamel leg kit

* Order gasket by the foot.

Vring Diagram, E-F Se


vsezip.ru

+7(812)987-08-81

17-2814-01

USE COPPER CONDUCTORS ONLY

- ▲ DASHED LINES INDICATE FIELD WIRING WHICH MUST BE
 INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL
 CODE AND ALL STATE AND LOCAL CODES
 ▲ WIRE COLOR FOR 208-230/60/1 UNITS: BLACK
 WIRE COLOR FOR 230/50/1 UNITS: BLUE
 ▲ WIRE COLOR FOR 208-230/60/1 UNITS: BLACK W/ WHITE STRIPE
 WIRE COLOR FOR 230/50/1 UNITS: BROWN

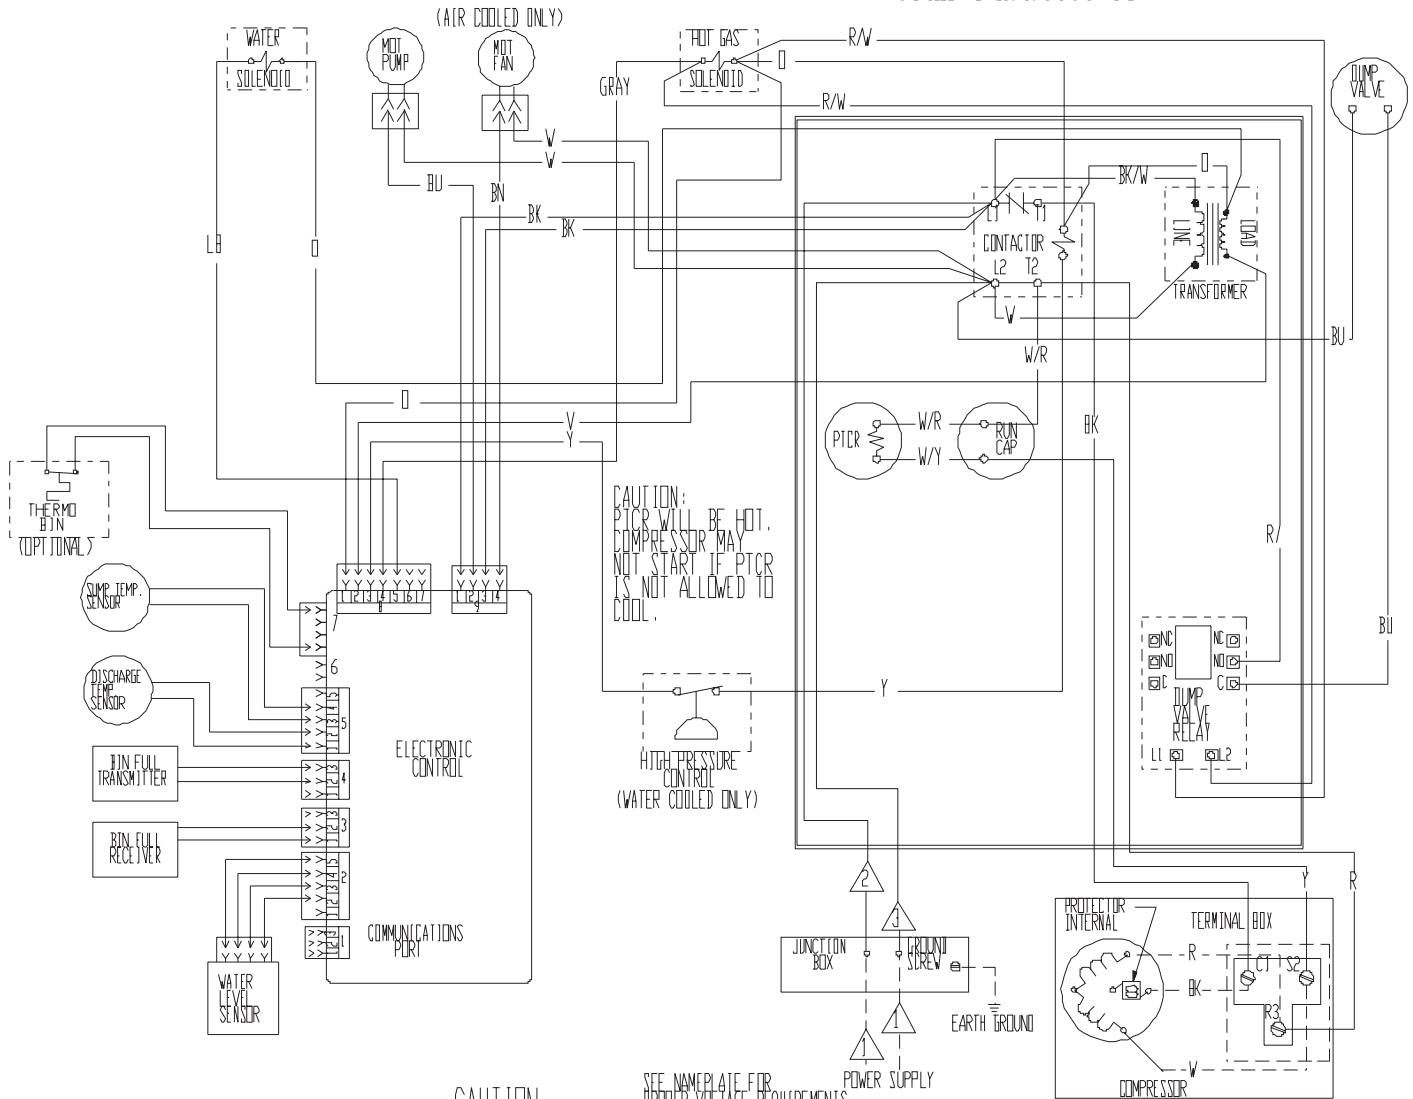


THIS UNIT MUST
BE GROUNDED.

CAUTION: SEE NEW PLANT FOR POWER SUPPLY
PROPER VOLTAGE REQUIREMENTS
AND MAXIMUM CUSE SIZE
MORE THAN ONE DISCONNECT MEANS MAY BE
REQUIRED TO DISCONNECT ALL POWER TO THIS UNIT.

CME1056 Service Parts

Single Phase Schematic Diagram, D-1 Series

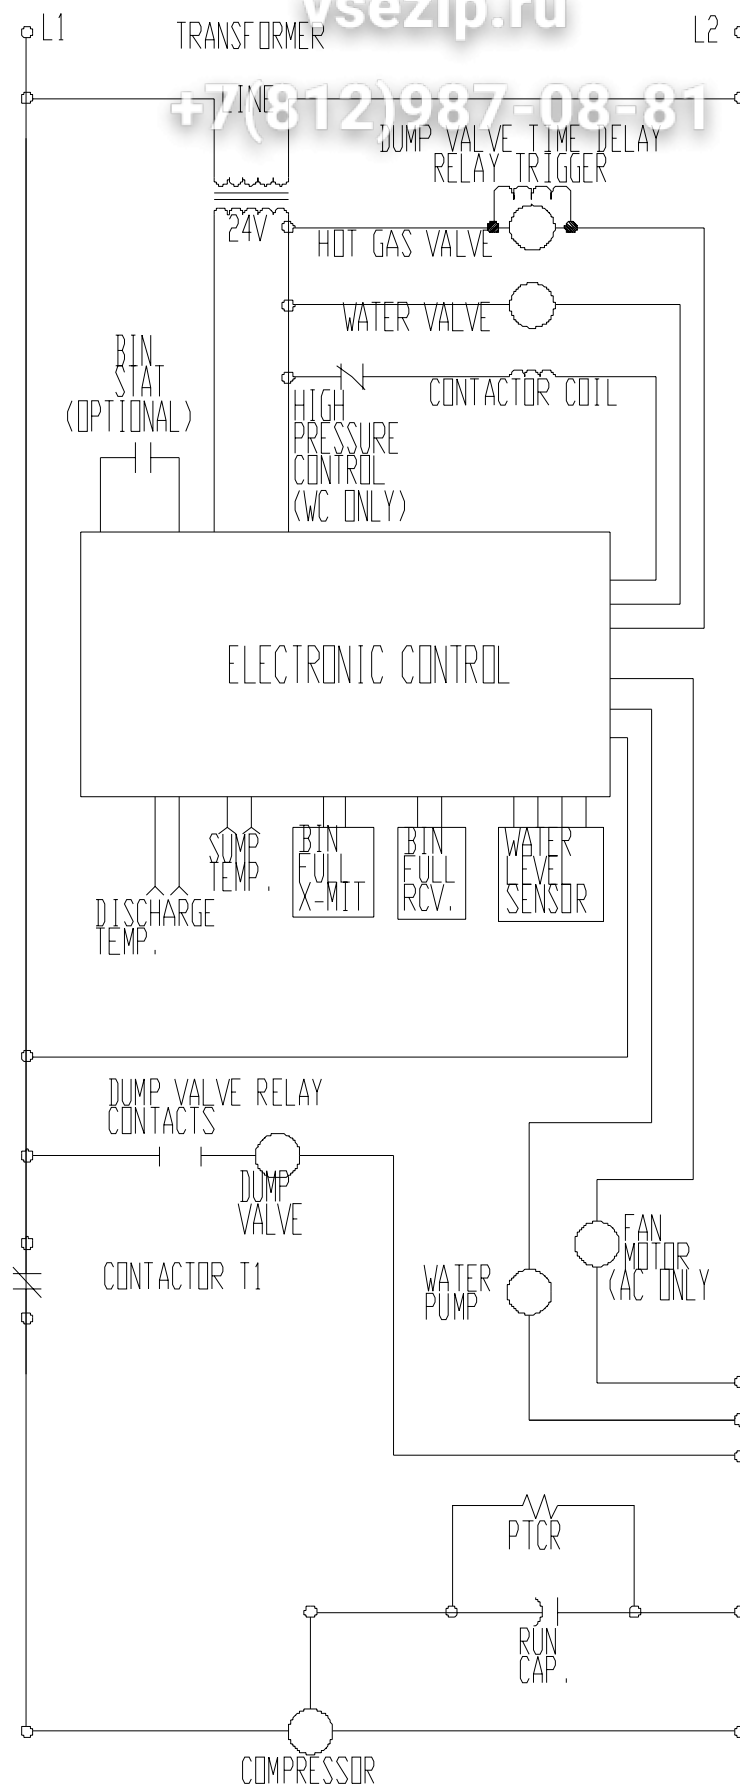

CME1056 Service Parts

Three Phase Wiring Diagram, D-Series


vsezip.ru

+7(812)987-08-81

17-2800-01

USE COPPER CONDUCTORS ONLY

△ DASHED LINES INDICATE FIELD WIRING WHICH MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL STATE AND LOCAL CODES.

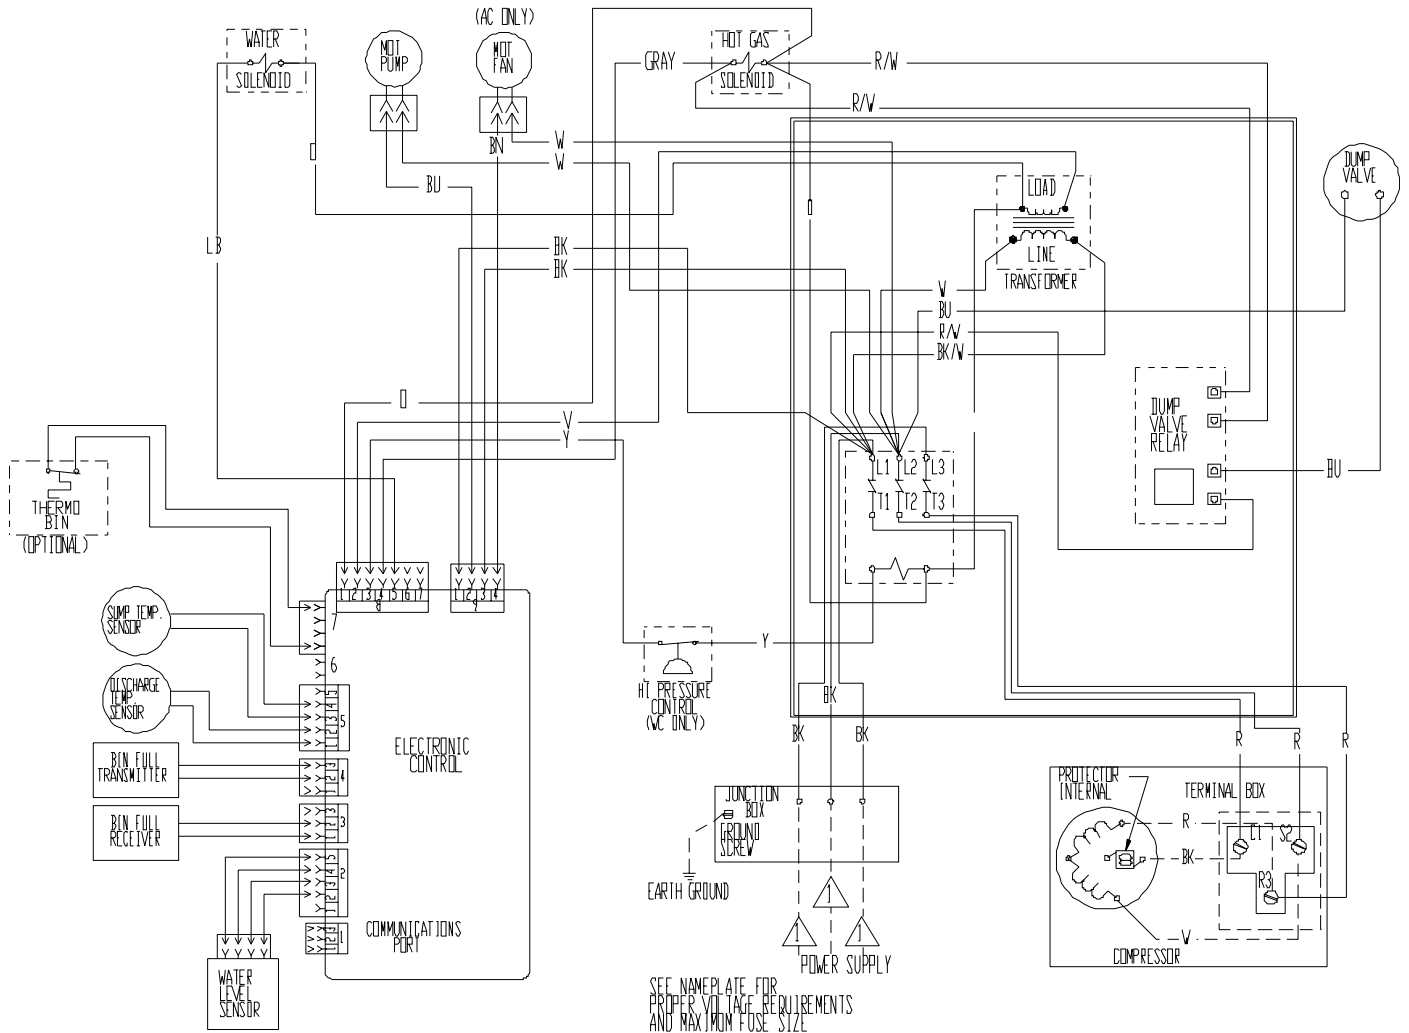

THIS UNIT MUST BE GROUNDED.

CAUTION: MORE THAN ONE DISCONNECT MEANS MAY BE REQUIRED TO DISCONNECT ALL POWER TO THIS UNIT.

CME1056 Service Parts

Single Phase Wiring Diagram, A Series

vsezip.ru


+7(812)987-08-81

17-2584-01

USE COPPER CONDUCTORS ONLY

⚠ DASHED LINES INDICATE FIELD WIRING WHICH MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL STATE AND LOCAL CODES.

⚠ WIRE COLOR FOR 208-230/60/1 UNITS: BLACK
WIRE COLOR FOR 230/50/1 UNITS : BROWN

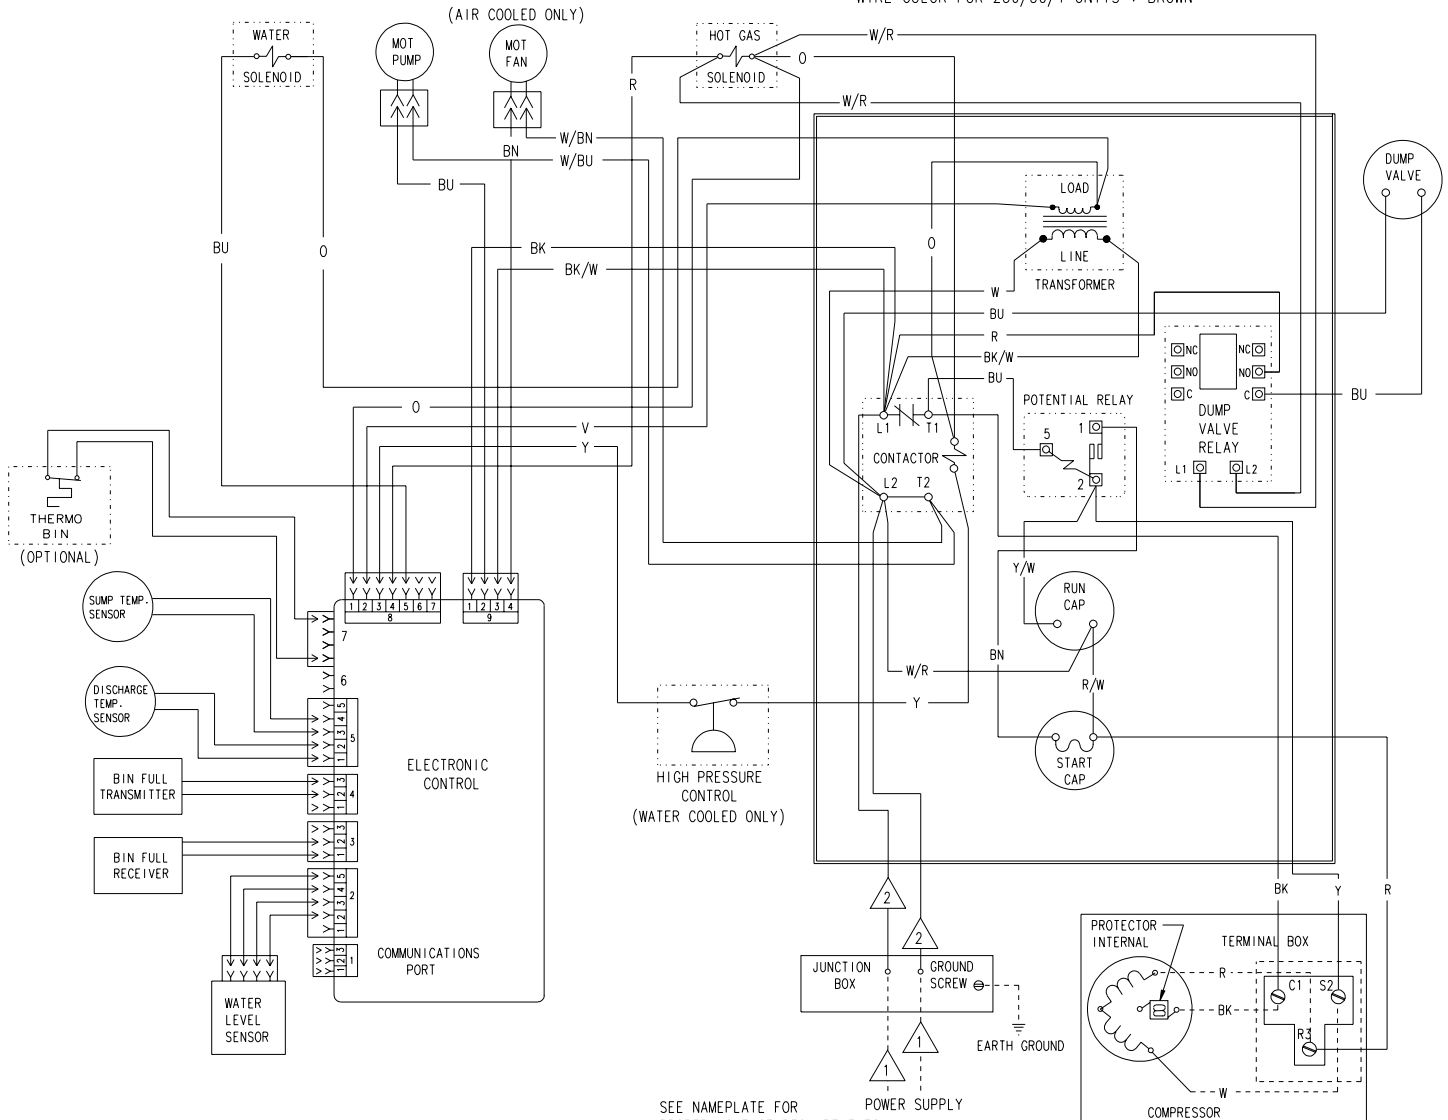


THIS UNIT MUST
BE GROUNDED.

CAUTION:
MORE THAN ONE DISCONNECT MEANS MAY BE
REQUIRED TO DISCONNECT ALL POWER TO THIS UNIT.

SEE NAMEPLATE FOR
PROPER VOLTAGE REQUIREMENTS
AND MAXIMUM FUSE SIZE

CME1056 Service Parts
Single Phase Schematic Diagram, A Series

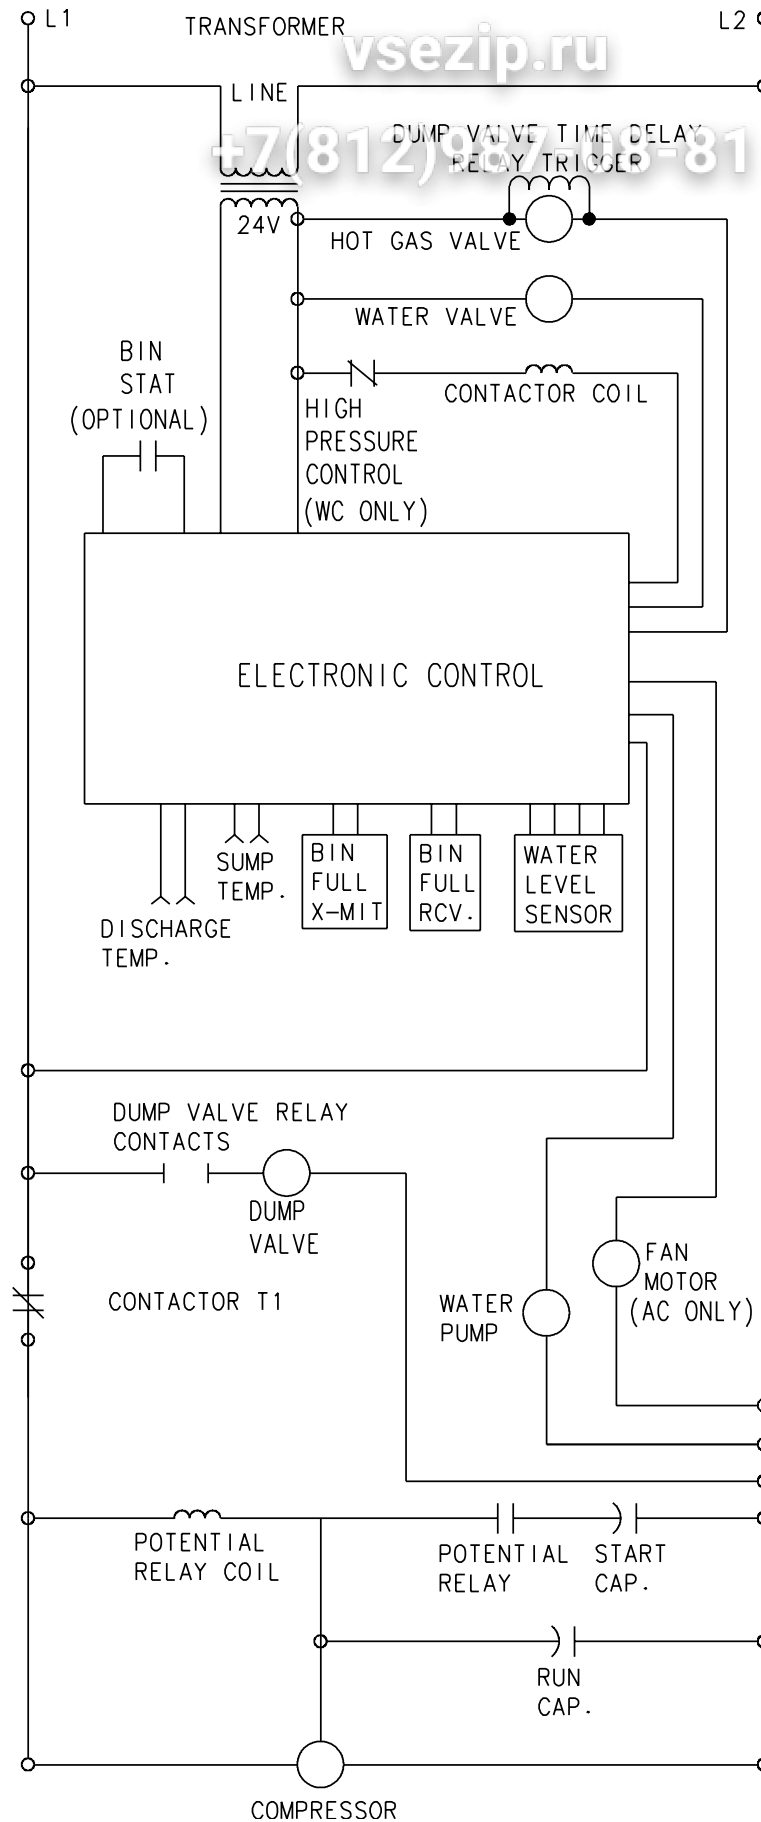

CME1056 Service Parts

Three Phase Wiring Diagram, A Series


vsezip.ru

+7(812)987-08-81

17-2586-03

USE COPPER CONDUCTORS ONLY

⚠ DASHED LINES INDICATE FIELD WIRING WHICH MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL STATE AND LOCAL CODES.

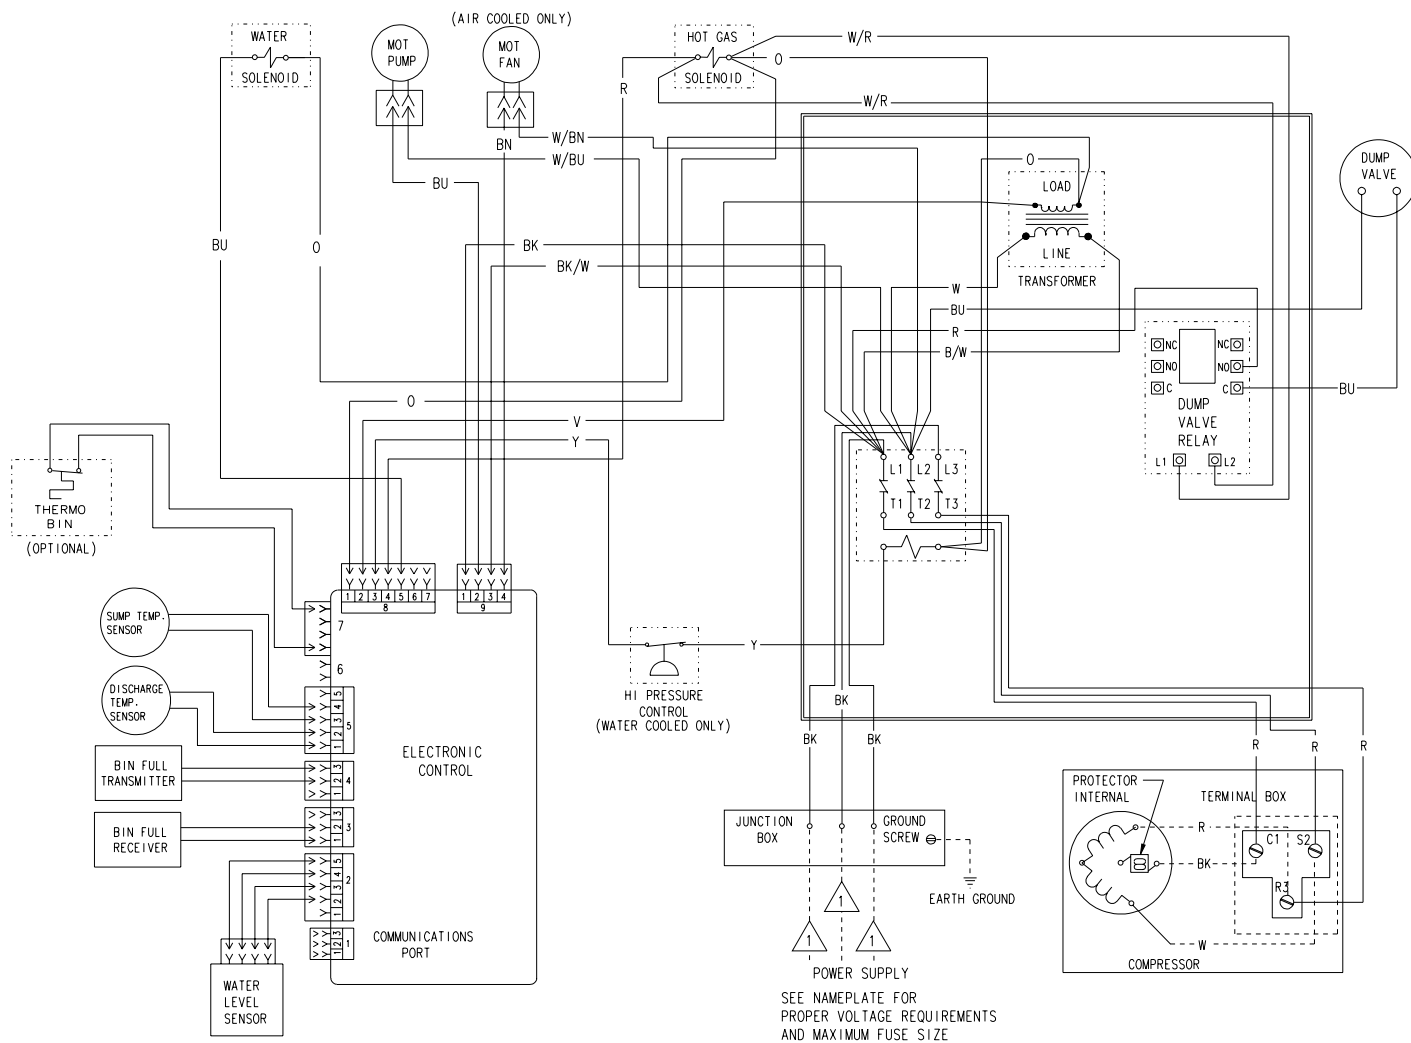

CAUTION:

THIS UNIT MUST
BE GROUNDED.

MORE THAN ONE DISCONNECT MEANS MAY BE
REQUIRED TO DISCONNECT ALL POWER TO THIS UNIT.

CME1056 Service Parts

Three Phase Schematic Diagram

