

\$1

52

②

1

3

13

12

11

10

Q

8

4

5

53


⑥

7


54

TR22/23/24 GB03 04

Model	All								
Table	SPTR222324		Page	1	Hopper exploded view				
Pos.	Spare Part	Alias Code	Repl. by	S	Info	Kit	Techn. Bulletin	Description	Notes
0001	000000	18272							
0002	OKJ599	18153		S	A			BUSHING; 5 PCS	
0003	000000	4259							
0004	000000								
0005	OKL161	18662						CAP NUT ; 10 PCS /M8	
0006	OD0522	21592				+		SCREW; 10 PCS	
0007	OKI586	3398		S	A	+		MAGNET	
0008	033596	4258		S	A			PIN	
0009	OKI095	4257		S	A			LOCKING LEVER	
0010	OKI788	4267						COVER	
0011	033638	6099		S	A			HANDLE	
0012	000000								
0013	OKQ480	21953						SCREW; 10 PCS	
00S1	OKI993	6434		S	A			ALUMINUM LEVER + CAM; TRS	
00S2	OU0446	8047		S	A			PLASTIC CAM	
00S3	OKQ540	20702		S	A			AXIS	
00S4	OKL205	4990		S	A			HOPPER	

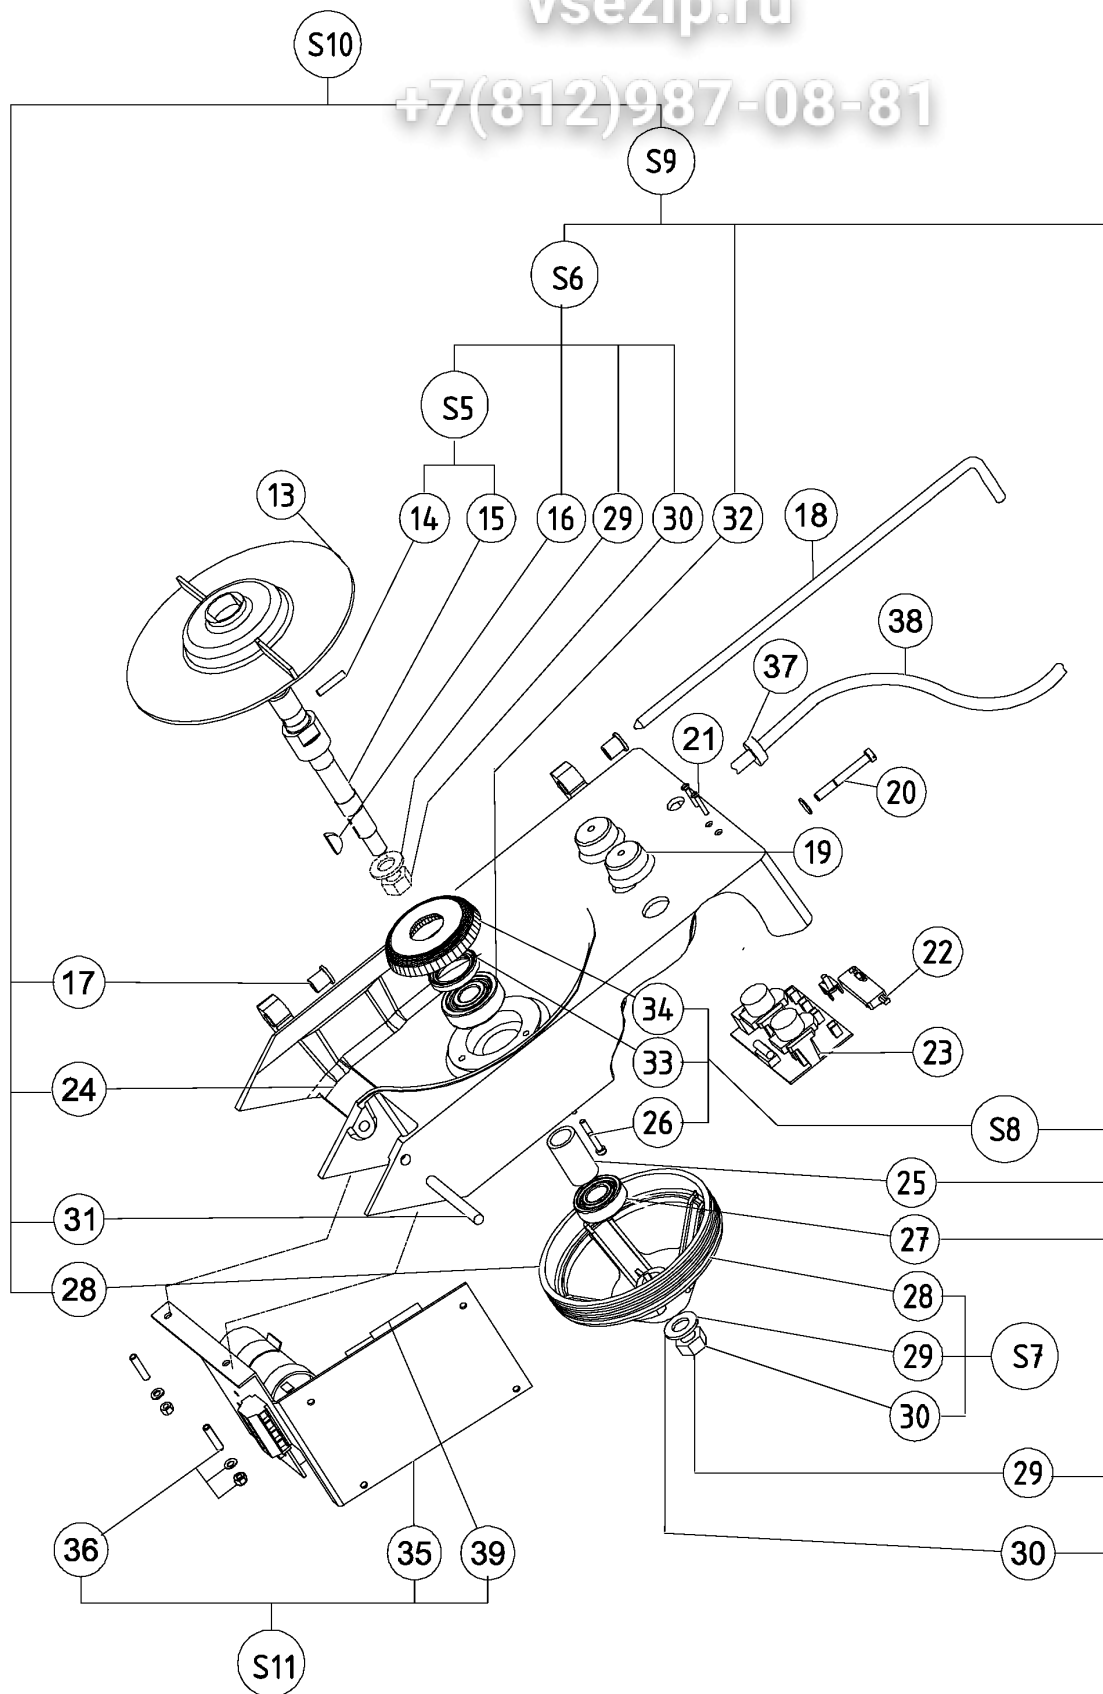


Model	All									
Table	SPTR222324		Page	2	Body exploded view					
Pos.	Spare Part	Alias Code	Repl. by	S	Info	Kit	Techn. Bulletin	Description	Notes	
0013	OKJ002	4277		S				EJECTOR DISK		
0014	OKJ001	18689	0D7860	S	A			DOV FILL; 5X24; INOX; 10 PCS		
0015	000000									
0016	OKQ556	18684						KEY; 10 PCS		
0017	OKJ599	18153		S	A			BUSHING; 5 PCS		
0018	0D3588	30059		S				HOPPER LID PIVOT; TRS		
0019	OKR665	24046	0D7662					PLASTIC CAP		
0020	0D0511	21546						SCREW; 10 PCS		
0021	0D3416	29131						SCREW F M3X20 STLESS STL SET X10 TRS		
0022	0D2946	28058		S				COMPLETE PROXIMITY DETECTOR CRUDI		
0023	OKJ586	23393		S				CONTROL BOARD; WITH PUSH-BUTTONS		
0024	000000									
0025	OKI789	4264		S				SPACER		
0026	0U0655	21572						SCREWCAP LEAD; 3 PCS		
0027	OKJ007	3041		S	A			BALL BEARING; 6203 2 RS		
0028	000000									
0029	0D0545	21690						SCREW; 10 PCS		
0030	0D0588	21806						NUT; 10 PCS		
0031	033596	4258		S	A			PIN		
0032	OKI590	3047		S				BALL BEARING; 6303 2RS1		
0033	OKI998	18125		S	A			RING; 28X40X7MM; FOR TRS; 5 PCS		
0034	000000									
0035	000000									
0036	0D3415	29130			D			SCREW SHC 5X30 STLESS STL SET X10		
0037	OKQ491	21854						WASHER; 10 PCS		
0038	0D0579	21797						NUT; 10 PCS		
0039	0D5420							POWER BOARD; MO EQ TRS		
0039	OKJ778	23395	0D7962		A			POWER BOARD; 3-PHASE		
00S5	0D0117	11171		S	A			TRS SHAFT + PIN		
00S6	OKJ000	4291		S				DRIVING SHAFT; TRS		
00S7	033105	4266		S				PULLEY		
00S8	OKI999	5993		S	A			FLANGE + SCREW; TRS		
00S9	OKQ361	4290		S	A			SHAFT ASSEMBLY; TRS		
0S10	0U0356	4294						BODY		
0S11	0D0050	23801			D			THREE PHASE ELECTRICAL EQUIPMENT		
0S11	0D5421							WIRING REPLACEMENT KIT		

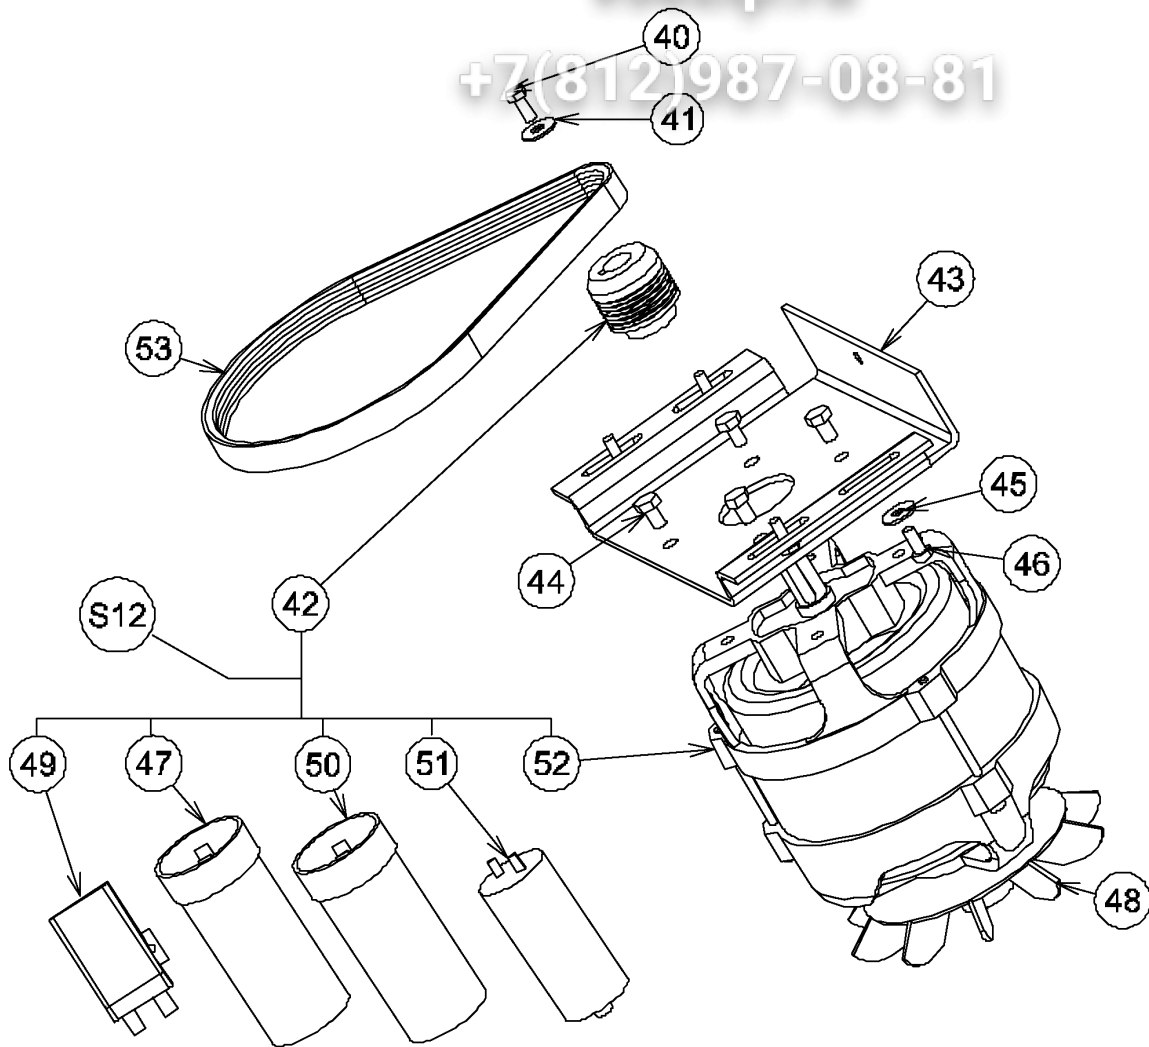


Model	All									
Table	SPTR222324		Page	3		Motor exploded view				
Pos.	Spare Part	Alias Code	Repl. by	S	Info	Kit	Techn. Bulletin	Description	Notes	
0040	000000									
0041	000000									
0042	0D3191	28567						POULIE MOTRICE 750W TRS		
0042	0KQ366	4268						PULLEY		
0043	0KQ365	4270						MOTOR BLOCK		
0044	0D0594	21817						SCREW; 10 PCS		
0045	0D0625	21861						WASHER; 10 PCS		
0046	0D0506	21529			D			SCREW; 10 PCS		
0047	0D1539	9291						PERMANENT CAPACITOR 50MF 250V		
0048	0D1442	7950	0D3570		D			TRS/TR21NM/T10 FAN 1PC347		
0049	000000	23067								
0049	000000	28983								
0050	0D1465	8299						CAPACITOR; 30MF 450V		
0050	0D1539	9291						PERMANENT CAPACITOR 50MF 250V		
0051	0D1498	8648						K55 CAPACITOR 480MF 150V		
0051	0U0472	9298	0D6731					CAPACITOR (START) 160MF		
0052	0D3186	28541						MOT. 1 115 60 .37KW ASSY TRS		
0052	0D3187	28542						MOTOR 1 115 60 0,75KW ASSY TRS		
0052	0D3571	30042						MOTOR 1 115 60 .50KW ASSY TRS		
0053	000000	3020								
0S12	0D0887	23800						TRS MOTOR ASSY 3 230/400 50; 3 PHASE		
0S12	0D1215	4551						TR22 MOTOR 1 115 60		
0S12	0D3572	30043						MOTOR 1 115 60 500W ASSY TR22		

+7(812)987-08-81

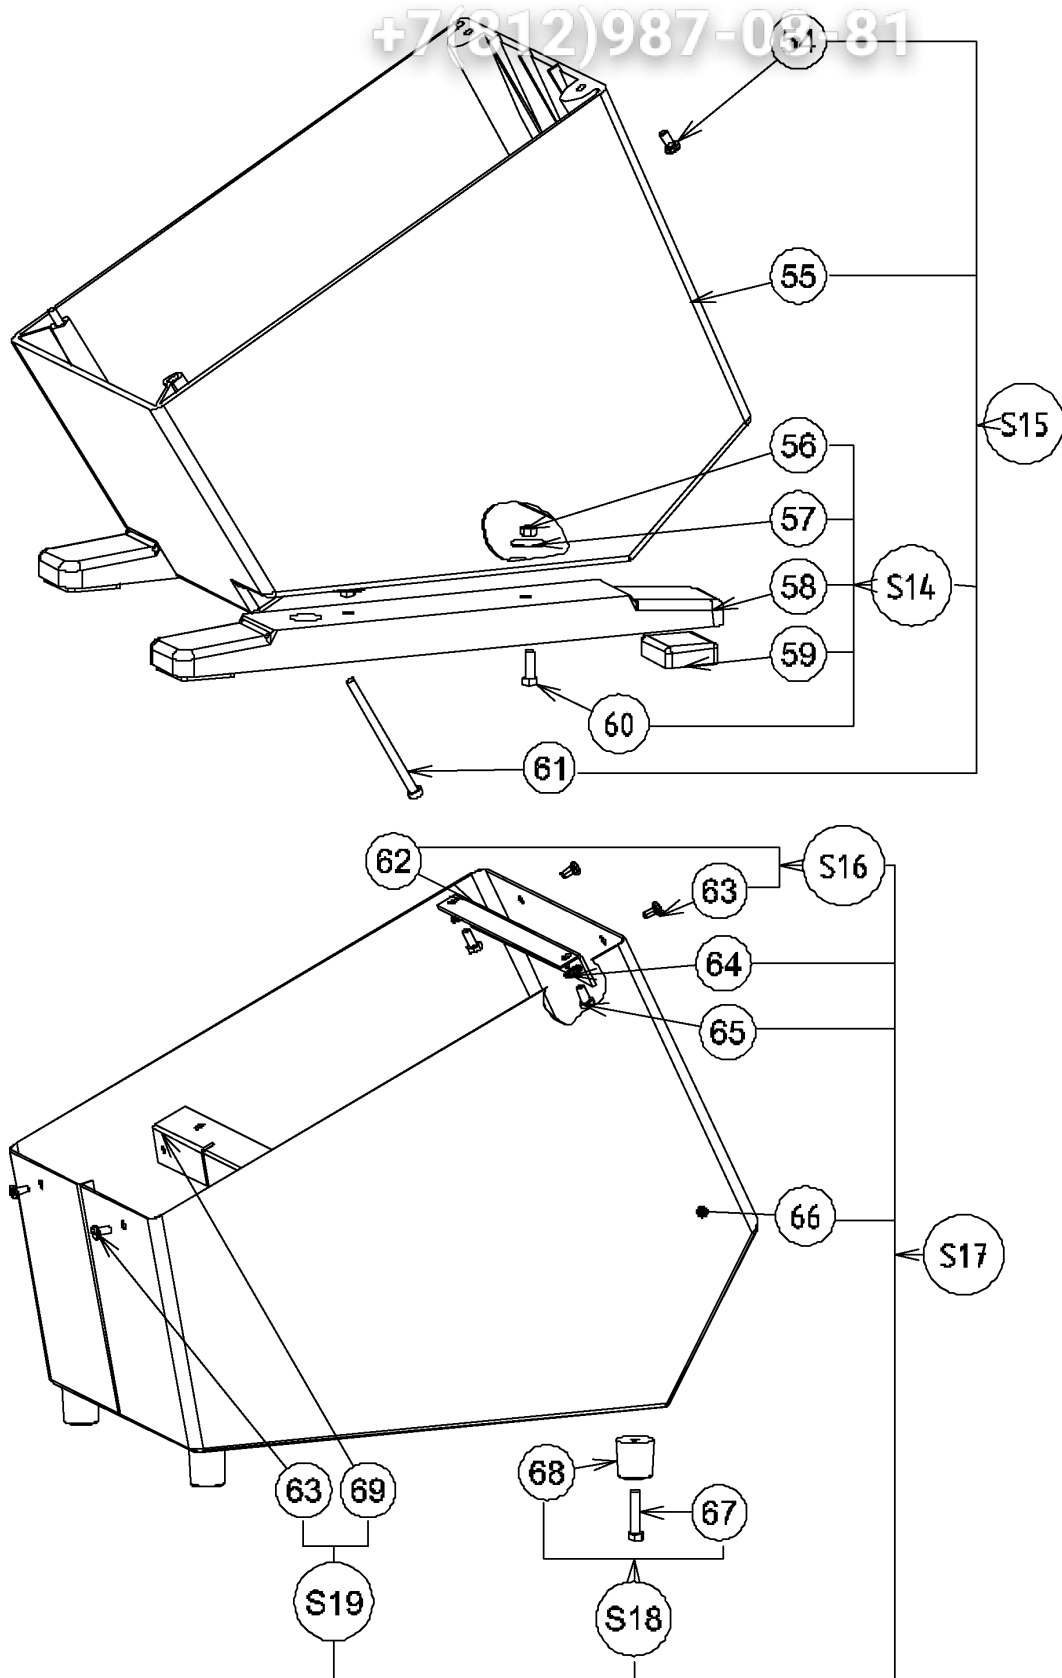

Model	All									
Table	SPTR222324		Page	4	Stainless steel casing /Casing exploded view					
Pos.	Spare Part	Alias Code	Repl. by	S	Info	Kit	Techn. Bulletin	Description	Notes	
0054	0D0523	21593						SCREW; 10 PCS		
0055	000000									
0056	0D0500	21511			D			M5 NUT		
0057	0D0501	21513						WASHER; 10 PCS		
0058	000000									
0059	0KQ363	4280		S				FOOT; 40X35X20 MM		
0060	0D0607	21838						SCREW; 10 PCS		
0061	0D0405	18695						TR21 TC 5X80 AC.CD SCREW X10		
0062	000000									
0063	0KQ527	21506						SCREW; 10 PCS		
0064	0KQ491	21854						WASHER; 10 PCS		
0065	0D0506	21529			D			SCREW; 10 PCS		
0066	000000									
0067	0D3216	28681						SCREW HM5X25 STLESS STL SET X10		
0068	000000									
0069	000000									
0S14	032629	2749		S				LEG FOOT		
0S15	032539	4289	0D5039		D			HOUSING		
0S16	0D0813	23242						REAR SQUARE		
0S17	0U0488	9827						CASING (S/STEEL)		
0S18	0D3417	29132						FOOT ASSY TRS SET X4		
0S19	0D3418	29133						FRONT BRACKET CASING STLESS STL TRS		

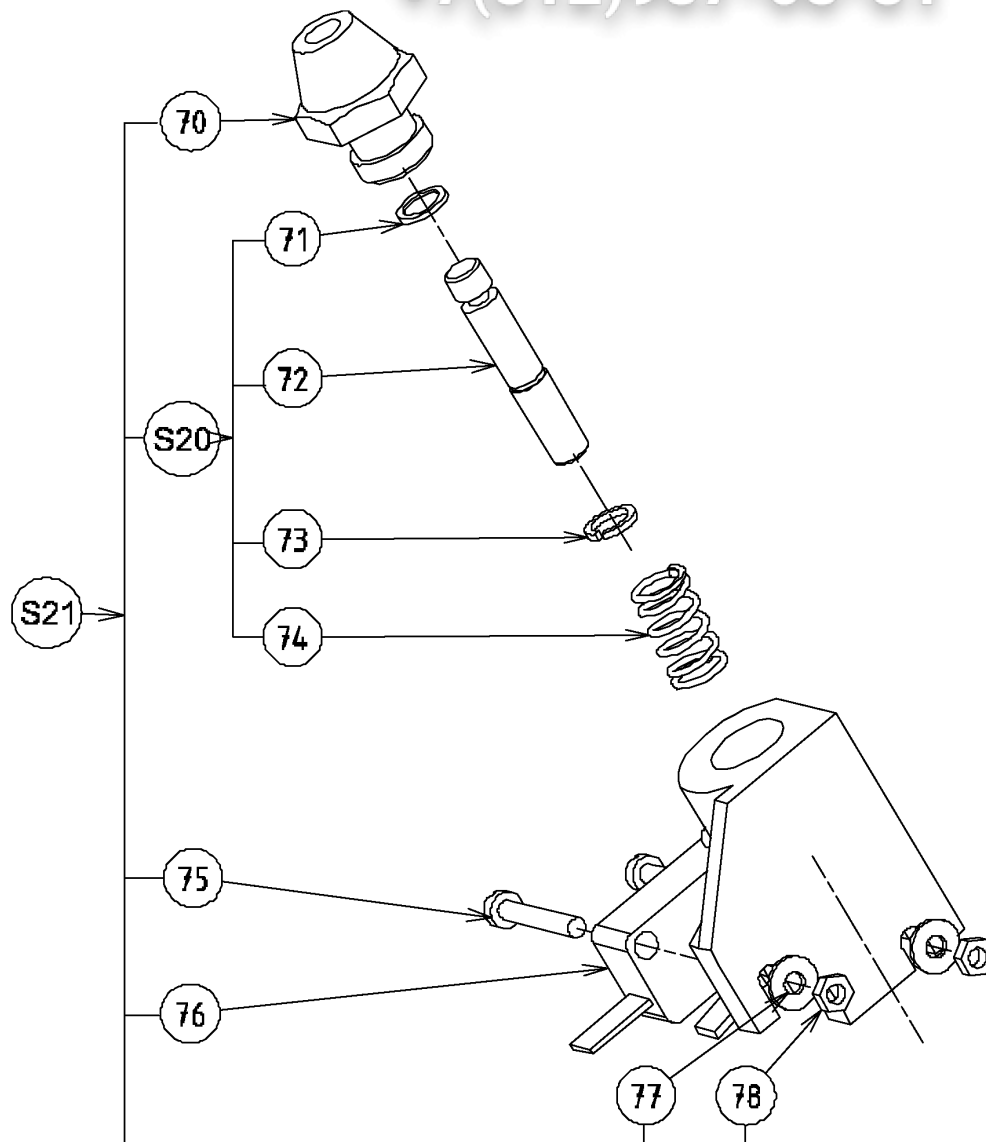

Зип Общепит

vszip.ru

+7(812)987-08-81

Model		All									
Table		SPTR222324		Page		5		Lever safety device - Exploded view			
Pos.	Spare Part	Alias Code	Repl. by	S	Info	Kit	Techn. Bulletin	Description	Notes		
0070	OKQ362	4281						BUSH			
0071	OKQ521	21526			A			SEAL; 10 PCS			
0072	000000										
0073	OKQ485	21921			D			CIRCLIP; 10 PCS			
0074	OD3621	4275						RESSORT TRS			
0075	OD0608	21839						SCREW; 10 PCS			
0076	OKQ309	5190			D			SAFETY SWITCH			
0077	033986	21588				+		SCREW; 10 PCS			
0078	033987	21796				+		SCREW; 10 PCS			
0S20	OKQ220	7605		S				PLUNGER			
0S21	OD3414	29129						LEVER SAFETY BOX+ MICROSWITCH ASSY TRS			