


V.Stucture and name of the part

Зип Ощепит

vsezip.ru

+7(812)987-08-81

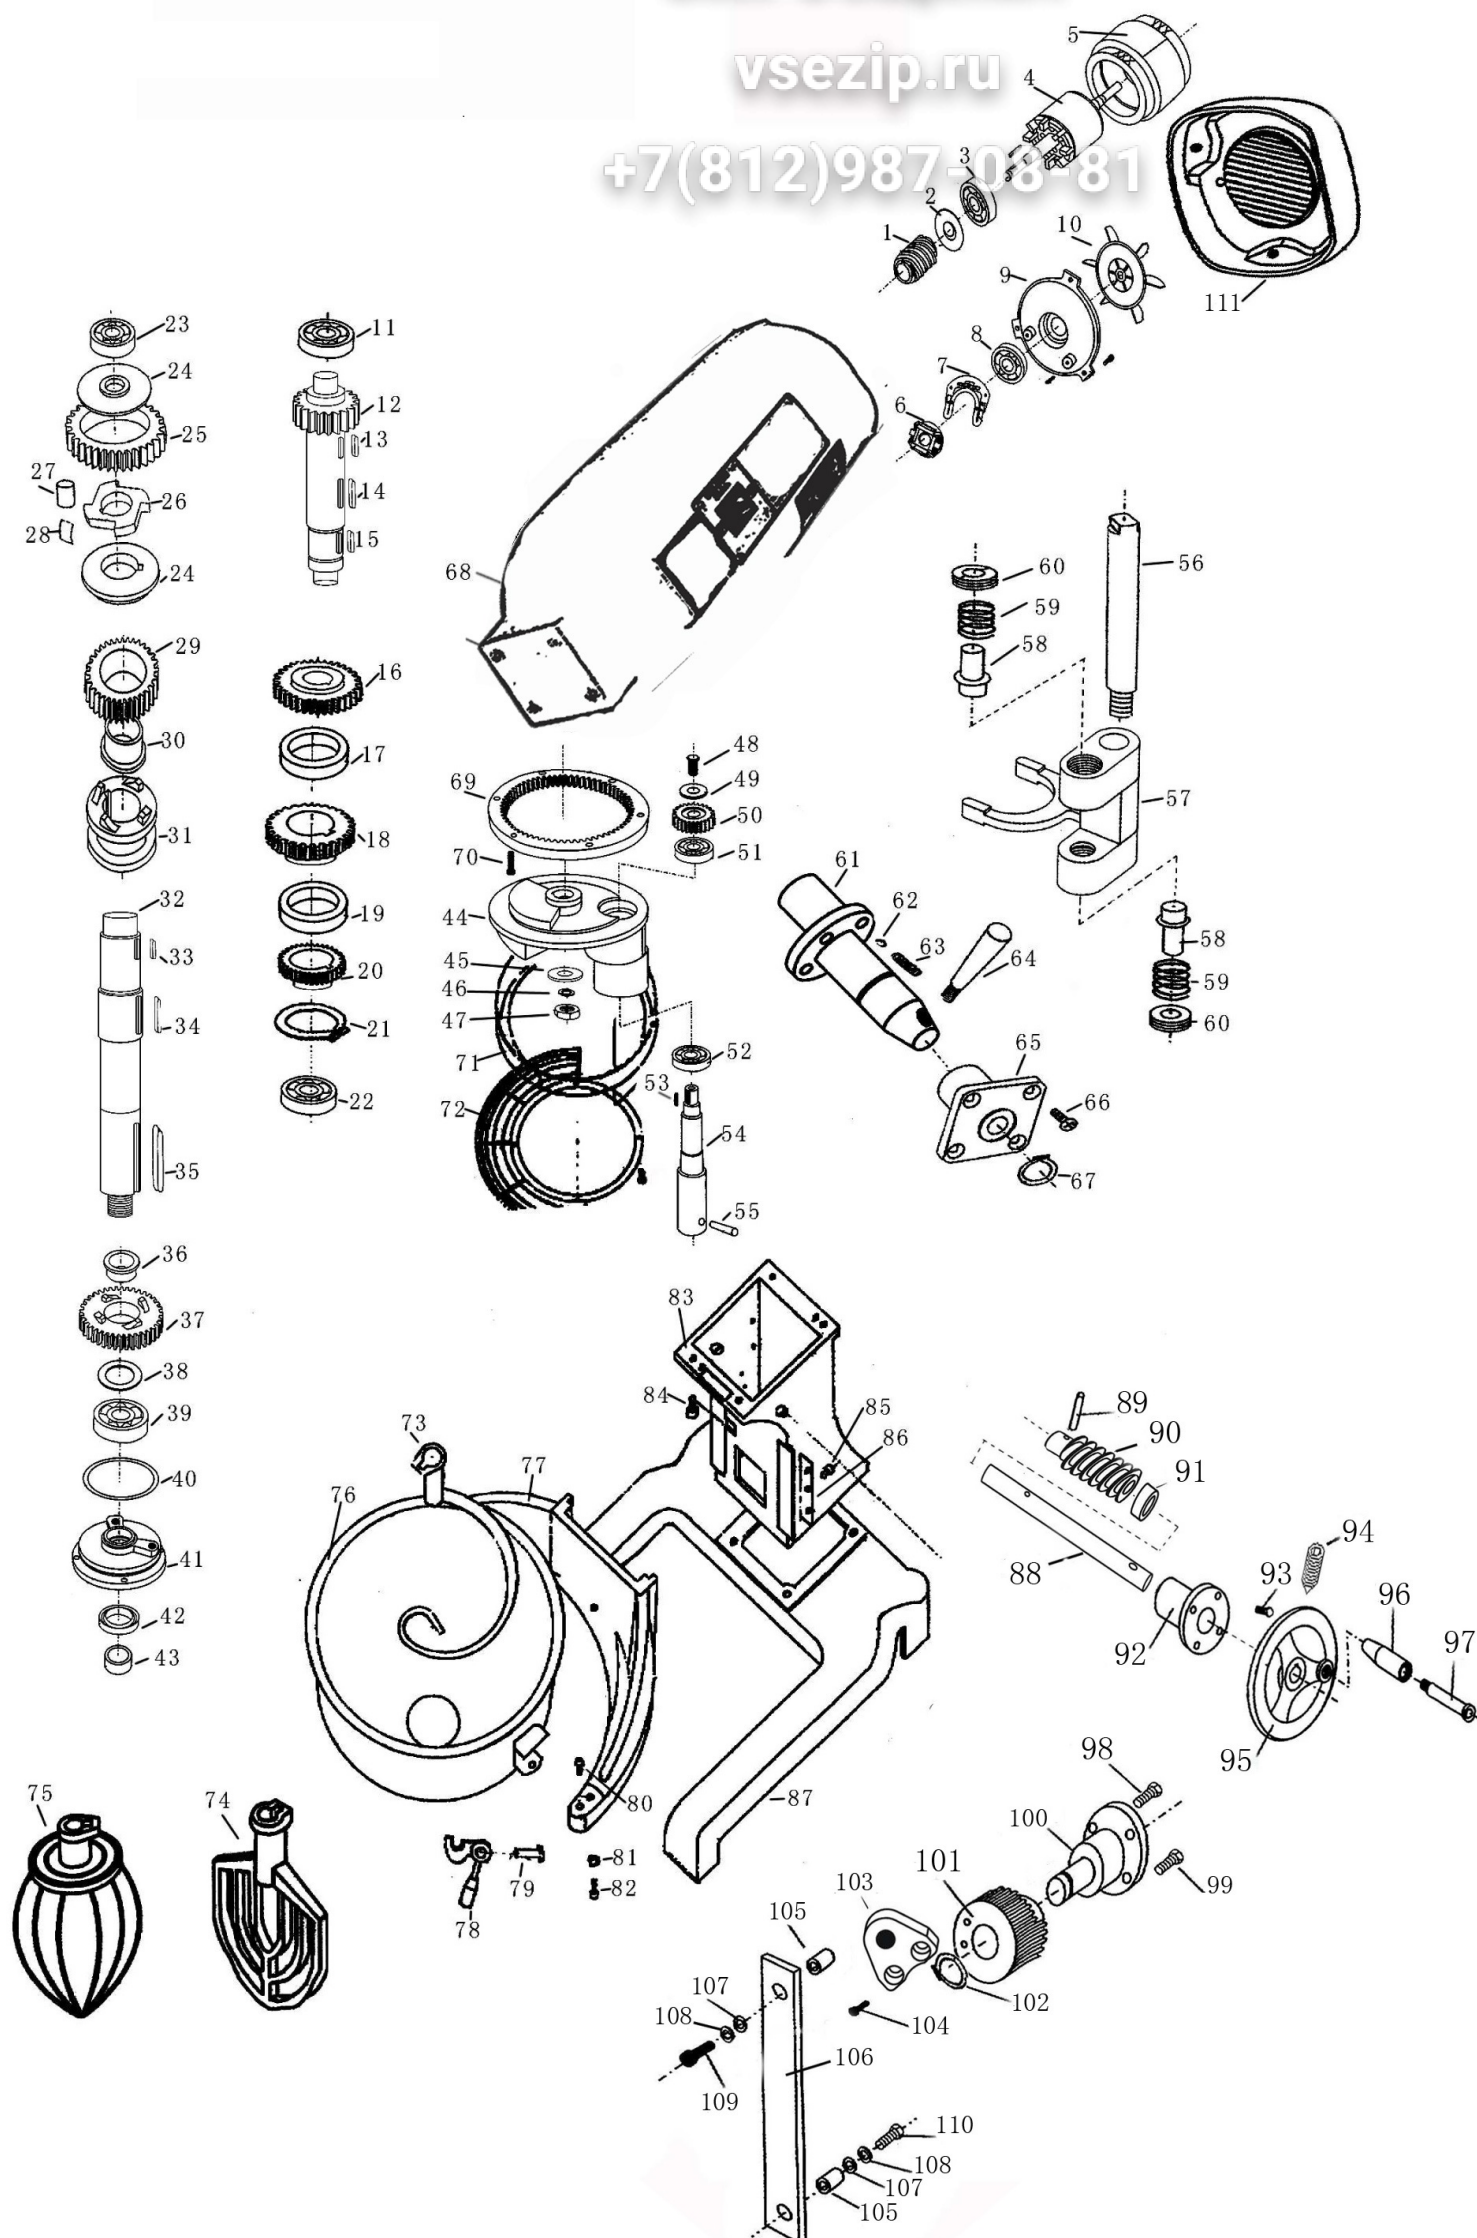

B10C SPARE PART LIST							
S/N	NAME	SPECIFICATION	QUANTITY	S/N	NAME	SPECIFICATION	QUANTITY
1	Motor Worm	B10B-01-04	1	57	shift fork	B10K-03-05	1
2	Oil seal	SG17×35×10	1	58	Top pin for shift fork	B10B-03-06	2
3	bearing	203	1	59	spring for shift fork	B20F-03-11	2
4	Motor rotor	B10K-01-02	1	60	nut for shift fork	B20F-03-12	2
5	Motor stator	B10K-01-01	1	61	1/2" high speed mandrel	B10B-03-02	1
6	Centrifugal switch moving piece		1	62	Steel ball	B20F-03-05	2
7	Centrifugal switch static sheet		1	63	spring for location	B20F-03-06	2
8	bearing	203	1	64	Shifting handle	B20K-03-01	1
9	motor cap	B10K-01-03	1	65	Shifting base	B10K-03-03	1
10	fan blade		1	66	Round head screws	M6×12	4
11	bearing	101	1	67	Spring for shaft	18	1
12	input shaft	B10K-01-06	1	68	body	B10K-04-01	1
13	flat key	A6×14	1	69	inner gear	B10K-01-20	1
14	flat key	A6×14	1	70	Hexagon socket head cap screws	M6×25	6
15	flat key	A6×14	1	71	protective net frame	B10K-05-01	1
16	gear on the input shaft	B10K-01-07	1	72	protective net	B10K-05-02	1
17	shaft sleeve on the input shaft	B10K-01-08	1	73	hook	B10B-01-23	1
18	worm gear	B10B-01-05	1	74	beater	B10B-01-22	1
19	washer	B10B-01-08	1	75	whip	B10B-01-21	1
20	lower gear	B10B-01-09	1	76	bowl	B10B-04-12	1
21	shaft circlip	17	1	77	bowl base	B10K-04-08	1
22	bearing	101	1	78	bowl compression handle	B20K-04-24-01/02	left and right side each one
23	bearing	203	1	79	compression handle pin	B20K-04-25	2
24	Ratchet cover	B10K-01-15	2	80	Bowl positioning pin	B20J-04-22	2
25	Outer ring	B10K-01-12	1	81	Spring washer	8	2
26	Inner star wheel	B10K-01-11	1	82	nut	M8	2
27	Roller	B10K-01-13	6	83	upright column	B10K-04-05	1
28	Roller compression spring	B10K-01-14	6	84	Hexagon socket head cap screws	M8×35	4
29	upper gear of clutch	B10B-01-12	1	85	external hexagonal screw	M6×16	6
30	gear sleeve of output shaft	B10B-01-13	1	86	Pressure plate	B10K-04-11	2
31	clutch of output shaft	B10B-01-14	1	87	base	B10K-04-07	1
32	Output shaft	B10K-01-10	1	88	Worm shaft	B10B-02-04-03	1
33	flat key	A6×12	1	89	cylindrical pin	φ4X20	1
34	flat key	A6×28	1	90	worm rod	B20F-02-04-01	1
35	flat key	C6×45	1	91	shaft sleeve	B10B-02-04-02	1
36	gear sleeve of output shaft	B10B-01-13	1	92	base of worm rod	B20F-02-05	1
37	Lower gear of clutch	B10B-01-15	1	93	countersunk head screws	M5×16	2
38	gear circlip	B10B-01-11	1	94	Hexagon socket set screw	M5×10	1
39	bearing	204	1	95	Lifting handwheel	B20F-02-03	1
40	O type of ring	125×3	1	96	Lifting handle	B20F-02-01	1
41	bearing base	B10B-04-13	1	97	Handle mandrel	B20F-02-02	1
42	oil seal	SG25×42×10	1	98	soket head cap screw	M6×12	2
43	shaft sleeve of oil seal	B10B-01-16	1	99	soket head cap screw	M6×16	1
44	transposition	B10B-01-17	1	100	Worm gear seat	B20E-02-06	1
45	flat washer	12	1	101	Worm gear	B20F-02-07	1
46	spring washer	12	1	102	shaft circlip	20	1
47	nut	M12	1	103	Extension crank	B10B-02-08	1
48	Hexagonal screws	M6×16	1	104	soket head cap screw	M6×12	2
49	enlarged flat washer	6	1	105	link rod sleeve	B20F-02-10	2
50	planetary gear	B10B-01-18	1	106	link rod	B10B-02-09	1
51	bearing	203	1	107	flat washer	10	2
52	bearing	104	1	108	spring washer	10	2
53	flat key	C5×14	1	109	hex head screw	M10×22	1
54	planetary shaft	B10K-01-19	1	110	hex head screw	M10×25	1
55	taper bolt	φ8×25	1	111	rear cover	B10B-04-15	1
56	shift fork guide	B10B-03-04	1				